

INSTALLATION INSTRUCTIONS ELITE RETRACTABLE POWER BOARD 21-24 FORD F-150, 22-24 SUPERDUTY SUPER CAB & SUPER CREW CAB (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty) Patented PART#PWBR2075 PWBR2085

21-24 FORD F-150, 22-24 SUPERDUTY (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty)


INSTALLATION INSTRUCTIONS


Mechanical PARTS LIST:

Qty	Item Description	Qty	Item Description
2	Running Boards (85in)	12	M8 Nylon Lock Nuts
1	Driver/Left Front Bracket Assembly	12	Flat Washers 8mm x 24mm x 2mm
1	Passenger/Right Front Bracket Assembly	8	M6 Carriage Bolts
1	Driver/Left Rear Bracket Assembly	12	Plastic Insulator
1	Passenger/Right Rear Bracket Assembly	8	M6 Flange Nuts
1	Electronic Materials Package	15	Zip Ties
1	Rubber Sleeve		


Electronic Materials Package PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Main Harness	1	ECU
2	Wire Taps	4	LED lights
1	LED Y-Harness (Short 280mm)	1	LED Y-Harness (Long 1200mm)

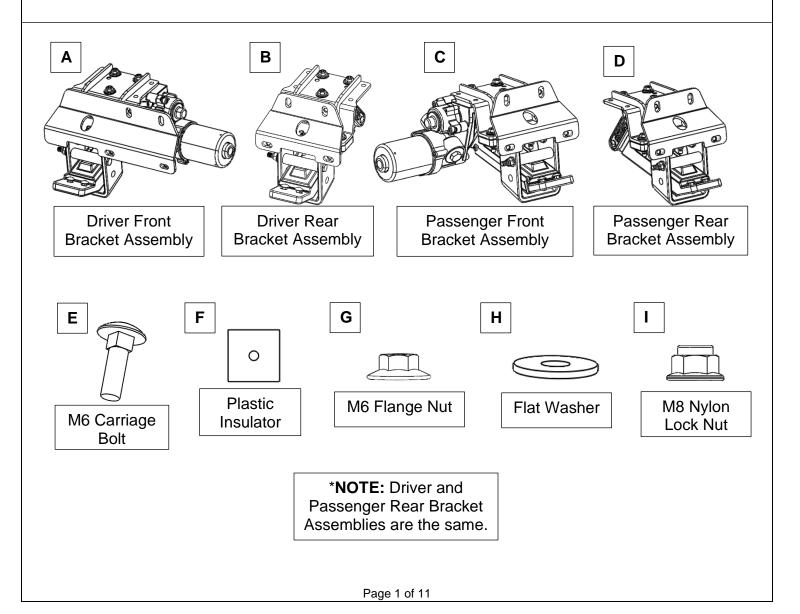


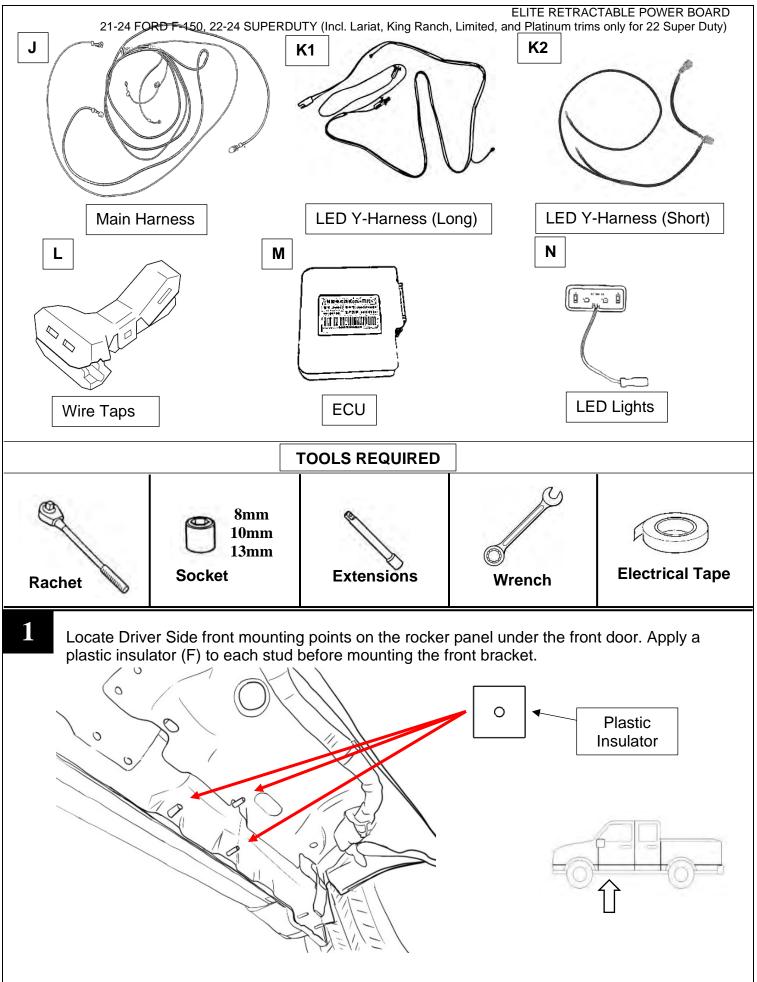

Page 2 of 11

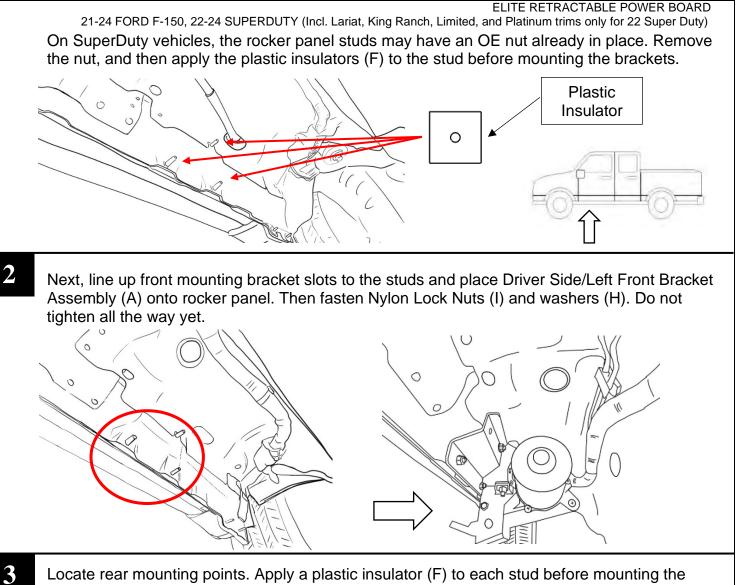

Locate rear mounting points. Apply a plastic insulator (F) to each stud before mounting the Driver Side Rear Bracket Assembly (B). Next, line up rear mounting bracket slots to the studs and place Driver Side/Left Rear Bracket Assembly (B) onto rocker panel.

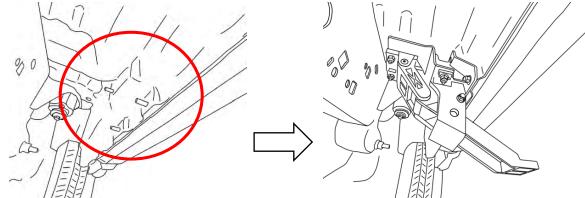


Then fasten Nylon Lock Nuts (I) and washers (H). Do not tighten all the way yet. For vehicles with e-brake cables on the Driver Side, take the rubber sleeve in the kit and slide over the brake line, just behind the bracket assembly, to protect the line from wear. Attach sleeve to line using RTV silicone sealant.

Repeat steps 1 - 3 for the Passenger Side.


4

ELITE RETRACTABLE POWER BOARD

 21-24 FORD F-150, 22-24 SUPERDUTY (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty) Start from the engine compartment by opening the front hood of the vehicle. Locate the Battery and its terminals (positive/negative). Remove the 25A fuse from the fuse box that comes with the main harness (J).



*WARNING: Keeping the fuse connected to the fuse box may result in electrical sparks and risk of shorting when working with the battery.

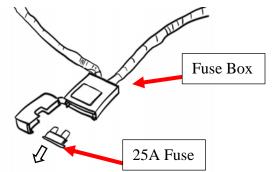


6

7


Connect the positive power lead on the main harness (J) to the positive battery terminal. Connect the negative lead to the negative battery terminal. Make sure both power leads are fully secured. Connect the ECU (M) to the main harness.


Connect the Long LED Y-Harness (K1) to the Driver-side branch of the main harness.

Connect the Short LED Y-Harness (K2) to the Passenger-side branch of the main harness.

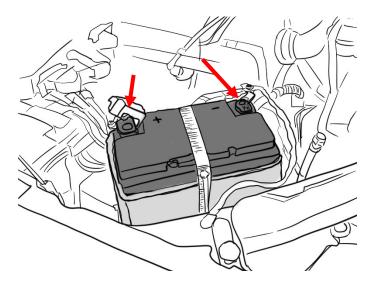

Route the main harness (J) around the battery, up along the rear of the engine compartment, and down the Driver-side wheel well. Route the shorter leg of the harness down the Passenger-side wheel well. **Be sure to avoid contact with any moving or hot engine components.** Attach and secure the main harness (J) with supplied cable ties.

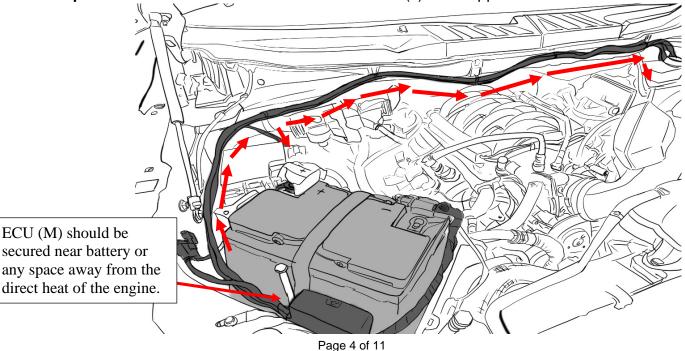

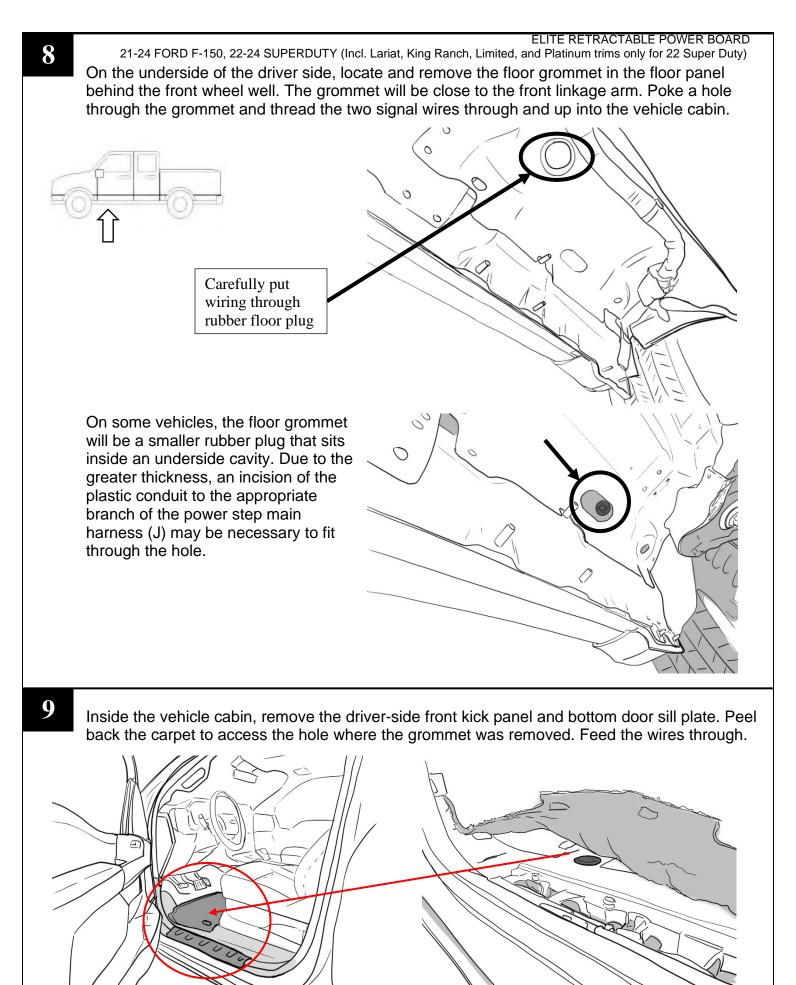


ELITE RETRACTABLE POWER BOARD

21-24 FORD F-150, 22-24 SUPERDUTY (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty) Attach the main harness (J) to one LED Y-Harness (K). Then attach the LED Y-Harness to the motor (do this for driver side first). Repeat for passenger side.





10


Locate the black BCM (body control module) under the steering wheel, behind the OBD-II Port. Slide the BCM out of the holding bracket by pushing the locking tab in the center and pulling outwards in the direction of the rail for easier access to wires.

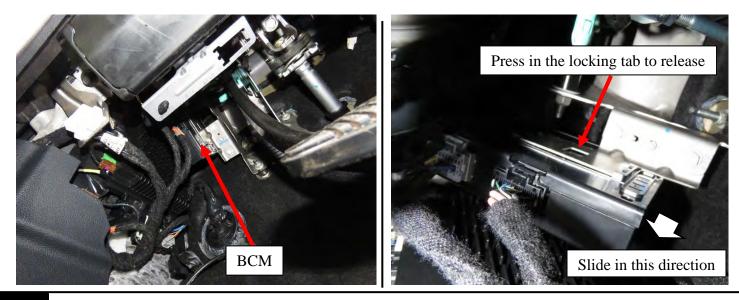


12 On the black plug of the BCM, identify the green/blue stripe and white/green stripe wires. Connect the High and Low wires from the main harness (J) using the supplied wire taps (L). After successfully connecting the wires, return the BCM back into its place and check that it is secure.

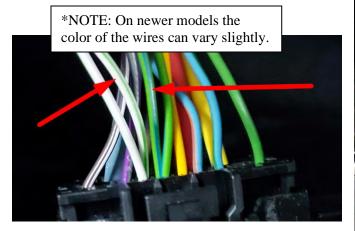

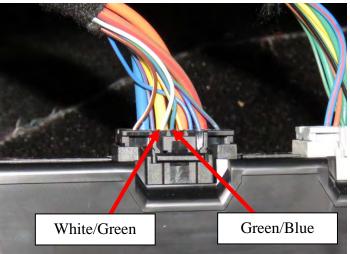


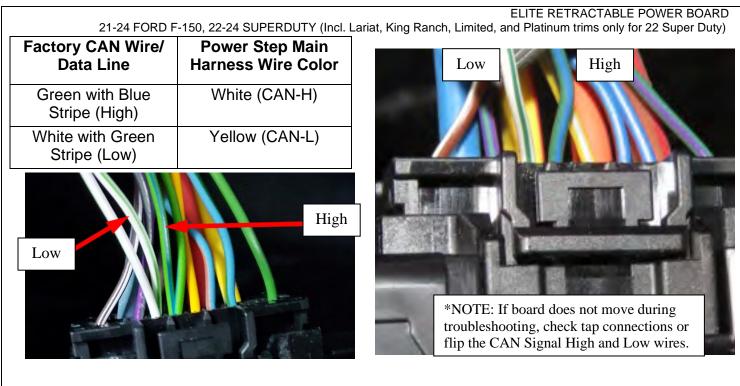

If the kit comes supplied with wire taps called "shark taps", follow the guide below to tap the wire using the "shark tap":

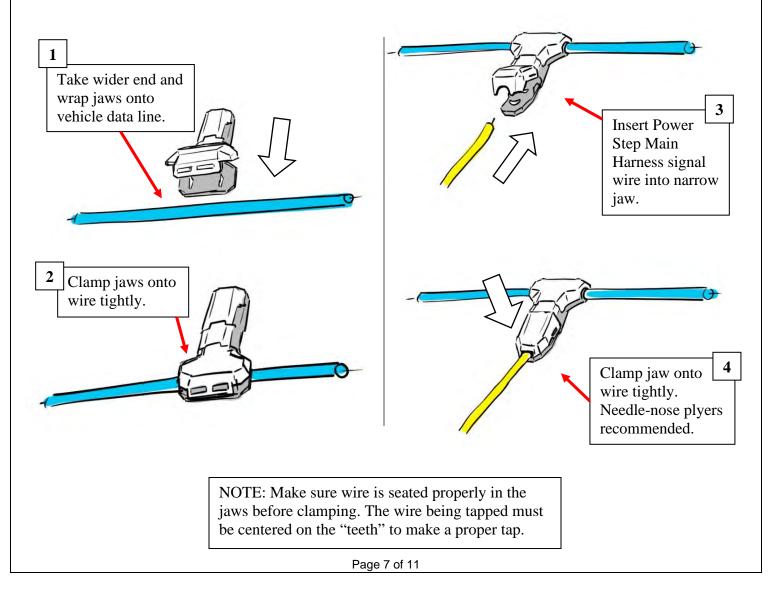


ELITE RETRACTABLE POWER BOARD 21-24 FORD F-150, 22-24 SUPERDUTY (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty) Plug in LED lights (N) into LED Y-Harness (K) and attach them to the bottom of the rocker panel. Use provided 3M double sided adhesive tape on back of LED light (N). Replace Fuse into Fuse Box.

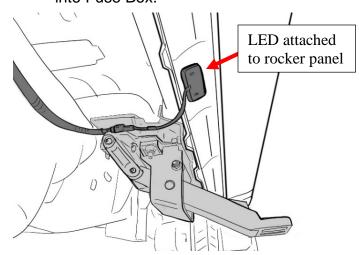

Check to make sure the harnesses on the Driver Side/Left Front Bracket Assembly (A) and Passenger Side Front Bracket Assembly (C) are connected to the main harness (J) via the LED-Y harnesses (K).

*NOTE: The linkage arms on the front bracket assemblies will not move unless both motors are connected.

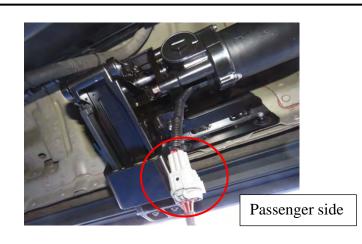

Insert 25A Fuse

Close lid after replacing Fuse


15


14

13

Seal the grommet with RTV Silicone Sealant.


Hide wires and reattach the kick panel with the carpet fully unfurled in its original position. Reattach the door sill panel and check to make sure there are no obstructions or potential snag points around the brake pedal area.

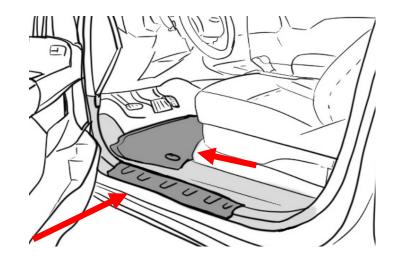

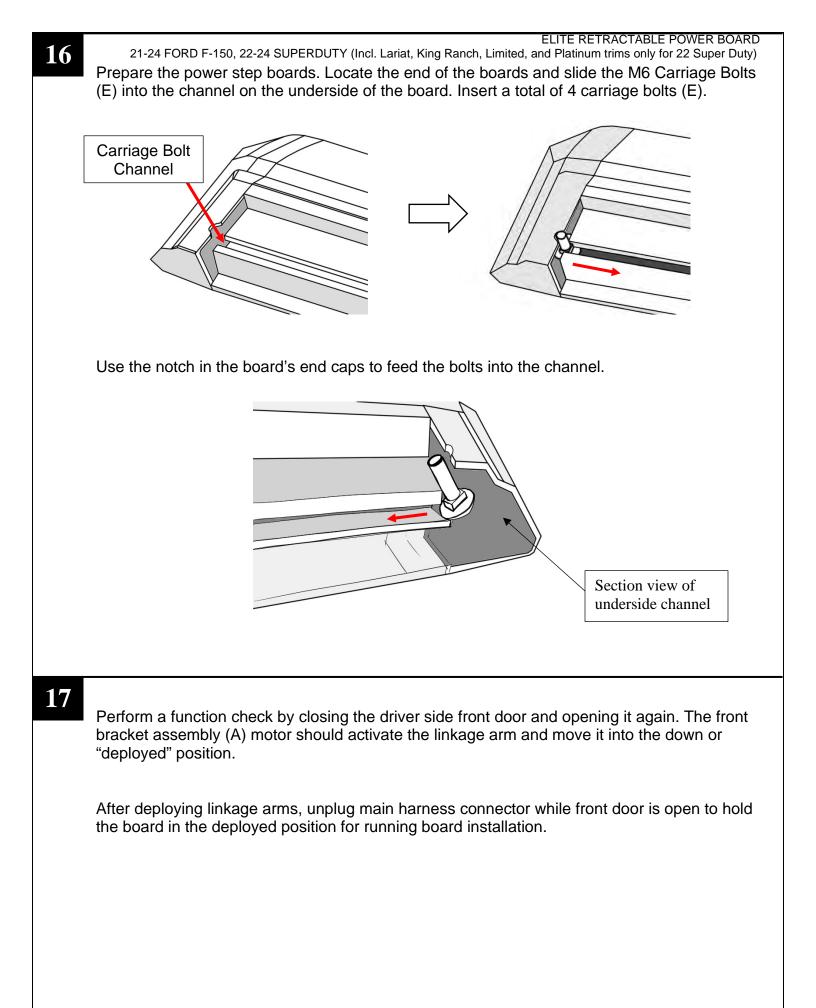

ELITE RETRACTABLE POWER BOARD

21-24 FORD F-150, 22-24 SUPERDUTY (Incl. Lariat, King Ranch, Limited, and Platinum trims only for 22 Super Duty) Line up the carriage bolts (E), under the power step boards, with the slots on the linkage arms (A & B). Insert the 4 carriage bolts (E) into the slots on front and rear linkage arms. Adjust board to desired position. Moderately hand tighten the flange nuts (G) onto the carriage bolts.

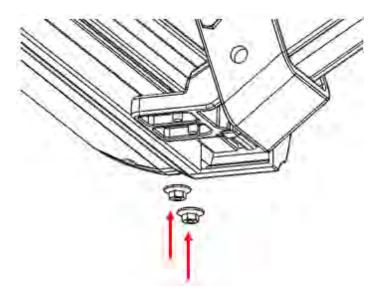

Once the board is adjusted, plug in main harness (J) connector to return power to the linkage arms. Open and close doors several times to deploy and retract the steps to settle the steps into their natural alignment. After cycling the step, tighten all hardware on the board and brackets.

Some further adjustment may be required for desired step position. Repeat for passenger side.

Perform system check and troubleshooting. If board is making irregular movements or noise, readjust the boards as follows:

- a) With board deployed loosen 6mm flange nuts under board.
- b) Leave the flange nuts slightly less than snug.

18


- c) Open and close door several times for board to settle into position.
- d) With the step in the deployed position, gradually tighten flange nuts while alternating between each. Do not over tighten.

If board is making abnormal noise or the motion is binding, repeat steps "a" through "d".

Note: If the above method does not resolve the issue, the brackets mounting to the vehicle may not be aligned properly with the vehicle. In this case, remove the board and realign brackets before attempting steps "a" to "d" once again.

19

Reinstall any remaining trim panels if necessary. Check and make sure all hardware is fully tightened. Perform a final system check. Finish.

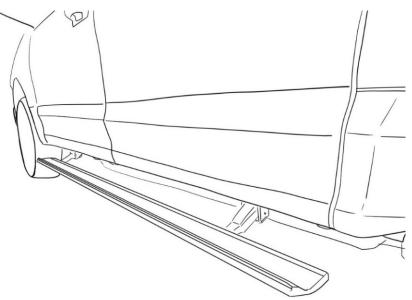



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS ELITE RETRACTABLE POWER BOARD 22-24 FORD F-150 LIGHTNING EV Patented PART# PWBR2085

ELITE RETRACTABLE POWER BOARD 22-24 FORD F-150 LIGHTNING EV


INSTALLATION INSTRUCTIONS


Mechanical PARTS LIST:

Qty	Item Description	Qty	Item Description
2	Running Boards (85in)	12	M8 Nylon Lock Nuts
1	Driver/Left Front Bracket Assembly	12	Flat Washers 8mm x 24mm x 2mm
1	Passenger/Right Front Bracket Assembly	8	M6 Carriage Bolts
1	Driver/Left Rear Bracket Assembly	12	Plastic Insulator
1	Passenger/Right Rear Bracket Assembly	8	M6 Flange Nuts
1	Electronic Materials Package	15	Zip Ties
1	Rubber Sleeve		

Electronic Materials Package PARTS LIST:


Qty	Item Description	Qty	Item Description
1	Main Harness	1	ECU
2	Wire Taps	4	LED lights
1	LED Y-Harness (Short 280mm)	1	LED Y-Harness (Long 1200mm)

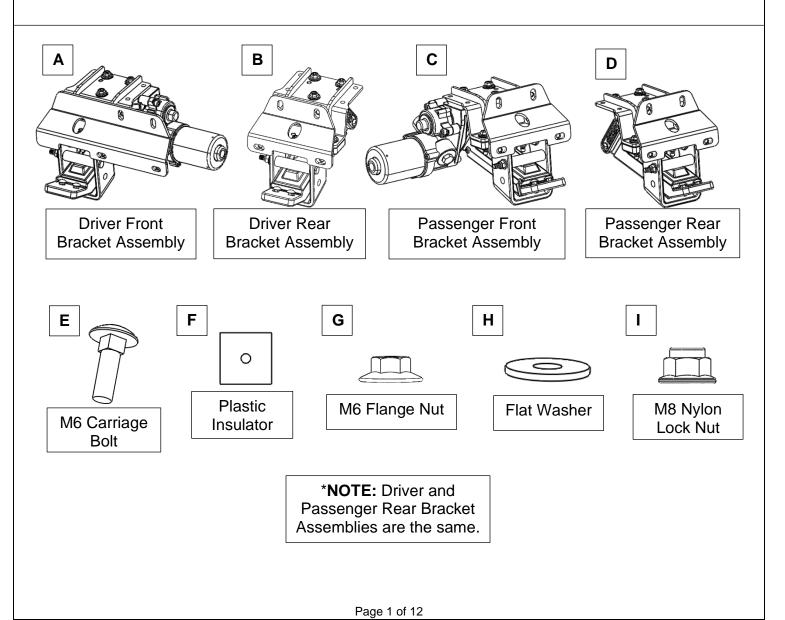

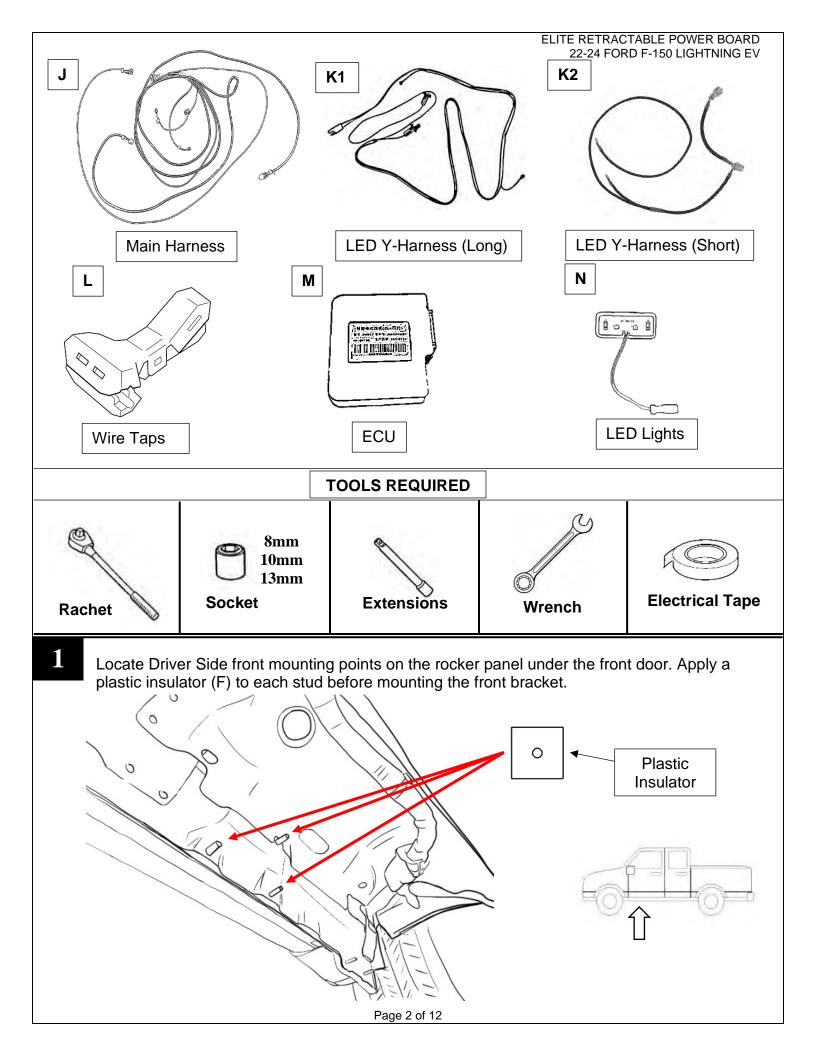


22-24 FORD F-150 LIGHTNING EV Next, line up front mounting bracket slots to the studs and place Driver Side/Left Front Bracket Assembly (A) onto rocker panel. Then fasten Nylon Lock Nuts (I) and washers (H). Do not tighten all the way yet.

ELITE RETRACTABLE POWER BOARD

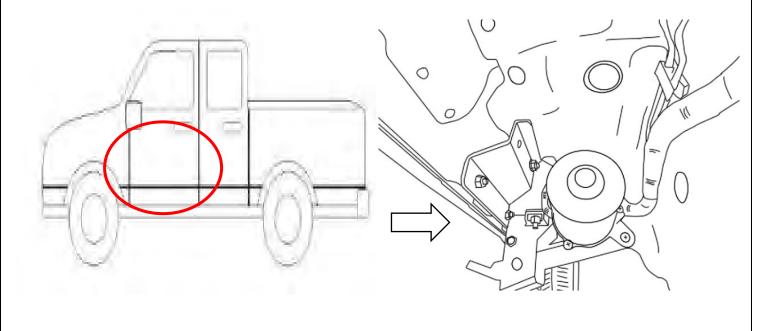

2

Locate rear mounting points. Apply a plastic insulator (F) to each stud before mounting the Driver Side Rear Bracket Assembly (B). Next, line up rear mounting bracket slots to the studs and place Driver Side/Left Rear Bracket Assembly (B) onto rocker panel.

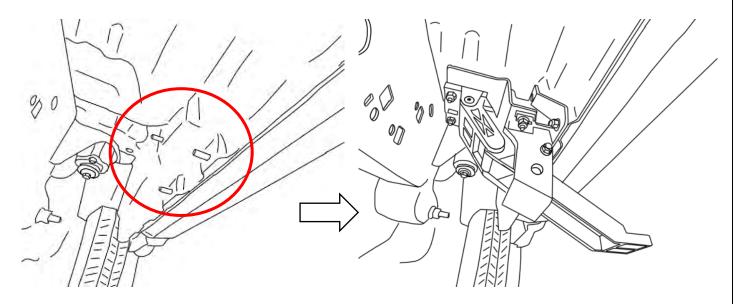


Then fasten Nylon Lock Nuts (I) and washers (H). Do not tighten all the way yet.

Repeat steps 1 – 3 for the Passenger Side.


ELITE RETRACTABLE POWER BOARD 22-24 FORD F-150 LIGHTNING EV

 Start from the Frunk (front trunk) compartment by opening the front hood of the vehicle. At the rear of the frunk tub, there is a large panel with a horizontal slot that serves as a handle.



5

*WARNING: Be sure Lightning EV is completely powered down before starting work on electrical systems. Adjusting electrical systems while power is on may cause system errors.

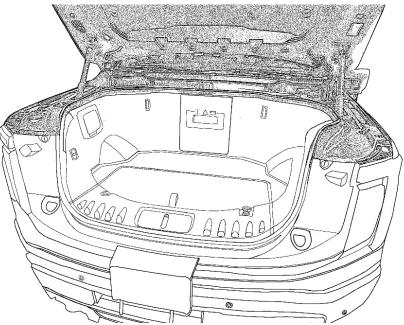


Place your hand in the handle slot and lift the panel directly upwards to remove it. Some light strength may be required to dislodge the locking tabs. Remove the panel out of the frunk area, and make sure the vehicle is turned off.




Locate the Secondary Battery and its terminals (positive/negative). Remove the 25A fuse from the fuse box that comes with the main harness (J).

*WARNING: Keeping the fuse connected to the fuse box may result in electrical sparks and risk of shorting when working with the battery.

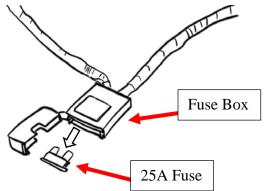


Connect the positive power lead on the main harness (J) to the positive battery terminal. Connect the negative lead to the negative battery terminal. Make sure both power leads are fully secured. Connect the ECU (M) to the main harness. Connect the Long LED Y-Harness (K1) to the Driver-side branch of the main harness.

Connect the Short LED Y-Harness (K2) to the Passenger-side branch of the main harness.

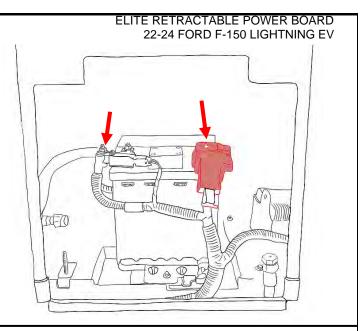

Route the main harness (J) around the battery, up along the rear of the frunk compartment, and down the Driver-side wheel well. Route the shorter leg of the harness down the Passenger-side wheel well. **Be sure to avoid contact with any moving or hot components.** Attach and secure the main harness (J) with supplied cable ties.

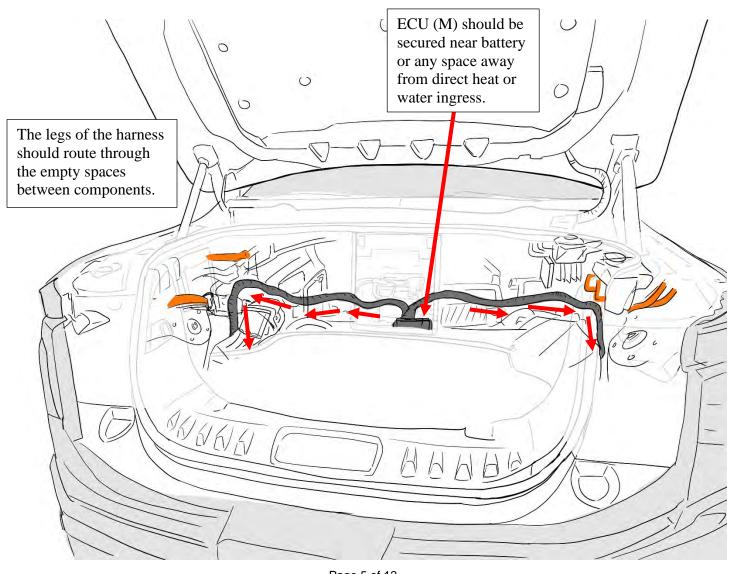

Page 5 of 12

7


ELITE RETRACTABLE POWER BOARD 22-24 FORD F-150 LIGHTNING EV Hide the excess wiring from the Wheel well view TUT TUTTIN main harness near the battery. 0 ***NOTE:** The Be sure to avoid moving components (like suspension) wiring is behind when routing the wiring. the Wheel well On the underside of the driver side, locate and remove the floor grommet in the floor panel behind the front wheel well. The grommet will be close to the front linkage arm. Poke a hole through the grommet and thread the two signal wires through and up into the vehicle cabin. 0

Carefully put wiring through rubber floor plug

8


9

Inside the vehicle cabin, remove the driver-side front kick panel and bottom door sill plate. Peel back the carpet to access the hole where the grommet was removed. Feed the wires through.

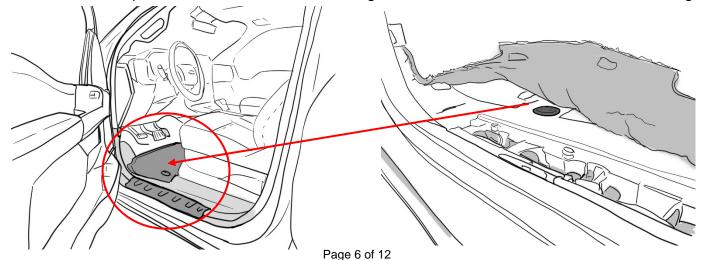


ELITE RETRACTABLE POWER BOARD

22-24 FORD F-150 LIGHTNING EV Attach the main harness (J) to one LED Y-Harness (K). Then attach the LED Y-Harness to the

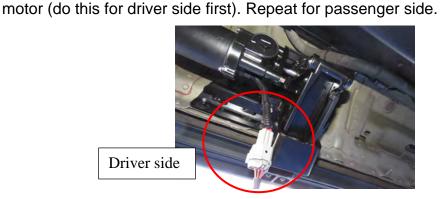



10


Locate the black BCM (body control module) under the steering wheel, behind the OBD-II Port. Slide the BCM out of the holding bracket by pushing the locking tab in the center and pulling outwards in the direction of the rail for easier access to wires.

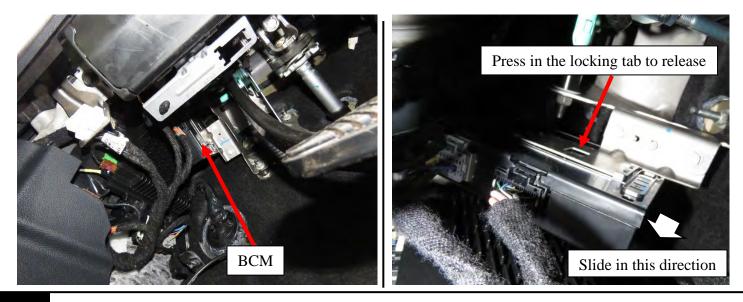


12 On the black plug of the BCM, identify the green/blue stripe and white/green stripe wires. Connect the High and Low wires from the main harness (J) using the supplied wire taps (L). After successfully connecting the wires, return the BCM back into its place and check that it is secure.

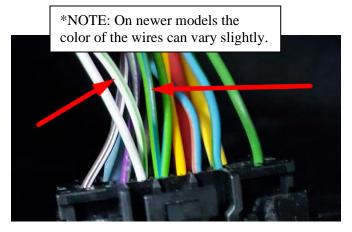


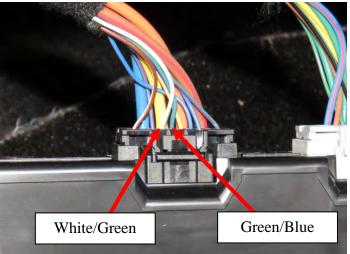

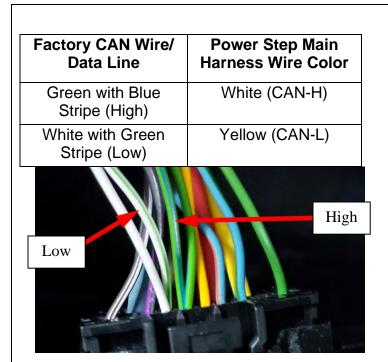


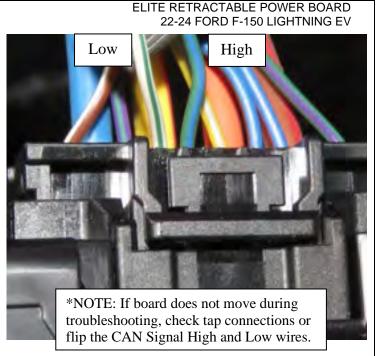

If the kit comes supplied with wire taps called "shark taps", follow the guide below to tap the wire using the "shark tap":

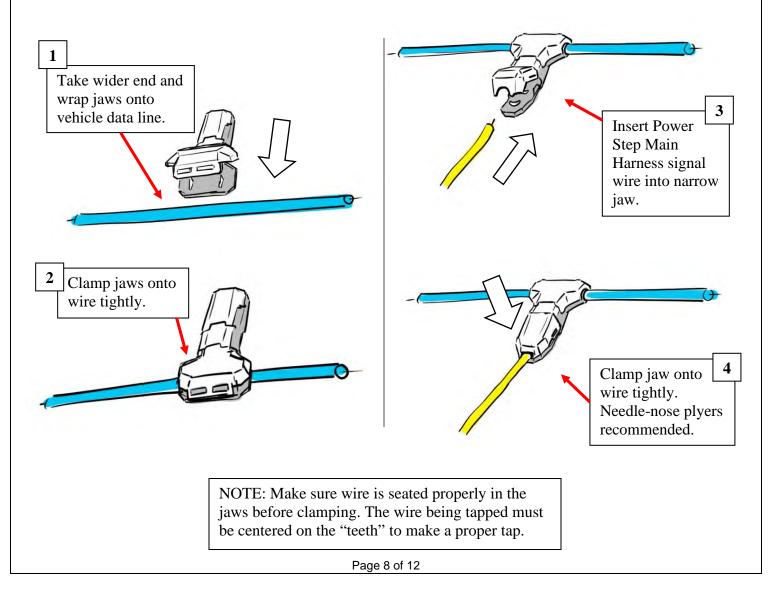


22-24 FORD F-150 LIGHTNING EV Plug in LED lights (N) into LED Y-Harness (K) and attach them to the bottom of the rocker panel. Use provided 3M double sided adhesive tape on back of LED light (N). Replace Fuse into Fuse Box.

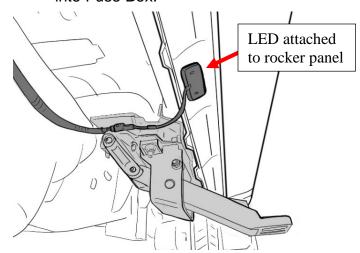

Check to make sure the harnesses on the Driver Side/Left Front Bracket Assembly (A) and Passenger Side Front Bracket Assembly (C) are connected to the main harness (J) via the LED-Y harnesses (K).

*NOTE: The linkage arms on the front bracket assemblies will not move unless both motors are connected.

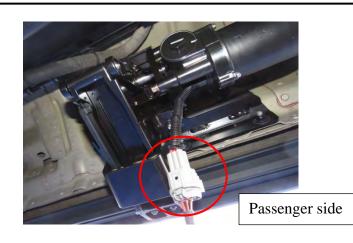

Close lid after replacing Fuse

ELITE RETRACTABLE POWER BOARD

Insert 25A Fuse


15


14

13

Seal the grommet with RTV Silicone Sealant.


Hide wires and reattach the kick panel with the carpet fully unfurled in its original position. Reattach the door sill panel and check to make sure there are no obstructions or potential snag points around the brake pedal area.

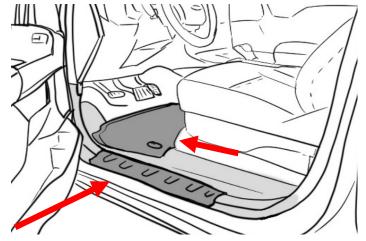

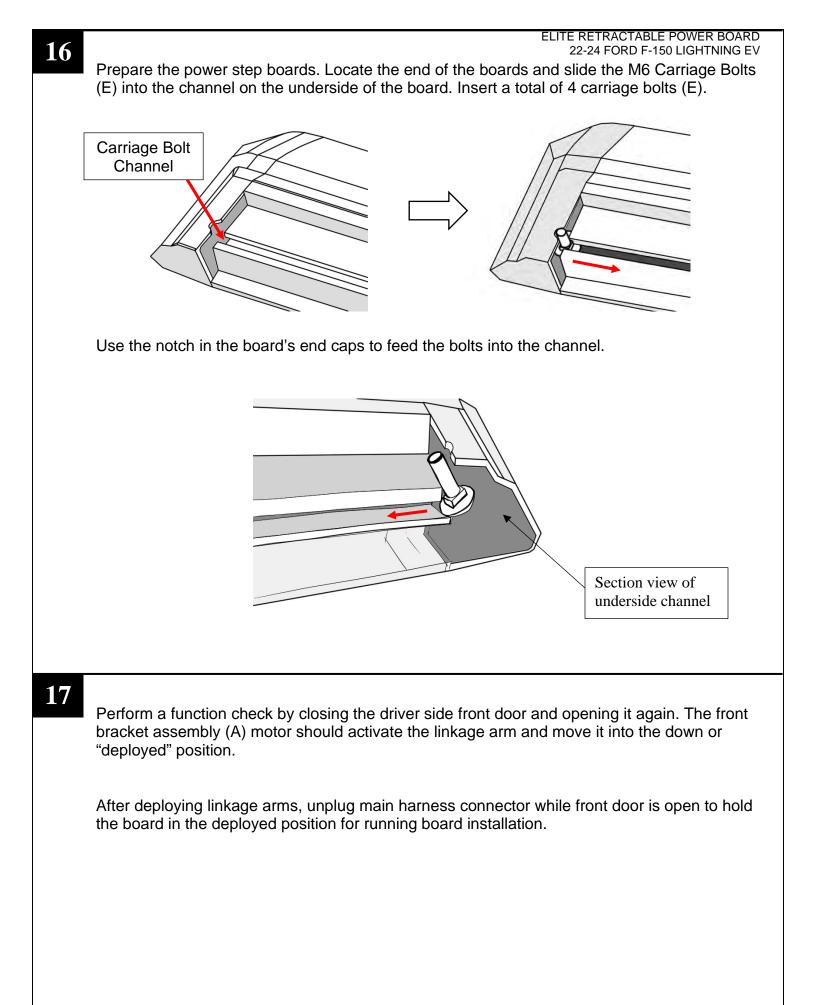

ELITE RETRACTABLE POWER BOARD 22-24 FORD F-150 LIGHTNING EV

Line up the carriage bolts (E), under the power step boards, with the slots on the linkage arms (A & B). Insert the 4 carriage bolts (E) into the slots on front and rear linkage arms. Adjust board to desired position. Moderately hand tighten the flange nuts (G) onto the carriage bolts.

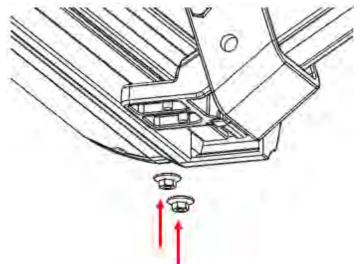

Once the board is adjusted, plug in main harness (J) connector to return power to the linkage arms. Open and close doors several times to deploy and retract the steps to settle the steps into their natural alignment. After cycling the step, tighten all hardware on the board and brackets.

Some further adjustment may be required for desired step position. Repeat for passenger side.

Perform system check and troubleshooting. If board is making irregular movements or noise, readjust the boards as follows:

- a) With board deployed loosen 6mm flange nuts under board.
- b) Leave the flange nuts slightly less than snug.

18

- c) Open and close door several times for board to settle into position.
- d) With the step in the deployed position, gradually tighten flange nuts while alternating between each. Do not over tighten.

If board is making abnormal noise or the motion is binding, repeat steps "a" through "d".

Note: If the above method does not resolve the issue, the brackets mounting to the vehicle may not be aligned properly with the vehicle. In this case, remove the board and realign brackets before attempting steps "a" to "d" once again.

Reinstall any remaining trim panels if necessary. Check and make sure all hardware is fully tightened. Perform a final system check. Finish.

