
stallation Instruction


ne: Grille Guard

em: 17A030200MA



5-10 /Bdu/o,

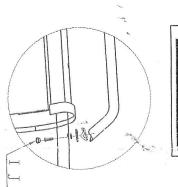

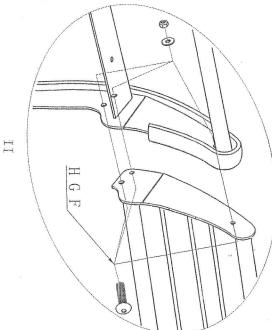



## Parts list:

<u> </u>	T 6	· · · · · · · · · · · · · · · · · · ·				
(0) (3) (4) pieces)	©M10 flat washer (12 pieces)	9	head bolt (6 pieces)			
© M6X25 bolt (2 pieces)	① M10 nut (6 pieces)		DM12 flat washer (12 pieces)	9	Ogrille guard	raits Tist.
M)Rubber Plug (2 Pieces)	ORubber Cover (2 Pieces)		©M12 nut (6 pieces)			
(N)M6 Hexangular Spanner (1 Piece)	©″U″Washer (2 Pieces)		⊕M10X25 bolt (6 pieces)		(2 pieces, latera symmetry)	

## ALLATION STEPS

- 1. Check the parts in the box carefully if match above list.
- 2. Pls prepare the tools for installation, follow as :14-17, 17-19 wrench.
- 3. Put the mount bracket(B) on the girder of the car , with

Existing bolts, then tighten it.

4. Install the grille guard(A) on the mount bracket(B) with M12X35 hex head bolt(C), then tighten it.