

INSTALLATION INSTRUCTION

Rear Bumper Guard Single Tube With Pad

10-16 Nissan NV200

PART # 8DNINVSS




Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
(1)	Rear Guard	1		(7)	Spring Washer	4	φ 8
(2)	Left Bracket	1		(8)	Hexagon Nut	4	M8
(3)	Right Bracket	1		(9)	Hexagon Bolt	4	M12x35
(4)	U Bolt 1	1	08x19x36x34x90	(10)	Large Washer	8	φ 12*30*2.5
(5)	U Bolt 2	1	08x19x62x34x115	(11)	Spring Washer	4	φ 12
(6)	Large Washer	4	φ8*25*2.0	(12)	Hexagon Nut	4	M12


INSTALLATION PICTURE

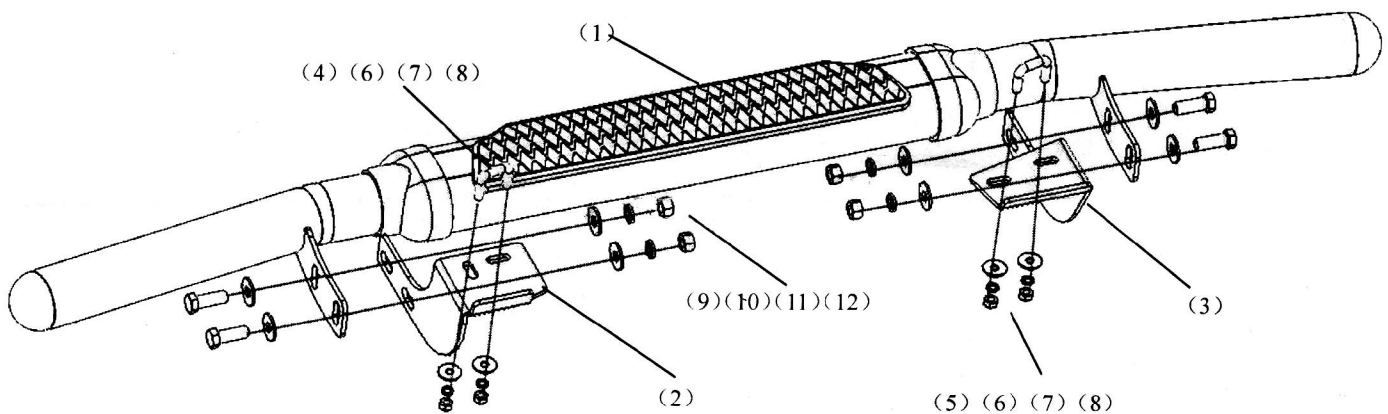


INSTALLATION PROCEDURE

Step 1: Refer to Part List to check if all hard ware are included.


Step 2: Refer to the following pictures to install left and right brackets.

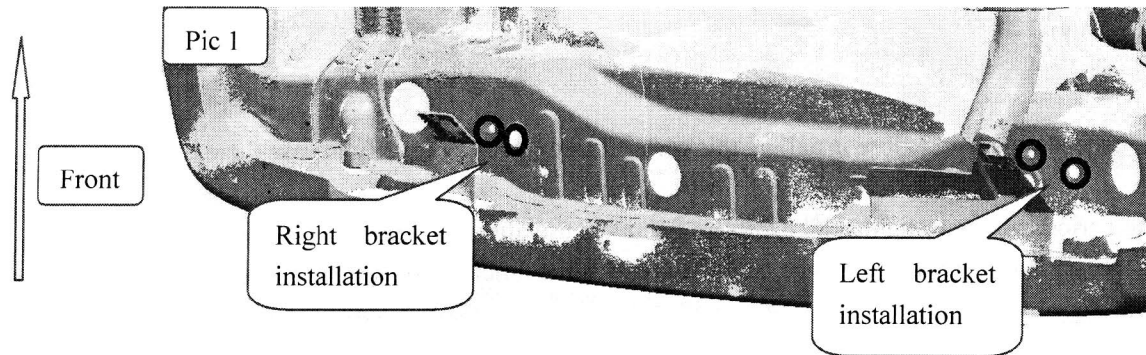

Step 3: Install the rear guard on the brackets and then adjust the brackets to the proper position.

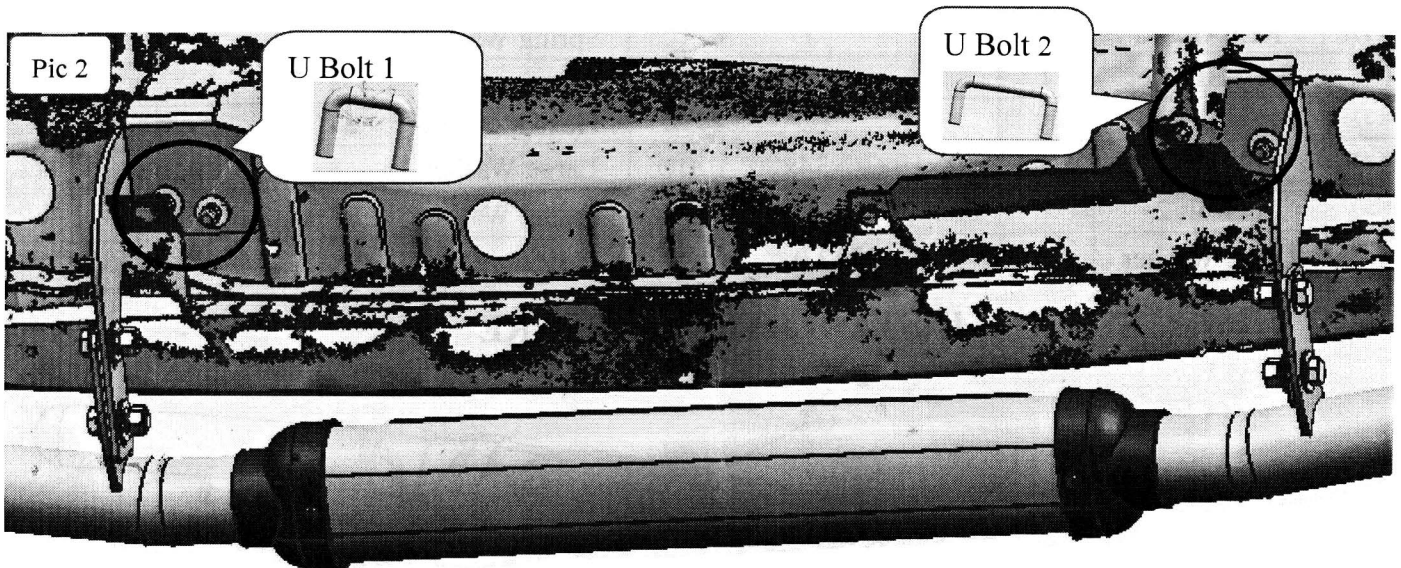

Step 4: Check if all hard ware are installed and then fasten all to complete the installation..

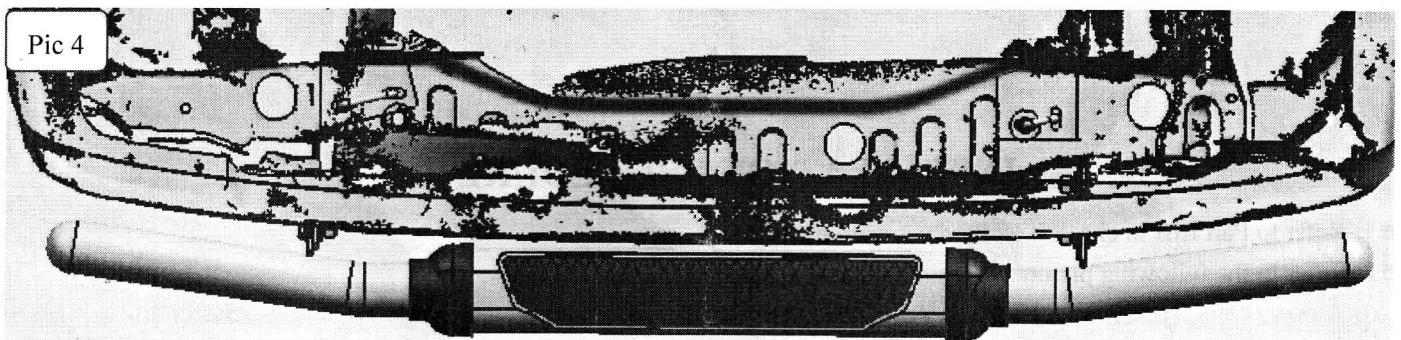

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.