




TEL: 1-866-XANATOS


INSTALLATION INSTRUCTIONS

**4" OVAL SIDE STEPS
2011-2021 Dodge Durango**

PART# 9B070203SSOV

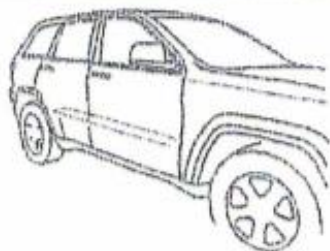

M6



A 12x

M8



B 6x

M8



C 6x



D 12x


M6




E 12x




F 6x

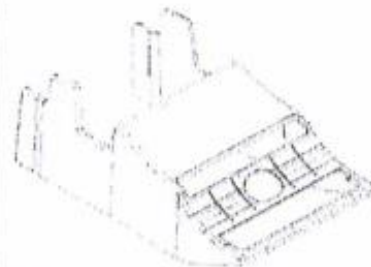


G 6x

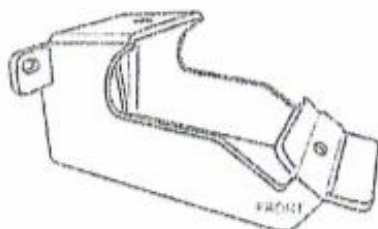

H1 2x

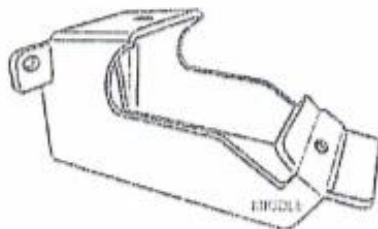

H2 2x

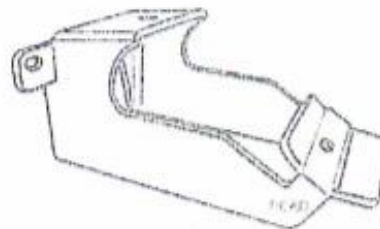

H3 2x






REAR
TRASERO
ARRIERE

PASSENGER'S SIDE
LADO de PASAJERO
COTE DU PASSAGER


FRONT
FRENTE
DEVANT

I 2x

FOR VEHICLE MODELS 2014 OR NEWER FOLLOW STEPS 1-15
FOR VEHICLE MODELS 2013 OR OLDER FOLLOW STEPS 2-5 AND 8-14

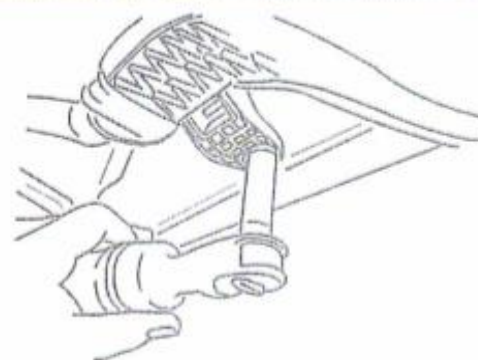
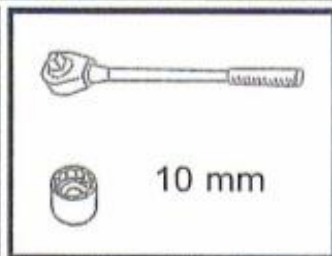
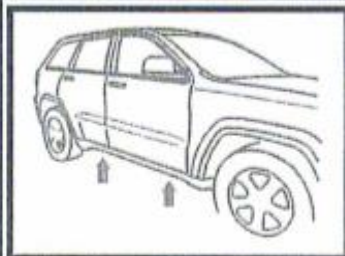


RIGHT HAND SIDE ONLY

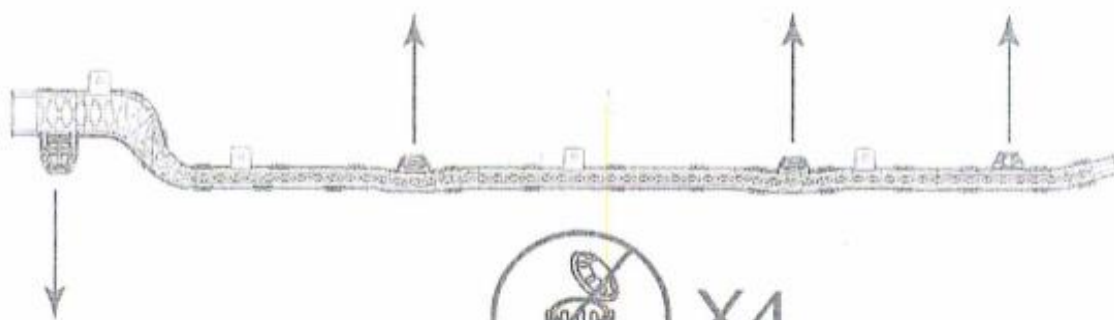


X4

1

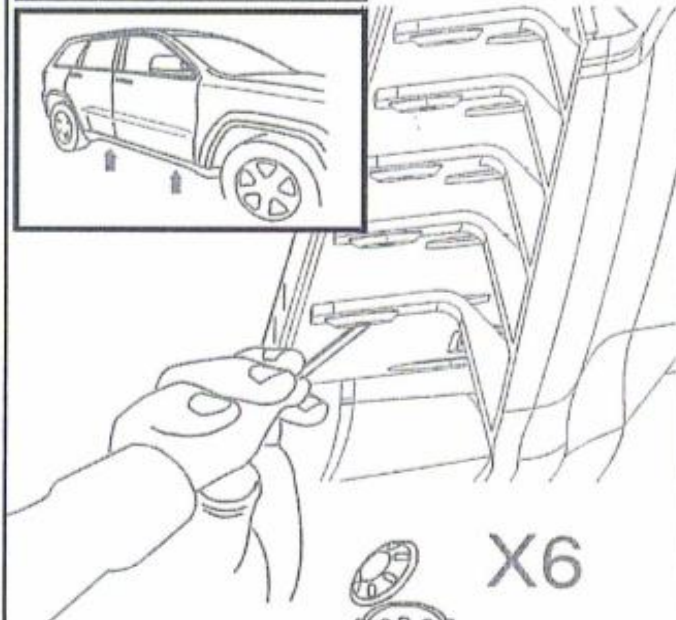
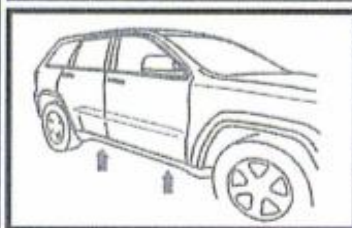
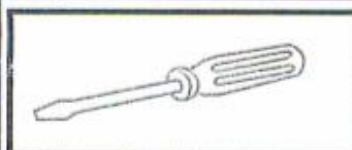


X6



2

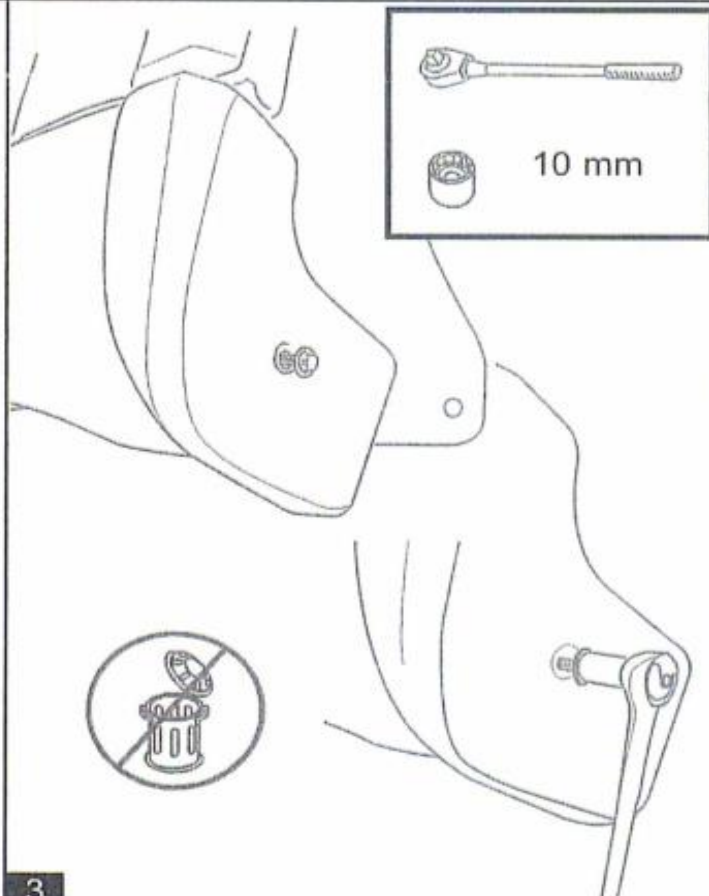

3

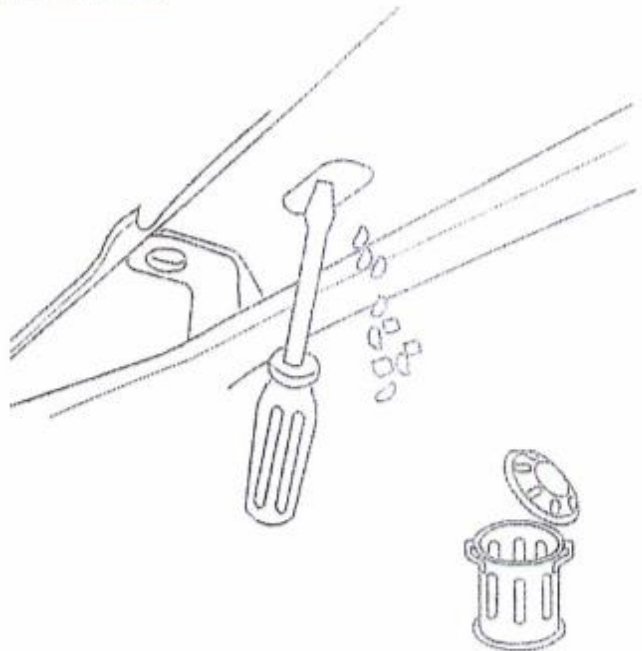
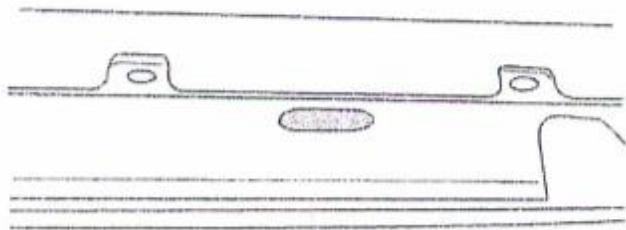
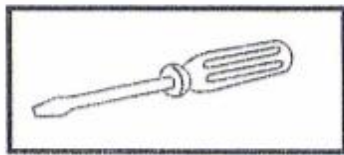


4

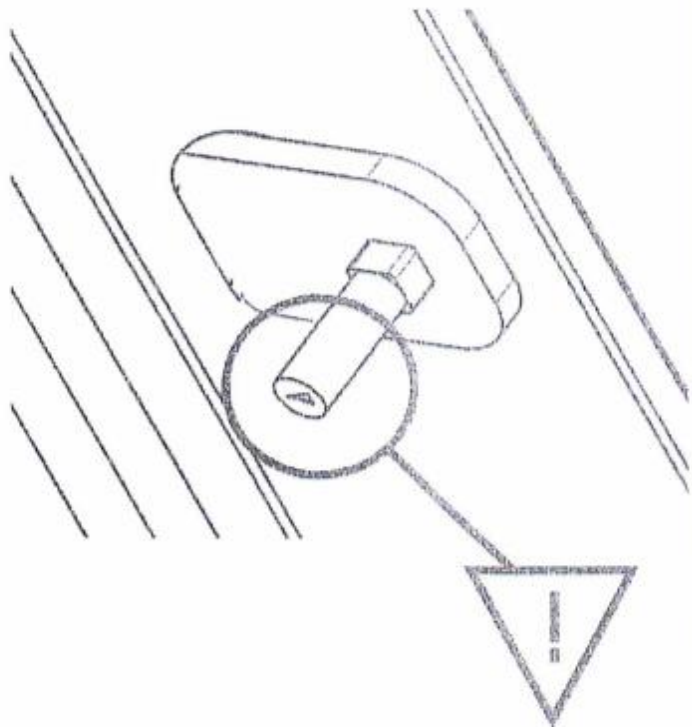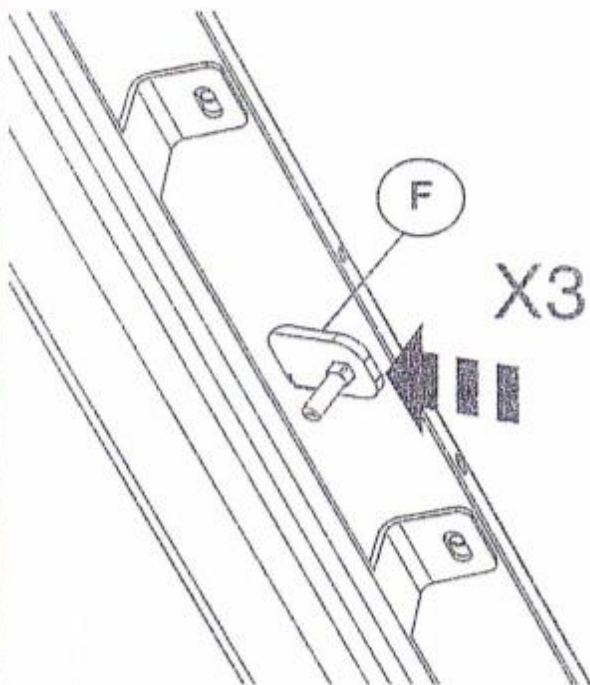


5


STEPS 6 AND 7 ARE FOR THE RHS FRONT AND MIDDLE BRACKETS ONLY ON 2014 OR NEWER VEHICLE MODELS. FASTENERS TO BE REVERSED FOR JUST THESE LOCATIONS TO ALLOW CLEARANCE TO THE WIRING HARNESS.

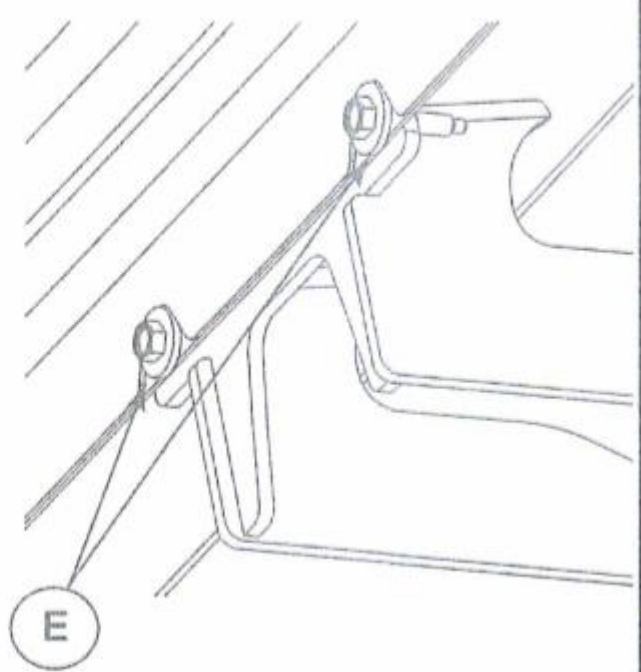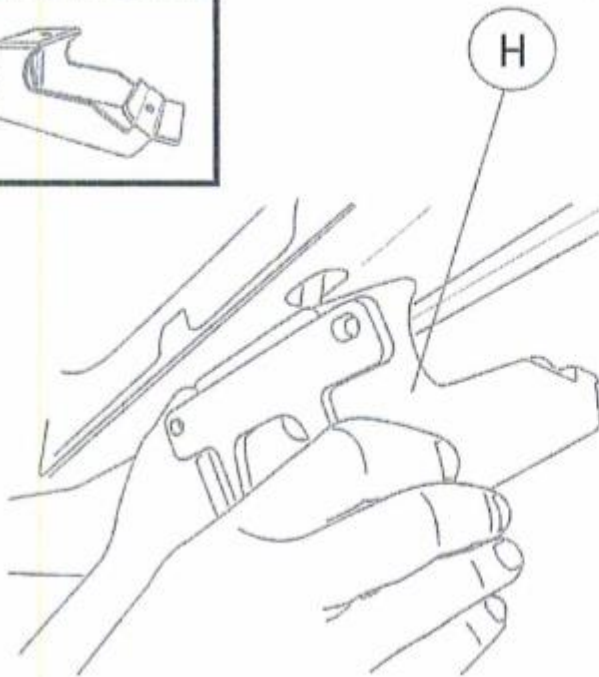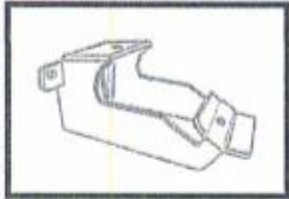




6

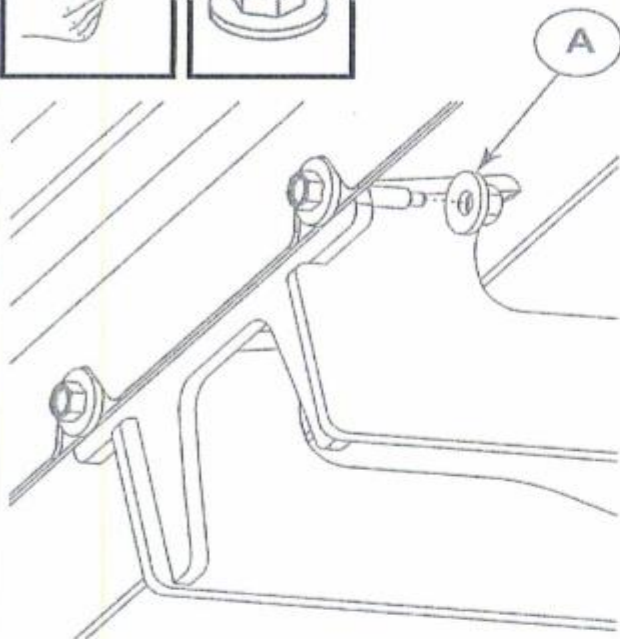


10ft-lbs (120 in-lbs) (13.5 N.m)

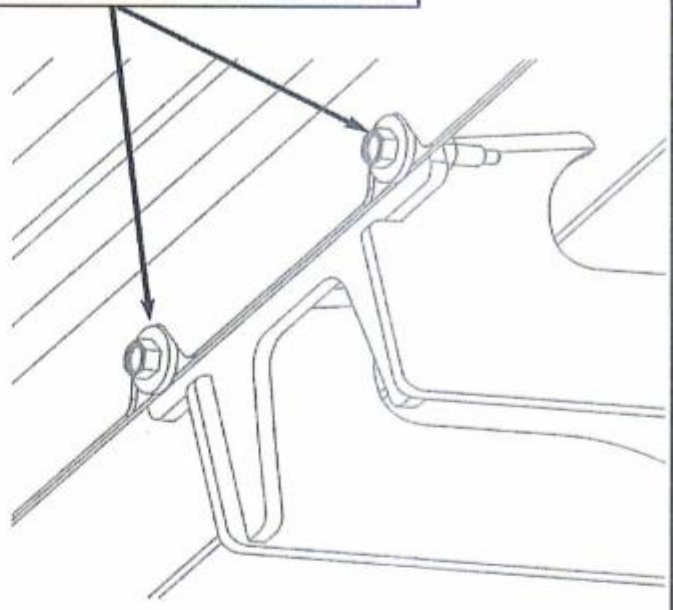


7

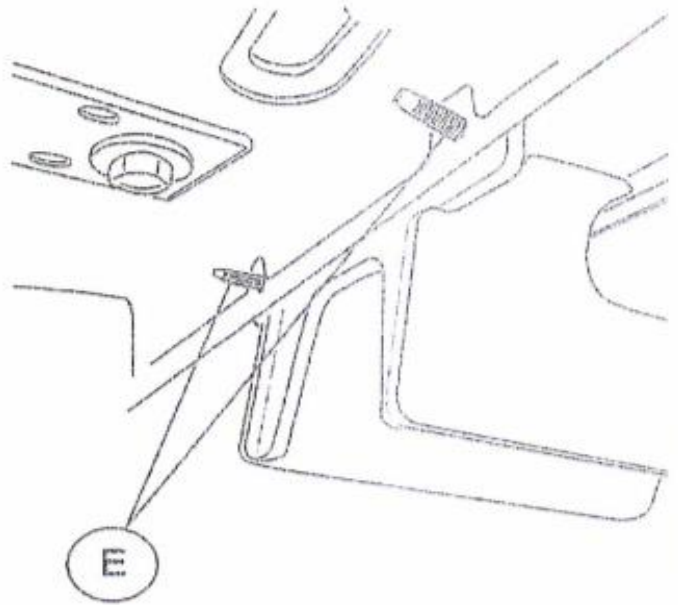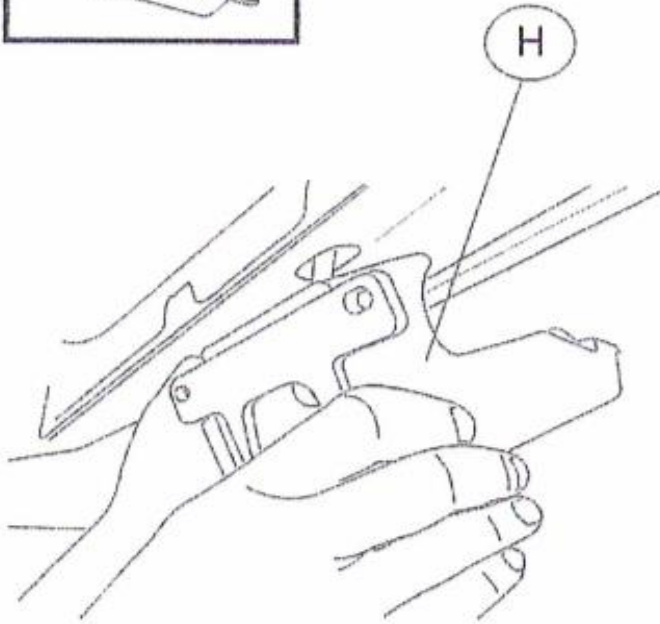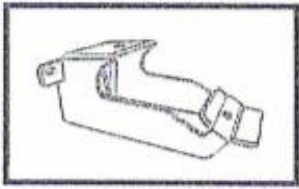


8

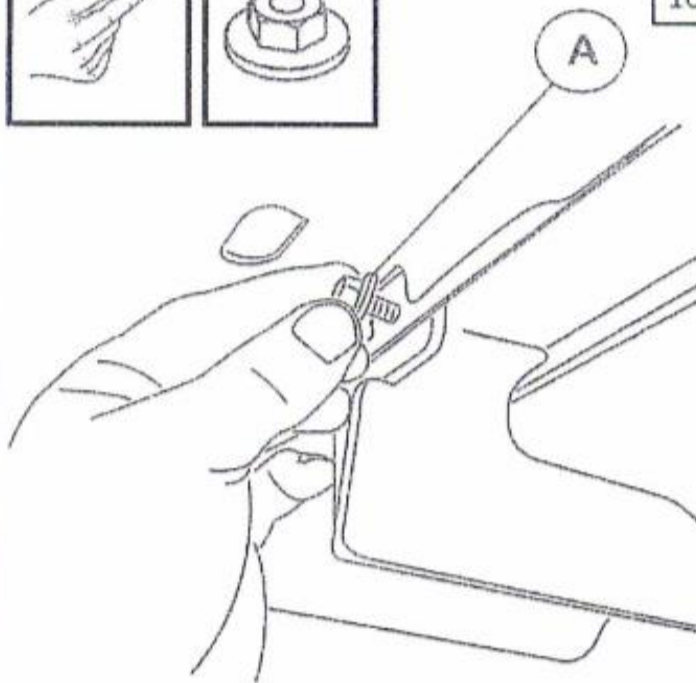

10ft-lbs (120 in-lbs) (13.5 N.m)

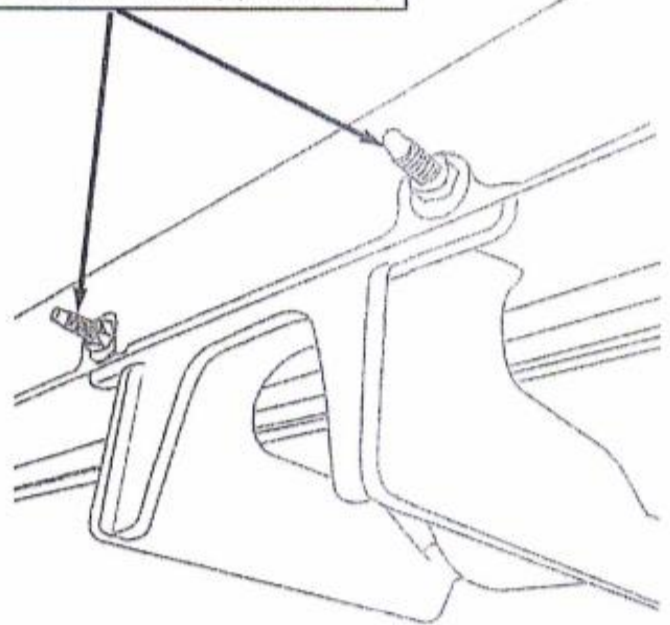


9

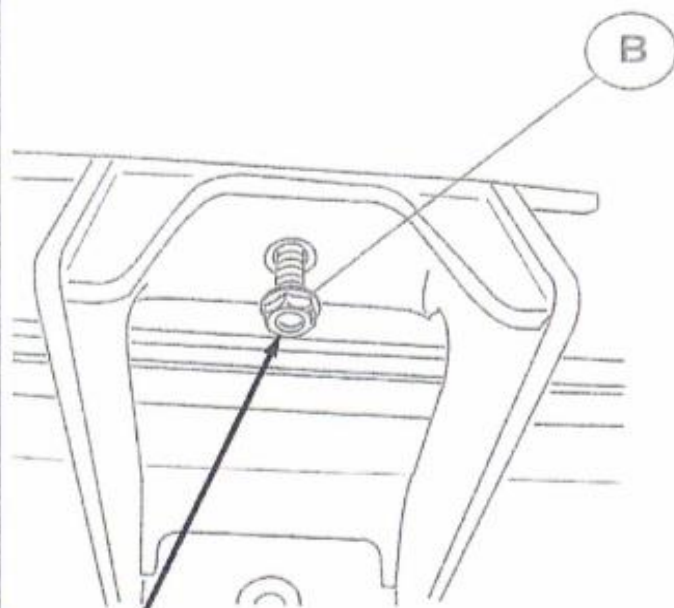


16 ft-lbs (192 in-lbs) (22 N.m)

10


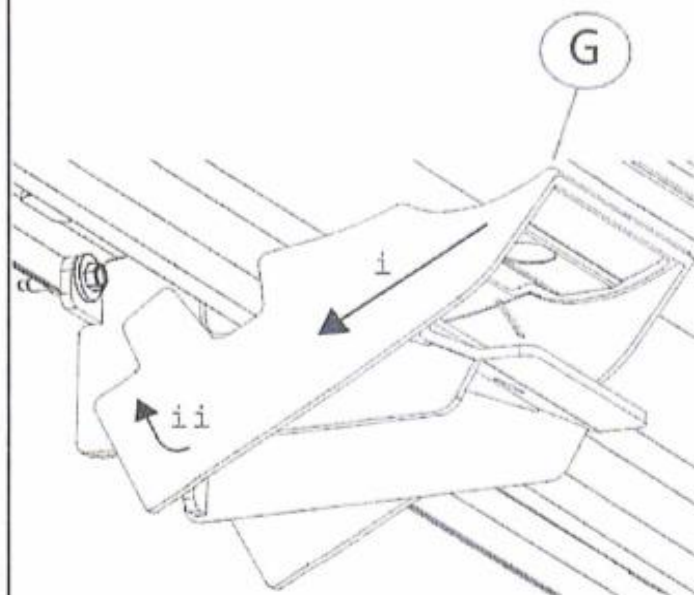


11


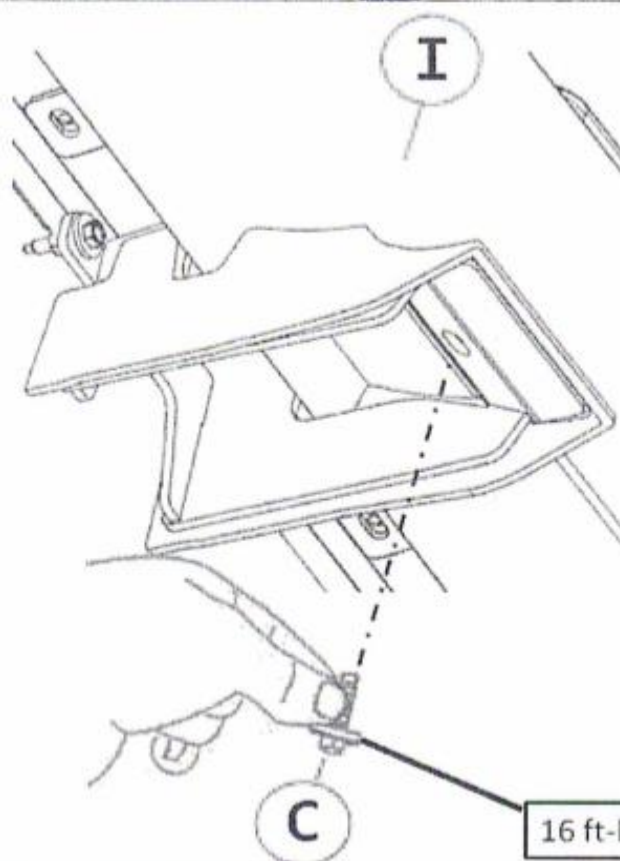


16 ft-lbs (192 in-lbs) (22 N.m)





12

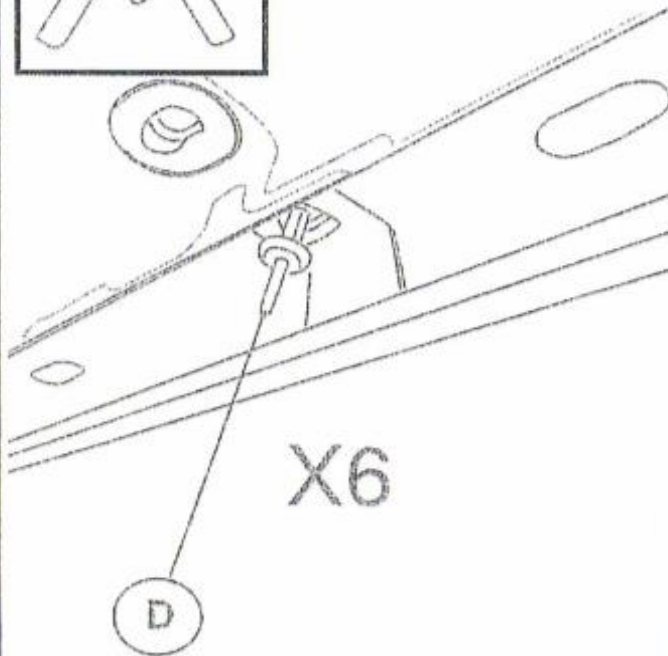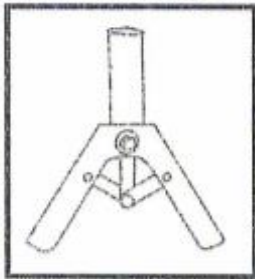

13

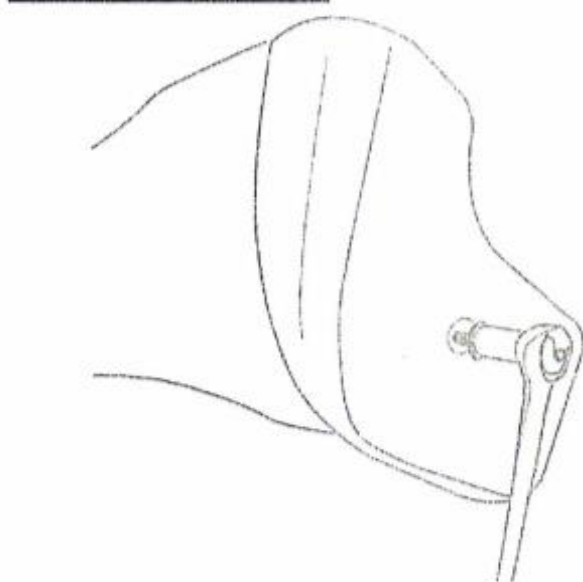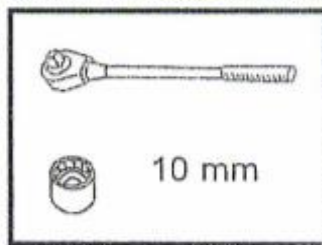

14

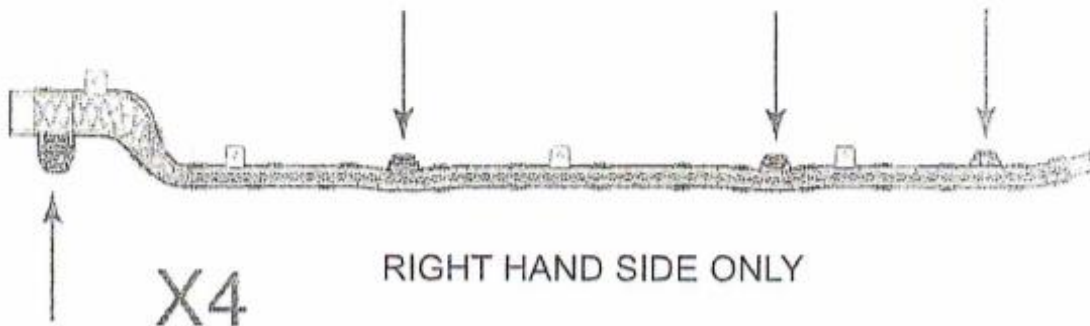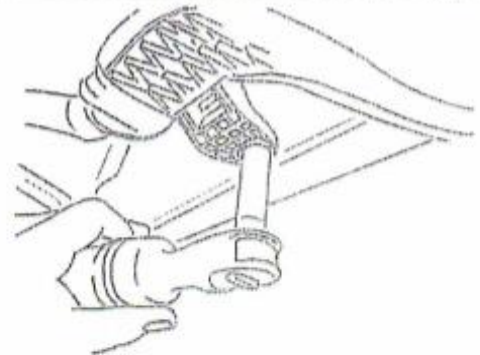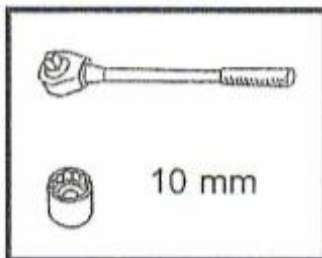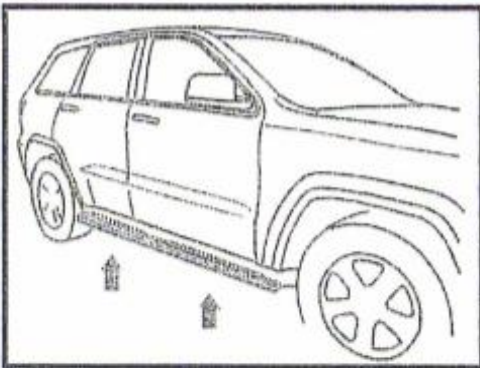

RIGHT HAND SIDE ONLY

15

4 ft-lbs (48 in-lbs)(5.4 Nm)