




**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**

**3" SIDE BAR FOR 17-22 HONDA CRV  
PART#9B150505SS**

## PARTS LIST:

1	Driver/Left Sidebar	1	Driver/Left Rear Mounting Bracket
1	Passenger/Right Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Driver/Left Front Mounting Bracket	18	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	18	8mm Lock Washers
1	Driver/Left Center Mounting Bracket	18	8mm x 24mm OD x 2mm Flat Washers
1	Passenger/Right Center Mounting Bracket	12	8mm Combo Bolts

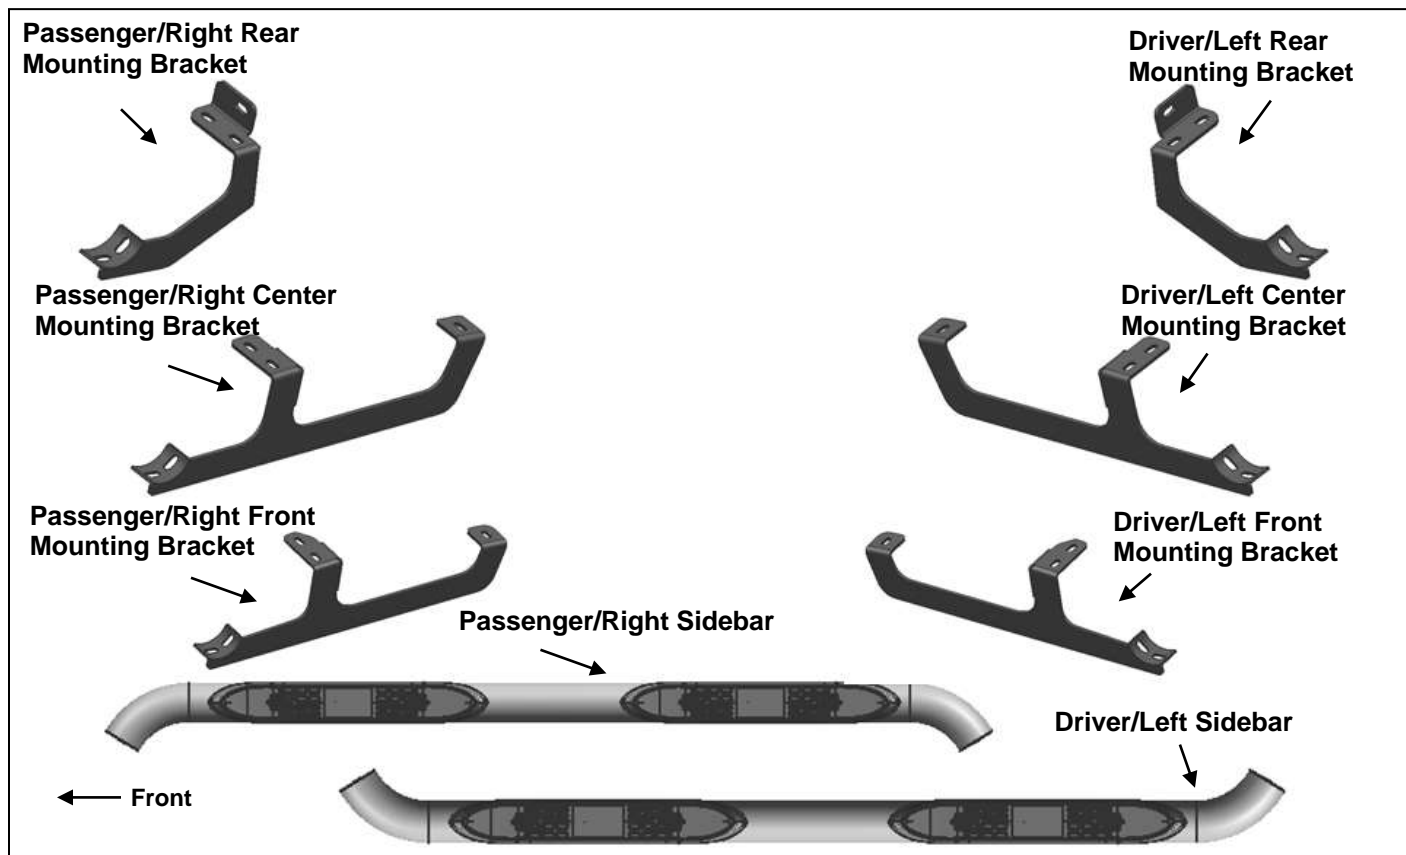

## PROCEDURE:

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**

1. Identify and separate the driver and passenger side Mounting Brackets. Start installation on the passenger/right side of the vehicle. Remove the plastic cover under the passenger side of the vehicle, **(Figure 1)**.
2. Select the passenger/right Front Mounting Bracket. Attach the outer end of the passenger side Front Mounting Bracket to the (2) threaded holes next to the pinch weld with the included (2) 8mm Hex Bolts, (2) 8mm Lock Washers, and (2) 8mm Flat Washers, **(Figure 2a)** Attach the inner tab on the bracket to the threaded hole in the bottom of the inner frame channel with the included (1) 8mm Hex Bolt, (1) 8mm Lock Washer, and (1) 8mm Flat Washer, **(Figure 2a)**. Leave hardware loose at this time.  
**IMPORTANT:** The Front and Center Mounting Brackets are similar but they are not same, **(Figure 2b)**.
3. Move to the center of the vehicle and repeat **Steps 1-2** for Center Mounting Bracket installation, **(Figure 3)**.
4. Continue along the side of the vehicle to the rear mounting location. Select the passenger/right rear Mounting Bracket. Attach the bracket to the vehicle with (3) 8mm Hex Bolts, (3) 8mm Lock Washers, and (3) 8mm Flat Washers. Do not tighten all hardware at this time. **(Figure 4)**


5. Leave the plastic cover loose and slowly tighten the hardware bolting the Brackets to the vehicle.
6. Carefully position the passenger/right Sidebar onto the (3) Mounting Brackets. Attach the Sidebar to the Mounting Brackets using the included (6) 8mm Combo Bolts (**Figure 5**). Do not tighten at this time.
7. Level and adjust Sidebar properly and tighten all hardware.
8. Once all hardware has been completely tightened, reinstall the plastic cover with the factory hardware.
9. Repeat **Steps 1-8** for driver/left Sidebar installation. **NOTE:** There is the dry glue on the driver side of the vehicle and block one mounting hole on the center brackets. Please carefully scrap off the glue before install the driver side center mounting bracket, (**Figure 6**).
10. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.



**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

### Passenger Side Installation Pictured

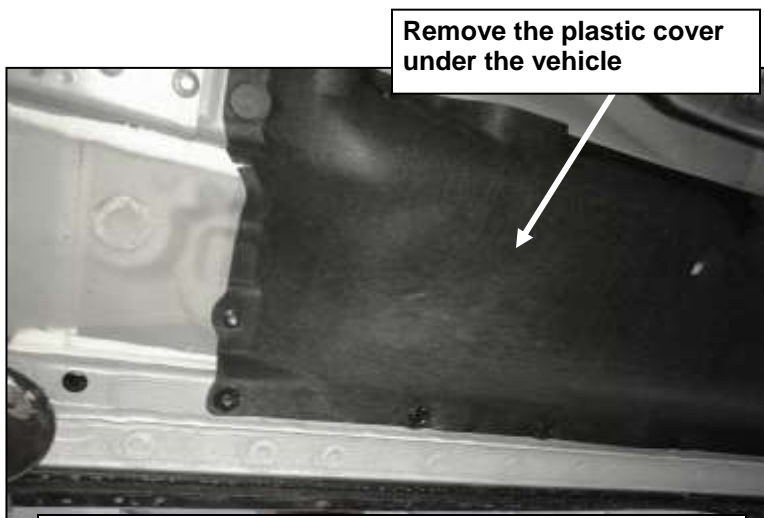

(Fig 1) Passenger Side Mounting Location Pictured

Passenger Side Front  
Mounting Bracket Pictured

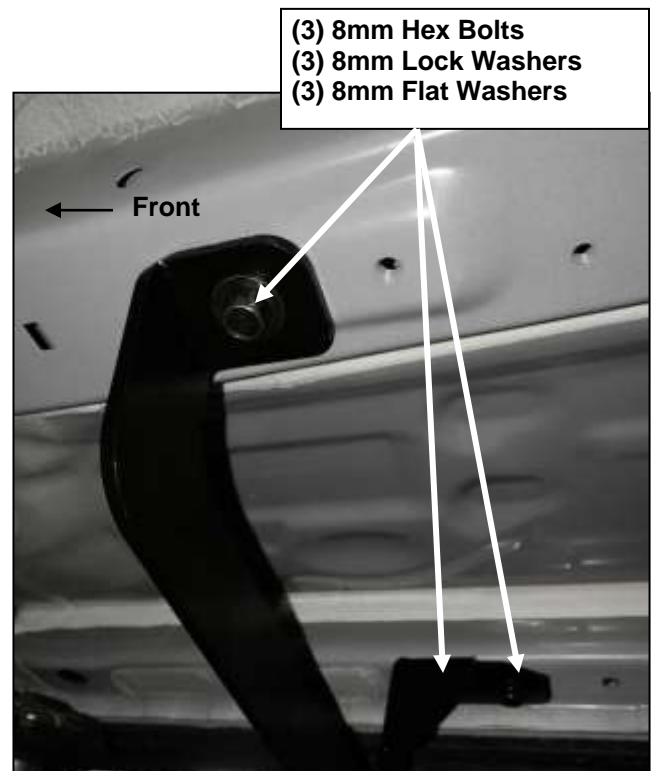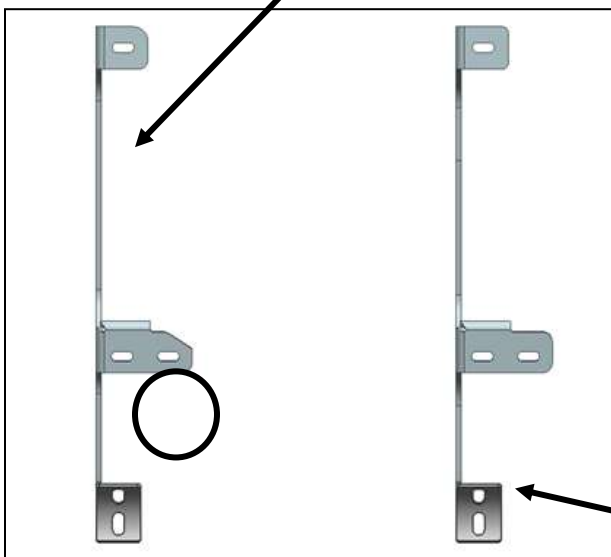

(Fig 2a) Passenger Side Front Mounting Bracket Pictured

Passenger/Right Center  
Mounting Bracket Pictured

(Fig 2b) Passenger/Right Front Mounting Bracket Pictured



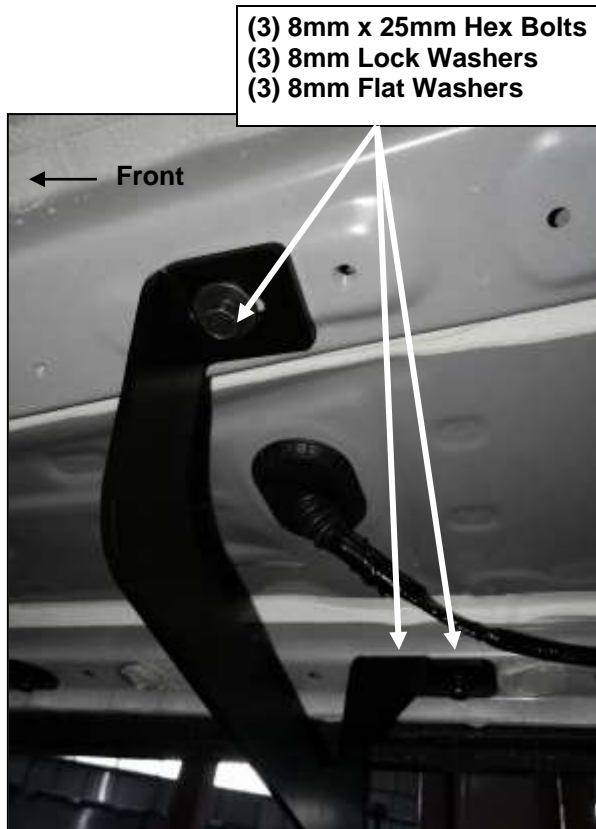


Illustration Pictured

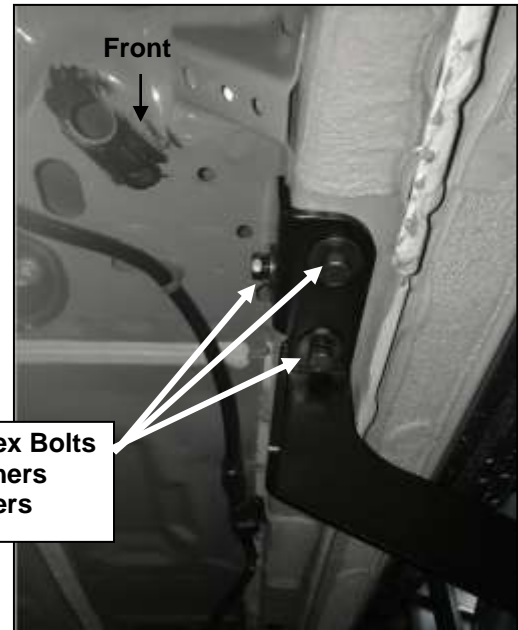


(Fig 4) Passenger Side Rear Mounting Bracket Pictured

(Fig 3) Passenger Side Center Mounting Bracket Pictured

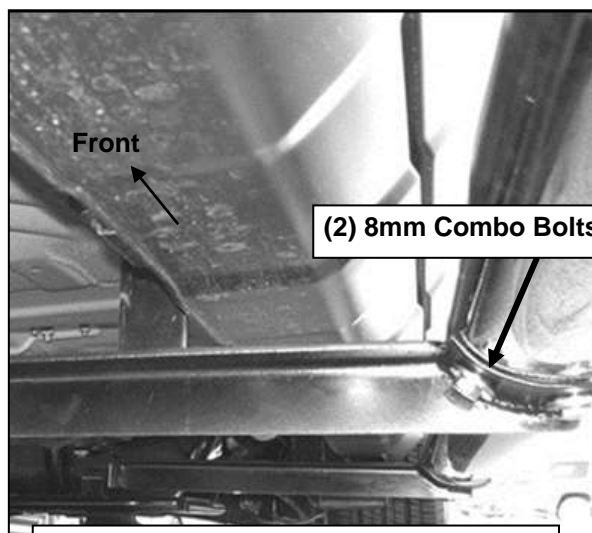

(Fig 5) Passenger Side Rear Mounting Bracket Pictured

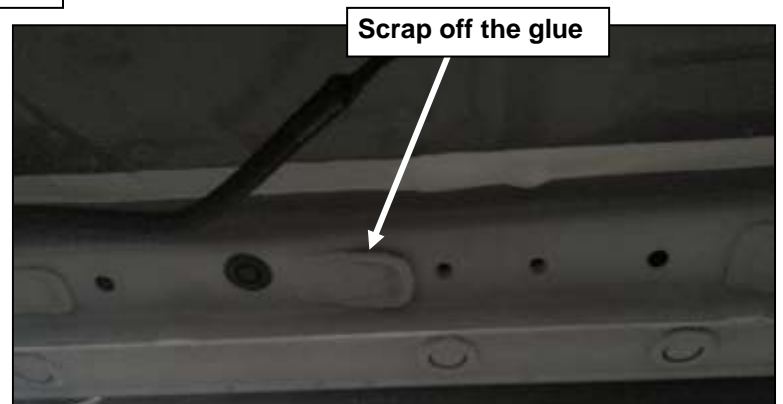

(Fig 6) Driver Side Center Mounting Position Pictured

