



INSTALLATION INSTRUCTIONS

2.5" BULL BAR W/O SKID PLATE FOR 08 NISSAN ROGUE PART #:BB116703\BB116703A

TEL 1-866-XANATOS

PARTS LIST:

1	City Bar	8	12mm ID x 29mm OD x 3mm Flat Washers
1	Driver/Left Mounting Bracket	2	8-1.25mm x 30mm Hex Head Bolts
1	Passenger/Right Mounting Bracket	2	8mm Lock Washers
4	12-1.75mm x 35mm Hex Head Bolts	2	8mm ID x 22mm OD x 1.5mm Flat Washers
4	12mm Lock Washers		
4	12mm Hex Nuts		





PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- From underside of vehicle, remove the front plastic rocker guard and place it on a clean working area. Use a sharp knife to cut out the marked area on both sides of the plastic shroud (5 1/2" x 1/2" on the passenger side, 5 1/2" x 1 1/4" on the driver side). Start cutting 1 1/4" from the front of the plastic shroud (**Figure 1 & 2**).
- Once you cut both areas on the plastic shroud, re-install it back to the vehicle using the factory fasteners.
- Remove the driver side body mount bolt and the factory bolt in the radiator support located right above the body mount (**Figure 3**).
- Position driver side Mounting Bracket and loosely attach it to vehicle using the factory body mount bolt and by replacing the radiator support bolt with the included (1) 8mm x 30mm Hex Head Bolt, (1) 8mm Lock Washer, and (1) 8mm Flat Washer (**Figure 4 & 5**).
- Repeat steps 4 & 5 for passenger side Mounting Bracket.
- With help position Sport Bar on the outer side of Mounting Brackets and attach it using the included (4) 12mm x 35mm Hex Head Bolts, (4) 12mm Lock Washers, (4) 12mm Hex Nuts, and (8) 12mm Flat Washers (**Figure 6**).
- Adjust Sport Bar Properly and then tighten all hardware at this time.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the product.

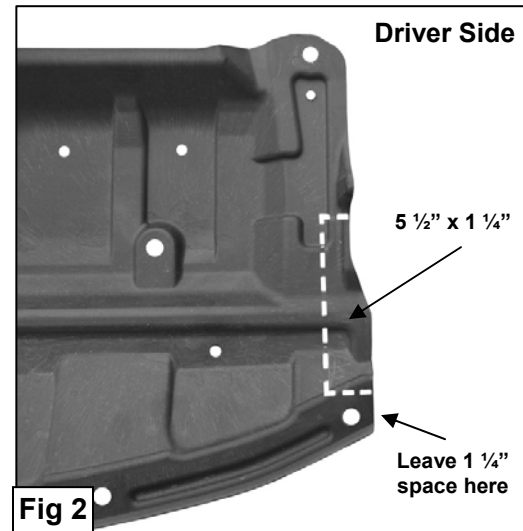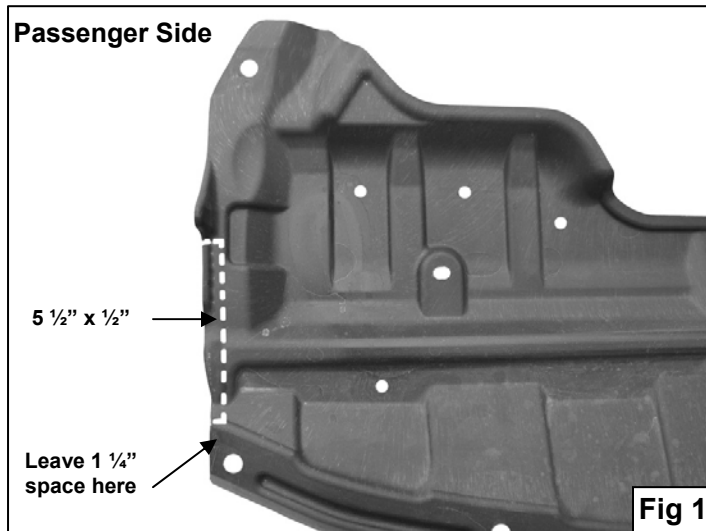

Driver Side Frame Bracket Inner View

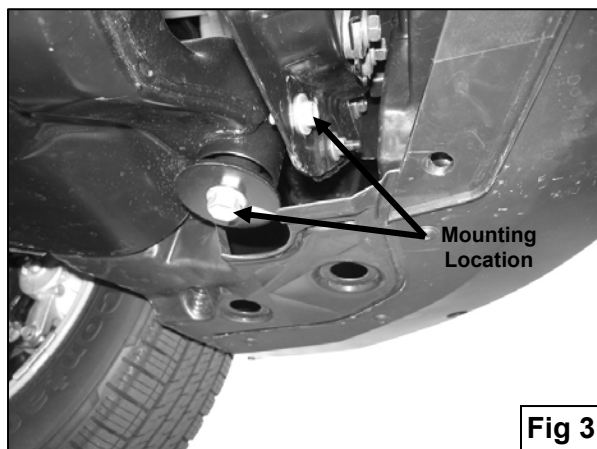

Driver Side Frame Bracket Outer View

