



# **INSTALLATION INSTRUCTIONS**

**REAR BUMPER GUARD (DOUBLE LAYER) FOR LENUX RX350**

**2016-2020**

**PART # CRDL-TOT301B**

# INSTALLATION INSTRUCTIONS









## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.



## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear Skid Bar	②	1	 Bracket 1 (Left side)
③	1	 Bracket 1 (Right side)	④	1	 Bracket 2 (Left side)
⑤	1	 Bracket 2 (right side)	⑥	4	 Assembling Bolt M8*25
⑦	4	 Hex bolt-zinc plated M10*35	⑧	8	 Flat washer D10

## INSTALLATION INSTRUCTIONS

⑨	4	 Spring Washer D10	⑩	4	 Hex nut D10
---	---	--	---	---	--

### Installation Steps

STEP 1: Verify that all parts are present according to the manual and illustration.


STEP 2: Remove the original pintle hook. Using original Bolt (pintle hook installation bolt) to Mount Bracket 2 on the vehicle chassis and do not tighten up completely. The same way to install Bracket left and Bracket right.

STEP 3: Mounting Rear Skid Bar on Bracket 1 before mounting Bracket 1 on Bracket 2. And do not tighten up the bolts completely. Reference the installation picture. Put Bracket 1 mounting on Bracket 2.

STEP 4: Adjust Brackets and Rear Skid Bar to the perfect position, tighten all hardware at this time at last.


STEP 5: Install is completed easily.

### INSTALLATION FIG.

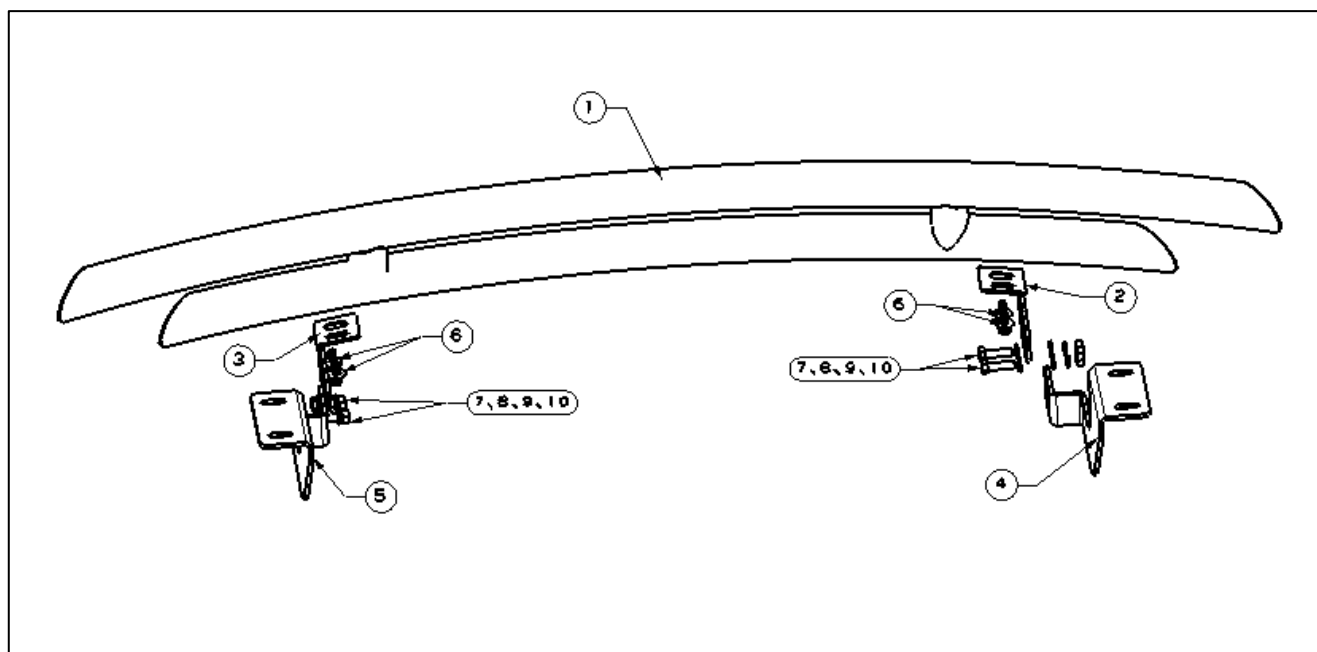

## INSTALLATION INSTRUCTIONS

Mounting Bracket 2 (left side)

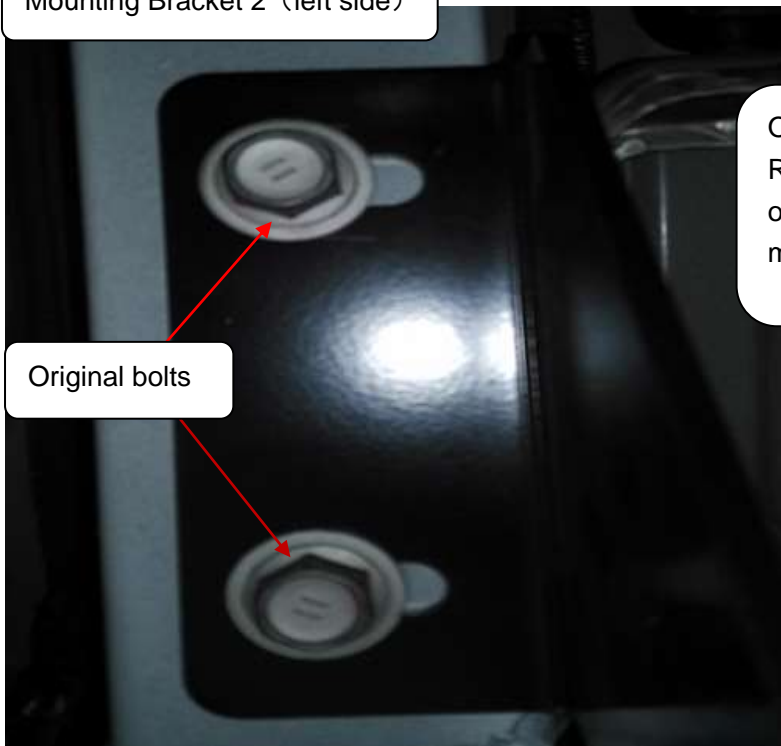

Original Pintle Hook

Remove the original Pintle Hook, and use original bolts (Pintle Hook mounting bolt) to mount Bracket 2(left)

Original bolts



Bracke1 mount on Bracted2



Adjust Brackets and Rear Skid Bar to the perfect position;  
tighten all hardware at this time at last.

### NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.