



INSTALLATION INSTRUCTIONS

**SS/S UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO
2015-FORD F150 2015) FLAT BASE WITH LED BRAKE LIGHT**

PART # RB001SS

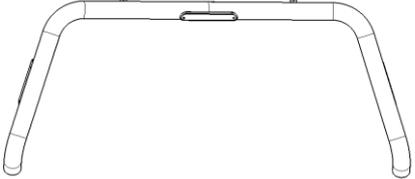

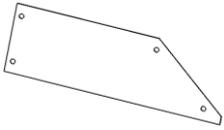
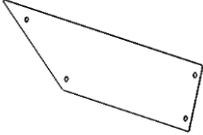
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.











Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | QTY | PICTURE | NO. | QTY | PICTURE |
|-----|-----|--|-----|-----|---|
| ① | 1 |  Pipe 1 | ② | 1 |  Pipe 2 |
| ③ | 1 |  Decoration plate-L | ④ | 1 |  Decoration plate-R |
| ⑤ | 1 |  Connecting plate (FOR LED LIGHT INSTALLATION) | ⑥ | 2 |  Block |
| ⑦ | 2 |  Red decoration plate | ⑧ | 2 |  Decoration plate backboard |

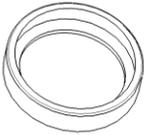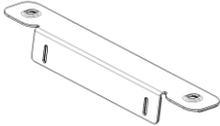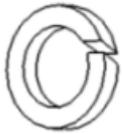S/S UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015) FLAT BASE WITH LED BRAKE LIGHT


| | | | | | |
|---|----|--|---|----|---|
| ⑨ | 4 |  Gum cover | ⑩ | 2 |  Bracket (TACOMA) |
| ⑪ | 2 |  Spring washer D8 | ⑫ | 2 |  Hex nut M8 |
| ⑬ | 1 |  Allen wrench S=8 | ⑭ | 1 |  Allen wrench S=4 |
| ⑮ | 1 |  Allen wrench S=5 | ⑯ | 2 |  Button head allen bolts M8_40 |
| ⑰ | 12 |  Flat washer D12 | ⑱ | 4 |  Large washer D8 |
| ⑲ | 8 |  Spring washer D6 | ⑳ | 16 |  Large washer D6 |
| ㉑ | 8 |  Button head allen bolts M6_20 | ㉒ | 6 |  Hex nut M12_40 |
| ㉓ | 6 |  Hex nut M12 | ㉔ | 8 |  Hex nut M6 |
| ㉕ | 6 |  Spring washer D12 | ㉖ | 4 |  Flat head allen bolts M12_40 |
| ㉗ | 1 |  Allen wrench S=2.5 | | | |

Installation Steps


Installation Figure:

Step 1: Verify all parts are present.

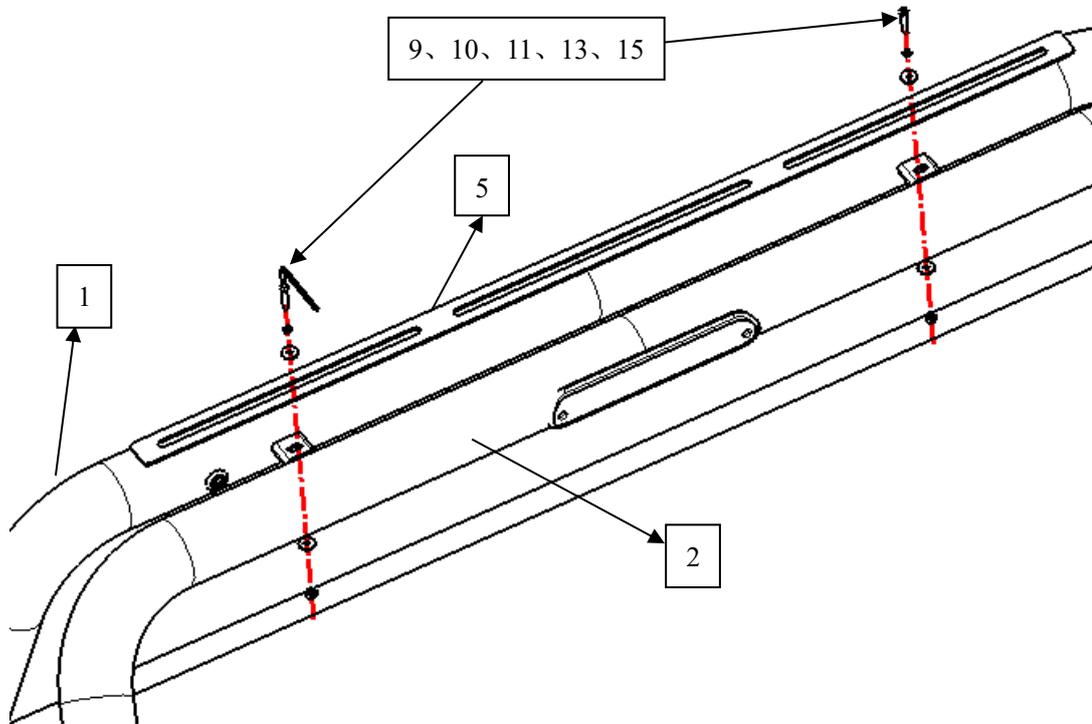
Step 2: Using wrench 15, install 1/2 main pipes and connecting plate 5 together with parts 9/10/11/13 as shown.



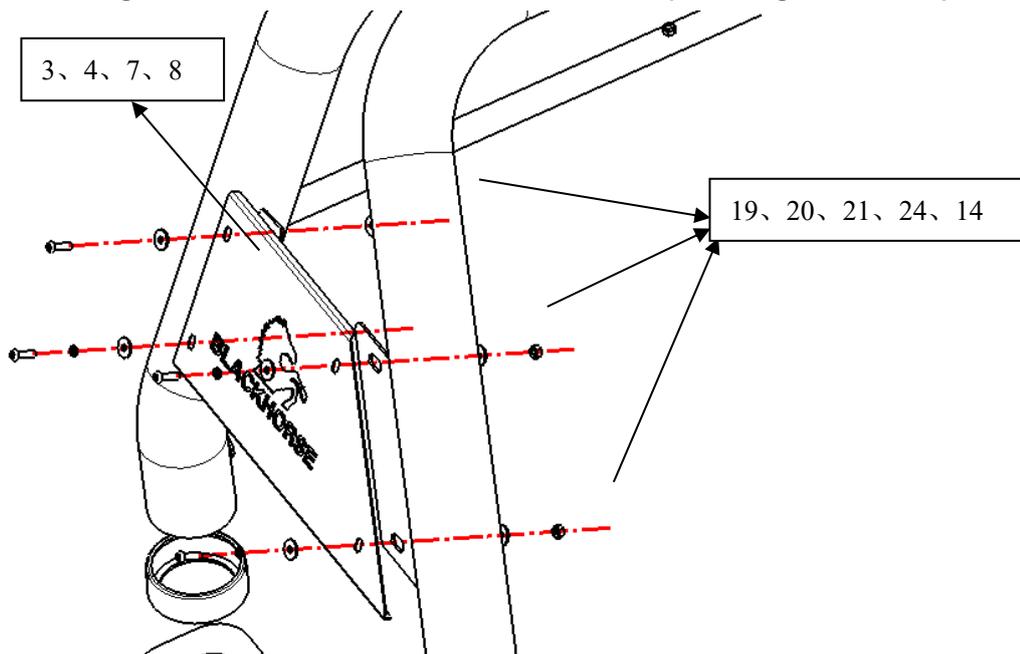
Step 3: Using wrench 14, install 3/4 decoration plate together with parts 19/20/21/24 as shown.



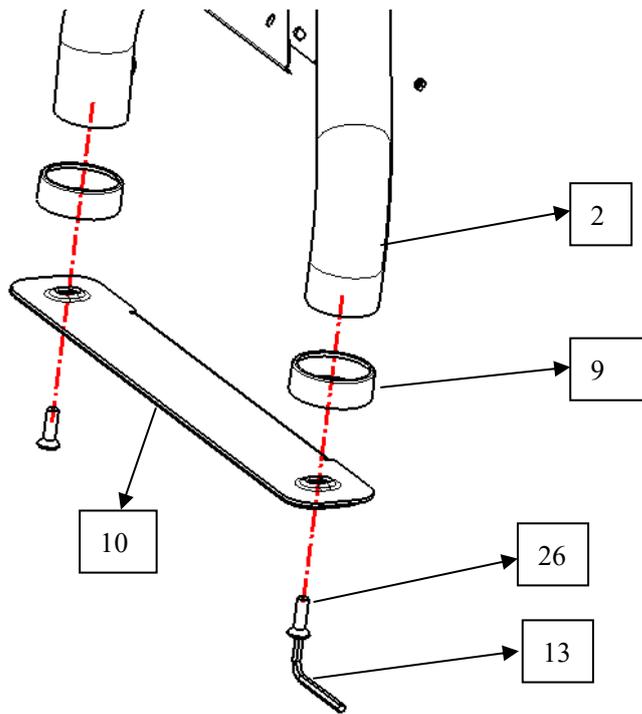
Step 4: Using wrench 13, install support plate 10 and gum cover 9 with part 26.



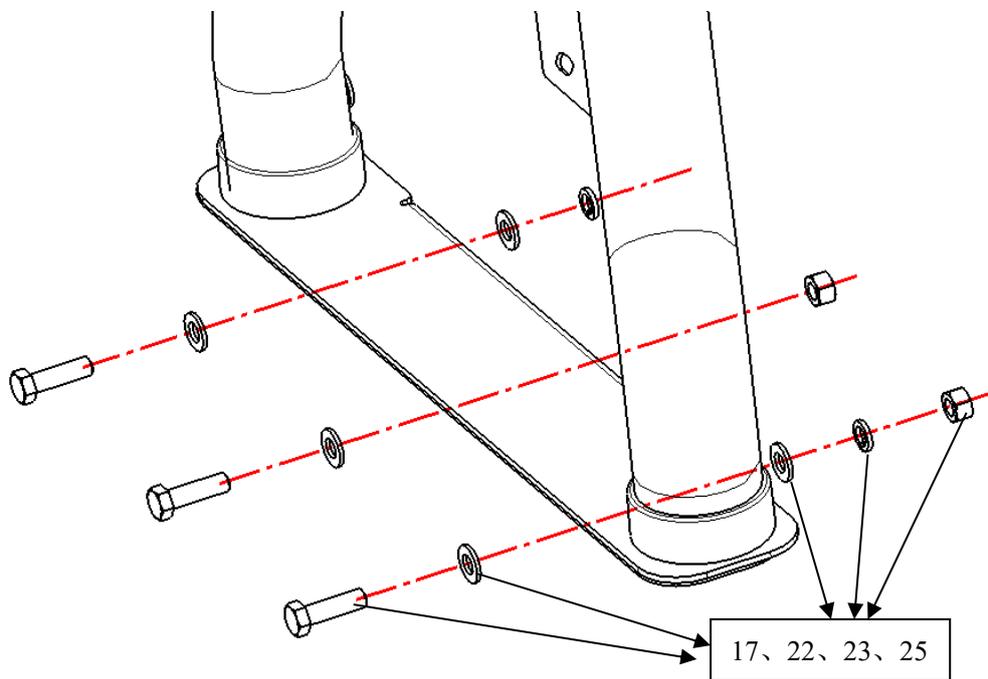Step 5: Fix the roll bar on the truck with parts 17/22/23/25. Drill holes on the truck if there are no installation holes. Test and make sure that the roll bar is steadily fixed, and then tighten all the hardware.



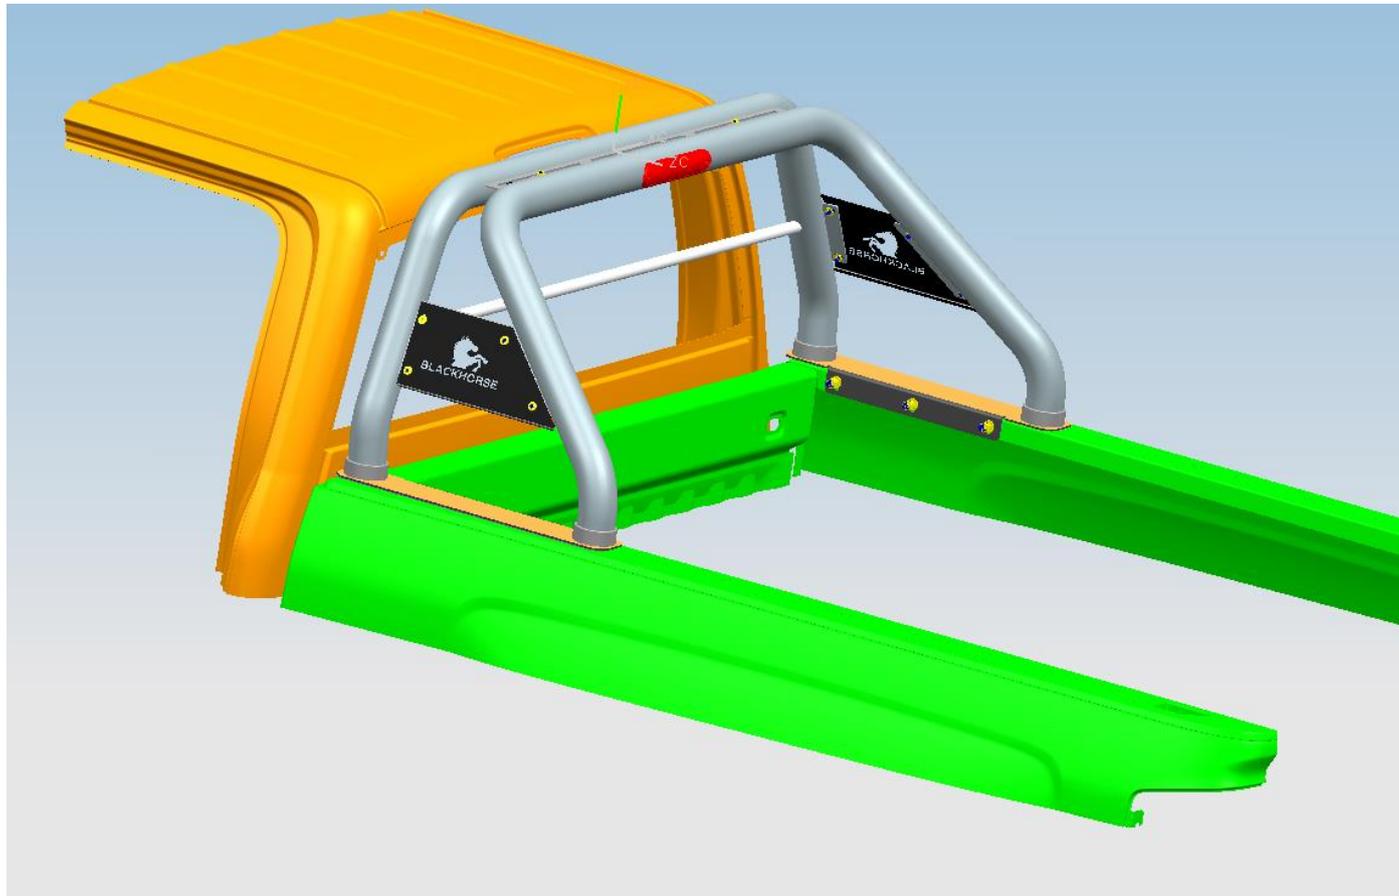Step 6: Installation is finished, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.