



# **INSTALLATION INSTRUCTIONS**

**BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE  
LAYER) FOR FORD EXPLORER 11-16**

**PART # F1**

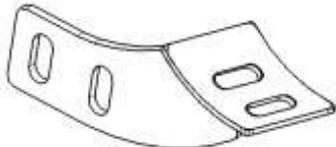
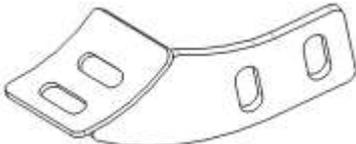
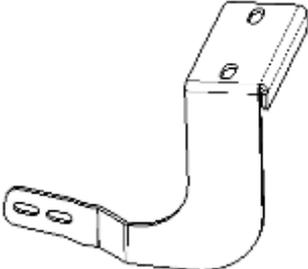
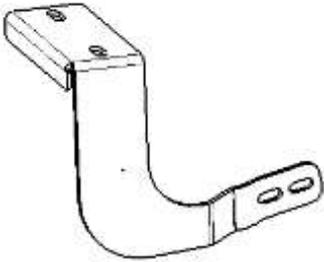
## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

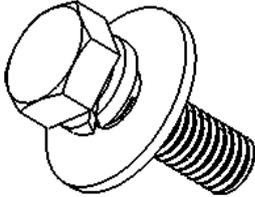
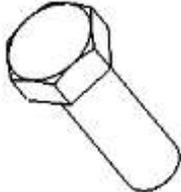
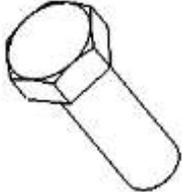
## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear bumper guard	②	1	 Bracket-A(L)
③	1	 Bracket-A(R)	④	2	 Bracket-B(L&R)
⑤	1	 Bracket-C(L)	⑥	1	 Bracket-C(R)

BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR FORD EXPLORER 11-16

⑦	4	 <p>Assembling bolt M8*25</p>	⑧	4	 <p>Hex Bolt M10*35</p>
⑨	8	 <p>Flat washer D10 (10x20x2mm)</p>	⑩	4	 <p>Lock washer D10</p>
⑪	4	 <p>Hex nut M10</p>	⑫	8	 <p>Flat washer D12 (12x24x2.5mm)</p>
⑬	4	 <p>Lock washer D12</p>	⑭	4	 <p>Hex nut M12</p>
⑮	4	 <p>Hex Bolt M12*35</p>			

## Installation Steps

STEP 1: Check all the contents are available in accordance with the above list.

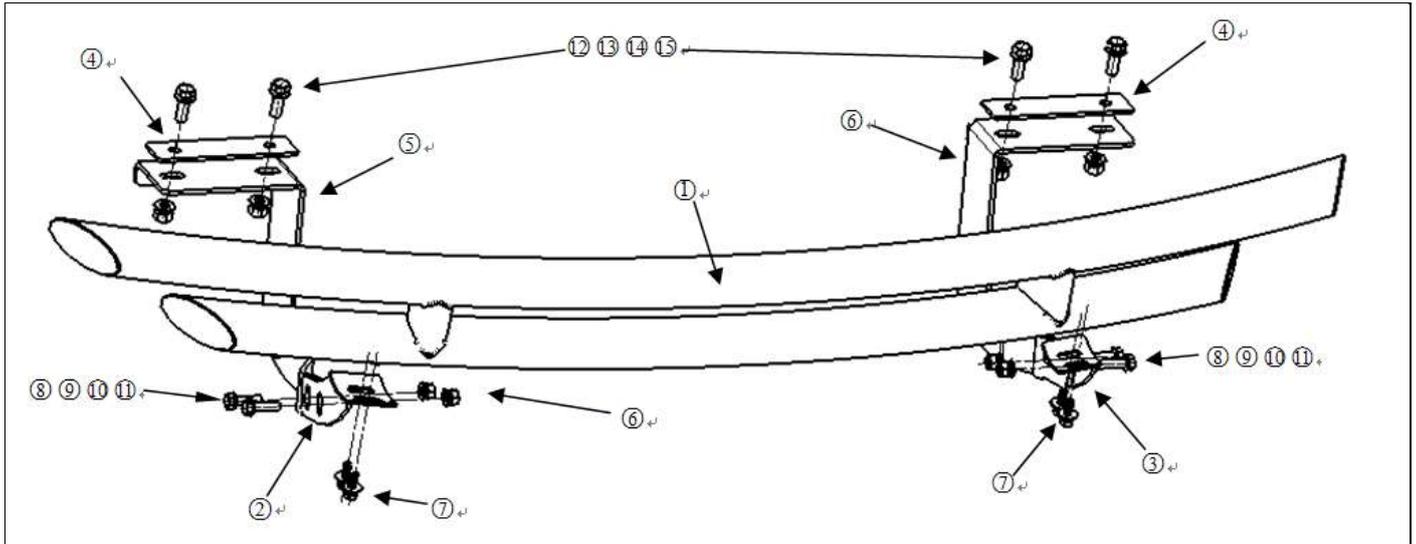
STEP 2: Using M12 bolt to install Bracket-B&C as below FIGURE shows. Snug but do not tighten hardware.

STEP 3: As the FIG. install the rear bar on Bracket-A. Do not tighten all the bolts.

STEP 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

STEP 5: Installation is finished.

INSTALLATION FIGURE:



**NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.