



**INSTALLATION INSTRUCTIONS**  
**BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD**  
**(DOUBLE LAYER) FOR HONDA CRV 07-15**  
**PART # H2**









## Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


## Parts List

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear bar	②	1	 Bracket-A-L
③	1	 Bracket-A-R	④	1	 Bracket-B-L
⑤	1	 Bracket-B-R	⑥	4	 Hex bolt M8*25
⑦	4	 Hex bolt M10*35	⑧	4	 Hex bolt M10*35

⑨	12	 Flat washer D10	⑩	8	 Spring washer D10
⑪	4	 Hex nut D10			

## Installation Steps


FIG.1

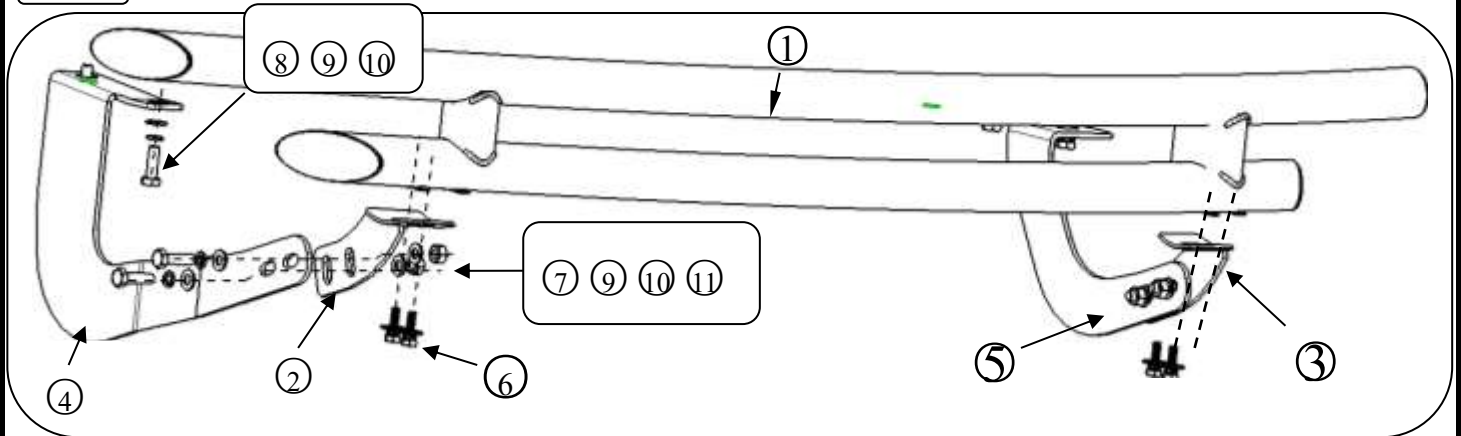


Remove the skid plate



Bracket-B will across the skid plate.

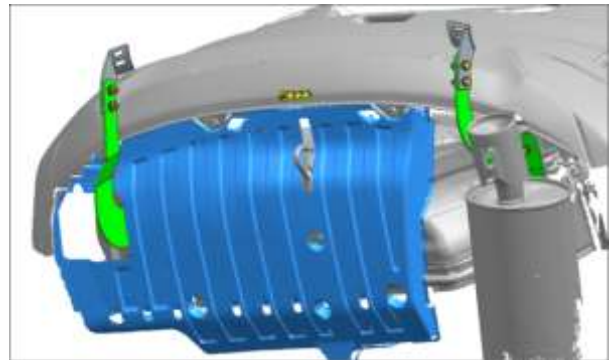

**FIG.2**

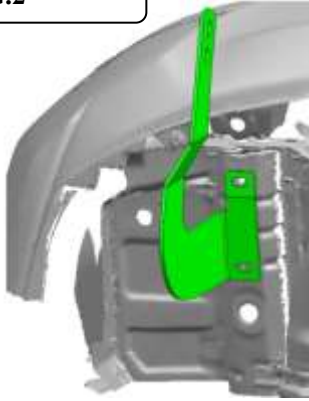

**FIG.3**



Step 1: Check all the contents are available in accordance with the above list.

Step 2: Remove the bottom factory skid plate, using M10\*35 Hex bolts ( ⑧ ) to install Bracket-B-L&R. Do not tighten all the bolts. **(FIG.2&3)**

Step 3: Install the factory skid plate. Then install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as **FIG.1**. Do not tighten all the bolts.

Step 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

Step 5: Install the factory skid plate to original position. The small size skid plate is no need to install.

Step 6: Installation is finished.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.