



# **INSTALLATION INSTRUCTIONS**

**BLACK MODULAR GRILLE GUARD**

**FOR CHEVY TRAILBLAZER (EXT) 02-09**

**PART # 17GK26MA**







## Before Installation




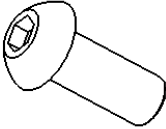
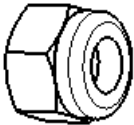
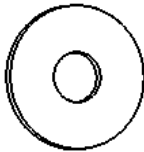
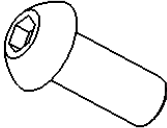

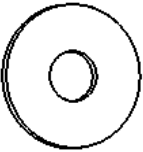
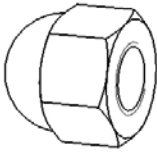


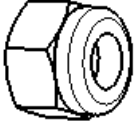
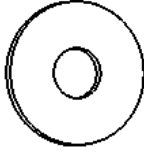

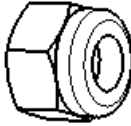
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.





## Care and Cleaning

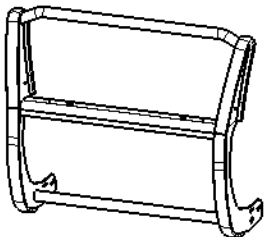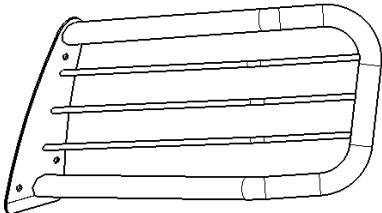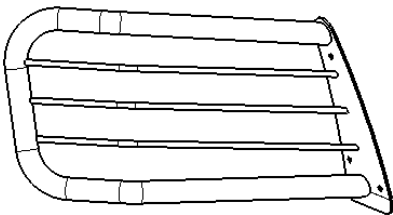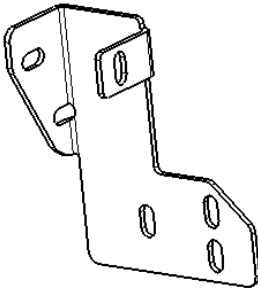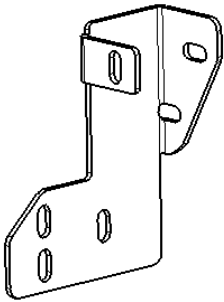- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts List


NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Front Guard	②	1	 Left Brush Guard
③	1	 Right Brush Guard	④	1	 Left bracket
⑤	1	 Right bracket	⑥	1	 Connecting bracket A-L

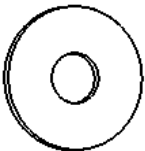⑦	1		⑧	1	
		Connecting bracket A-R			Connecting bracket B-L
⑨	1		⑩	4	
		Connecting bracket B-R			Socket head cap screw M6_20
⑪	4		⑫	8	
		Hex nut M6			Flat washer D6
⑬	6		⑭	6	
		Socket head cap screw M8_25			Spring washer D8
⑮	16		⑯	6	
		Flat washer D8			Cap nut M8
⑰	2		⑱	2	
		Hex nut M8			hexagon bolt M8_30
⑲	4		⑳	8	
		Hex nut M10			Flat washer D10
㉑	4		㉒	6	
		hexagon bolt M10_30			Hex nut M12

23	12	 Flat washer D12	24	6	 hexagon bolt M12_35
25	1	 Allen wrench S=5	26	1	 Allen wrench S=4

### Installation Steps

Install left and right brush guard on the front guard as figure 1.

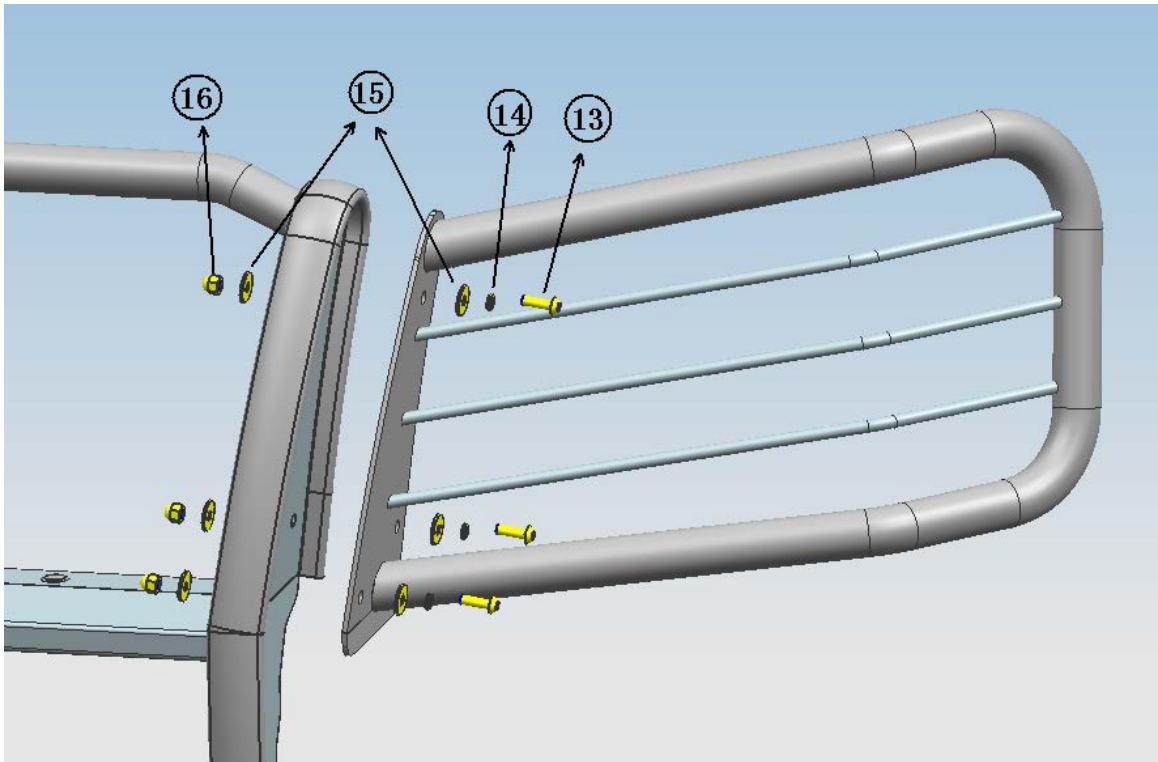



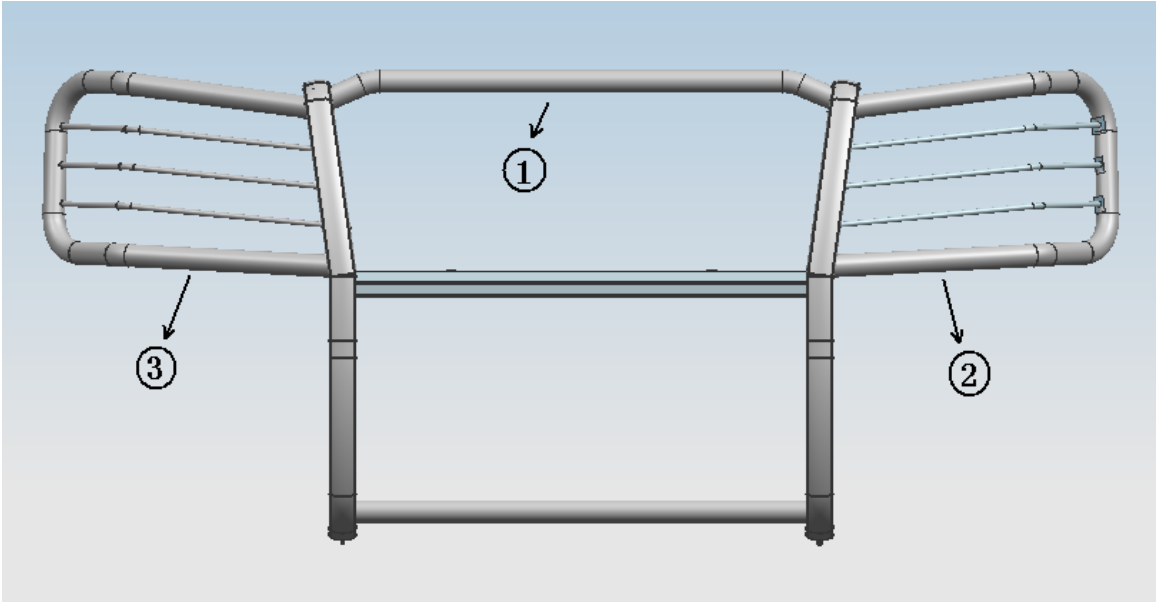


Figure 2: Brackets installation

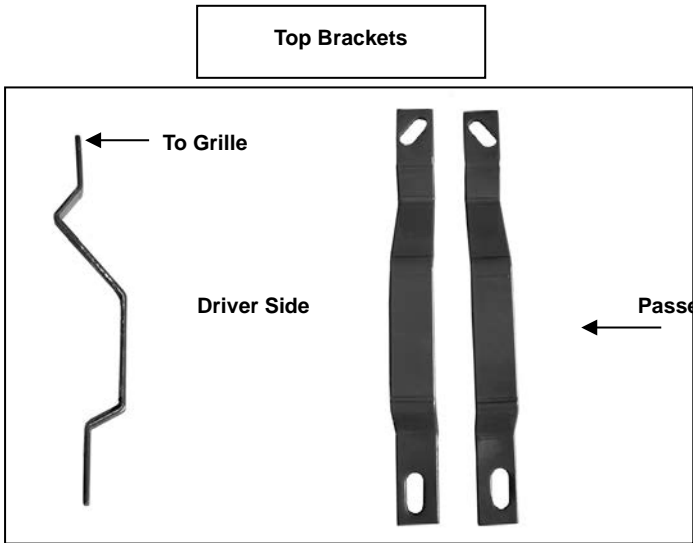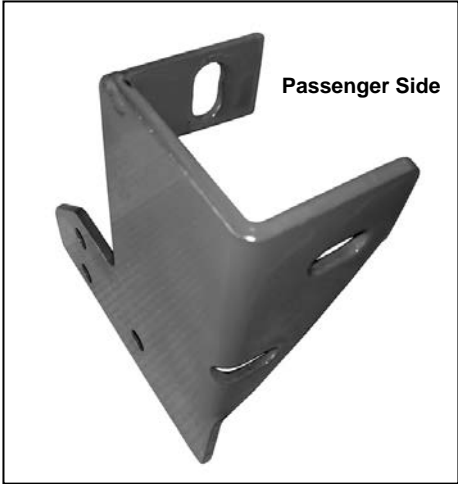

**PROCEDURE:**



1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. **NOTE:** The factory bottom bumper air dam must be permanently removed or optional cutting required to install this Grille Guard. **If you are removing**, use a flat screw driver to remove one push type fasteners on each side; then gently pull air dam towards the front of the vehicle to unfasten clips. **If you are cutting**, remove air dam and set on clean working area. Measure both sides 22" around the air dam from the outside towards the inside and cut a ½" gap. **WARNING!** Do not cut the air dam all the way through; leave at least ¼" on the top where the clips are; then re-install it back to the vehicle **(Figure 1)**.
3. Locate the three factory holes and a clip with bolt on the driver's side body mount channel **(Figure 2)**. Remove the factory nut clip with bolt from vehicle.
4. Position driver side Mounting Bracket into body mount channel. **NOTE:** "U" shaped mounting tabs of the Bracket should be facing the outside of the vehicle. Partially mount the front end of the "U" shaped mounting tab to body mount channel where you previously removed the factory bolt with nut clip using the included (1) 8mm x 30mm Hex Head Bolts, (2) 8mm Fender Washers, and (1) 8mm Nylock Nut. Attach rear end of the "U" shaped mounting tab using the included (2) 10mm x 30mm Hex Head Bolts, (2) 10mm Nylock Nuts, and (4) 10mm Flat Washers **(Figure 3)**.
5. Repeat steps 3 & 4 for passenger side Mounting Bracket.
6. Open the hood and remove the four screws across the top of the factory grille shell **(Figure 4)**. Once you have removed the screws, gently pull on the grille shell just enough to gain access to remove the factory bolt on each side of the bottom grille shell support **(Figure 5)**. **WARNING!** Do not pull too much on the factory grille shell or damage to the grille shell may occur.
7. Insert Top Bracket in an angle through factory grille shell until you reach the mounting location on the bottom grille shell support, and then straighten it **(Figure 6 & 7)**. Use the factory bolt removed in step 6 to attach Top Bracket to vehicle. Repeat this step for passenger side Top Bracket.
8. With help position the Grille Guard on the inner side of Mounting Brackets and attach it using the included (6) 12mm x 35mm Hex Head Bolts, (6) 12mm Nylock Nuts, and (12) 12mm Flat Washers **(Figure 8)**. Do not tighten at this time. **NOTE:** When positioning the Grille Guard, make sure that the Top Brackets are under the Grille Guard's light bar.
9. From underneath of Grille Guard's light bar, attach Top Brackets using the included (2) 6mm x 20mm Allen Bolts, (2) 6mm Nylock Nuts, and (4) 6mm Flat Washers **(Figure 9)**.
10. Adjust Grille Guard properly, and then tighten all hardware at this time.
11. Re-install the upper section of the grille shell back to the vehicle using the factory hardware.
12. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.



**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.


**(Driver Side Installation Shown)**


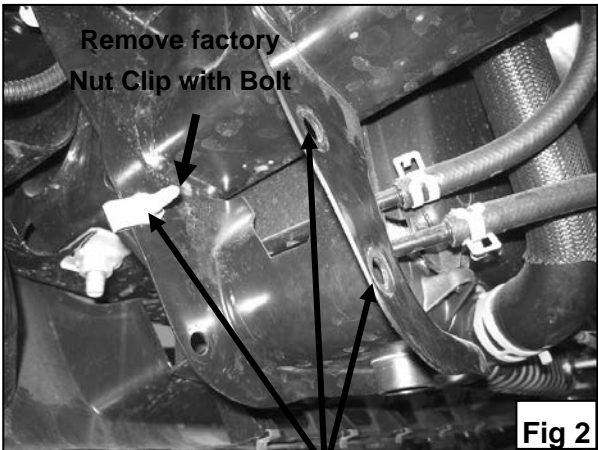
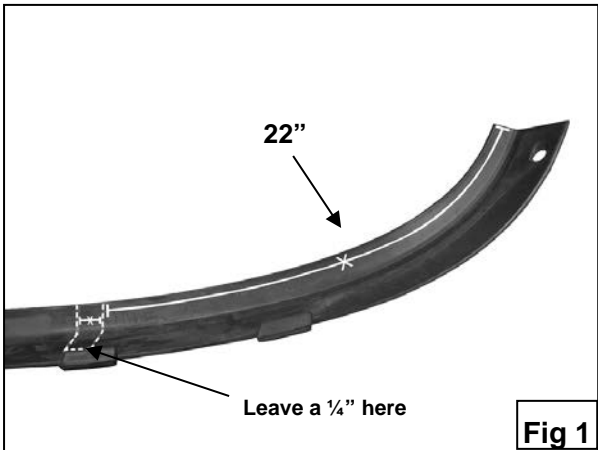


Bracket mounting

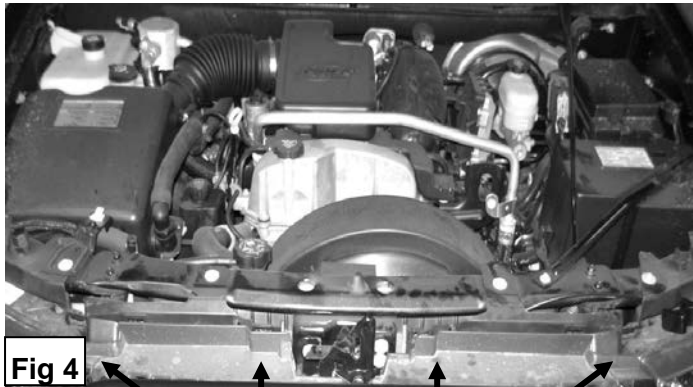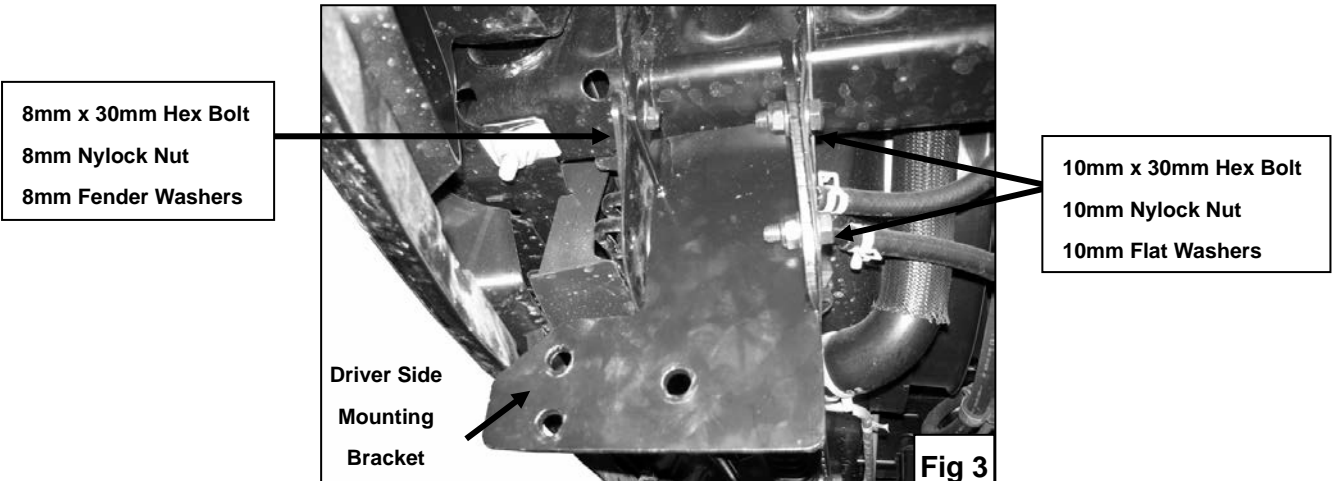

Remove the four factory screws from across the grille shell's top

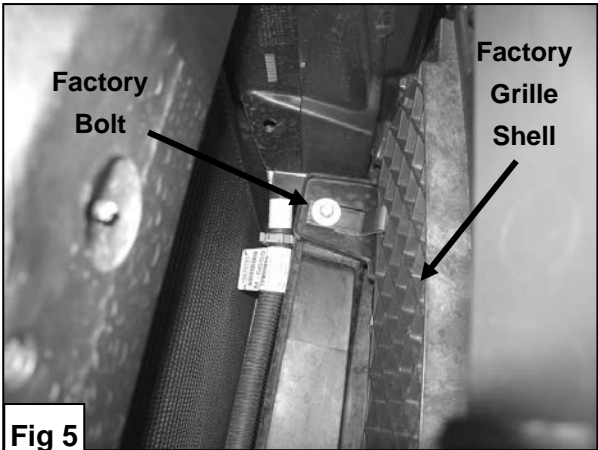

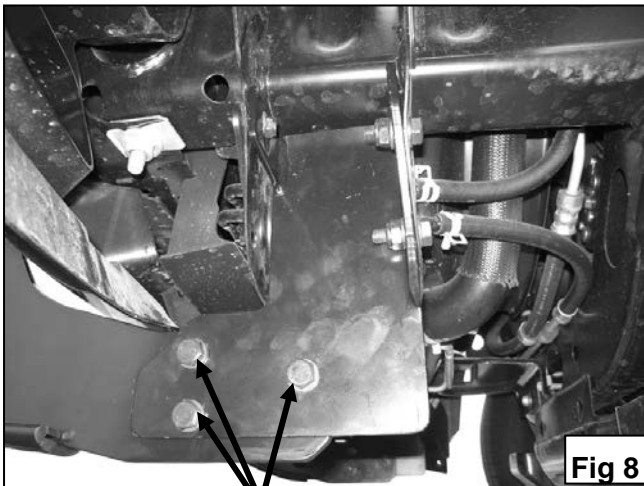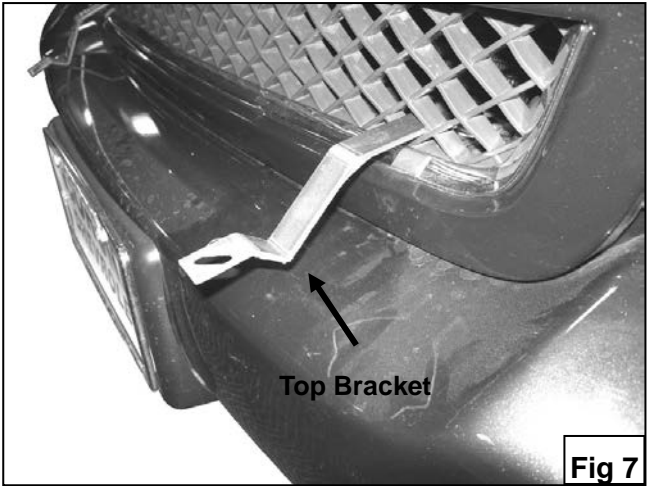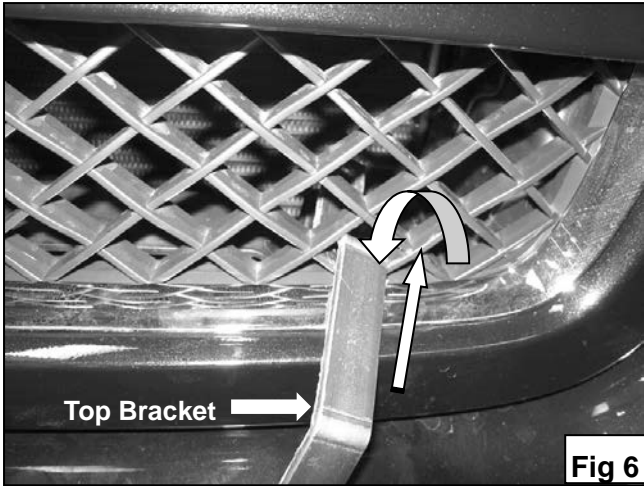

- 12mm x 35mm Hex Bolts
- 12mm Nylock Nuts
- 12mm Flat Washers



- 6mm x 20mm Allen Bolts
- 6mm Nylock Nuts
- 6mm Flat Washers



**NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.