

INSTALLATION INSTRUCTIONS

BLACK MODULAR GRILLE GUARD FOR CHEVY SILVERADO 1500 03-07/ SILVERADO 1500HD 03-07 / SILVERADO 2500LD 03-07 (ALL FITS 07 CLASSIC ONLY)

PART # 17GT25MA

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
1)	1	Front Guard	2	1	Left Brush Guard
3	1	Right Brush Guard	4	1	Left Bracket
(5)	1	Right Bracket	6	1	Left Connecting Bracket

BLACK MODULAR GRILLE GUARD FOR CHEVY SILVERADO 1500 03-07/ SILVERADO 1500HD 03-07 / SILVERADO 2500LD 03-07 (ALL FITS 07 CLASSIC ONLY)

7	1	Right Connecting Bracket	8	6	Hex Bolt M12_30
9	6	Flat Washer D12 (12x37x3mm)	0	6	Nylon Lock Nut M12
0	6	Flat Washer D8 (8x24x2mm)	(12)	6	Spring Washer D8
13	2	Cap Nut M8	(1)	16	Button Head Bolt M8_25
13	6	Allen Wrench S=5	(6)	4	Hex Bolt M10_25
17	1	Flat Washer D10 (10x20x2mm)	(18)	1	Nylon Lock Nut M10

Installation Steps

Installation Drawing

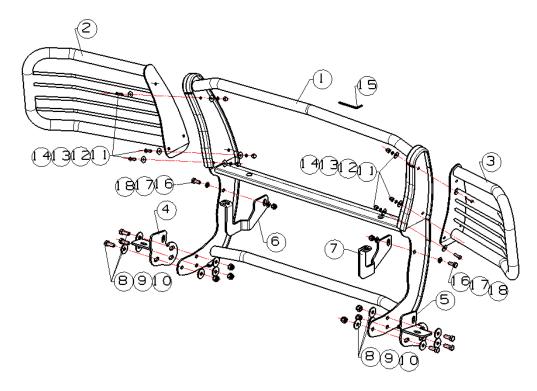

Step 1:Install two brush guards on the front guard.

Step 2:Install the brackets and the connecting brackets on the car.

Step 3:Install the whole front guard on your car.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.