

INSTALLATION INSTRUCTIONS BLACK MODULAR GRILLE GUARD FOR TOYOTA SEQUOIA 01-04/ TUNDRA 04-06 PART # 17TS27MA

Before Installation

- READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION. NOTE: PICTURES ARE FOR REFERENCE ONLY, ACTUAL PART MAY BU DIFFERENT. INSTALLATION IS THE SAME.
- YOU MAY NEED TO PERIODICALLY TO RE-TIGHTEN ALL HARDWARE, SUCH AS ONE MONTH OR TWO MONTT.

Parts list


NO.	QTY	PICTUER	NO.	QTY	PICTUER
1	1	GRILL GUARD	2	2	Left & Right Brush Guard
3	2	Frame Mounting Bracket	4	2	Top Bracket
5	6	Hex Nut M12_35	6	12	Flat Washer D12
7	6	Spring Washer D12	8	6	Hex Nut M12
9	6	Hex Bolt M8_25	10	12	Flat Washer D8
11)	6	Spring Washer D8	12	6	Type 1 non-metallic insert Hexagon lock nut M8
13	6	Hex Bolt M6_25	14) 2 of 4	6	Flat Washer D6


Page 2 of 4


BLACK MODULAR GRILLE GUARD FOR TOYOTA SEQUOIA 01-04/ TUNDRA 04-06									
15	6	Type 1 non-metallic insert Hexagon lock nut M6	16	1	Allen Wrench S=5				
17	1	Allen Wrench S=4							

Installation Steps

INSTALLING PICTURE

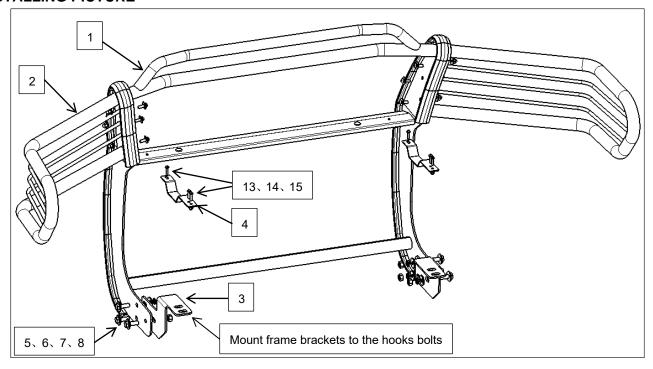

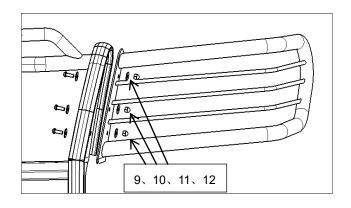

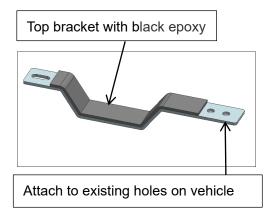

INSTALLING THE FRAME BRACKETS

1) REMOVE FACTORY TOW HOOKS (BUT DO NOT DISCARD THE FACTORY BOLTS) THE BOLT PATTERN ON THE FAAME MOUNTING BRACKETS WILL BE POSITIONED IN MANNER SHOWN IN ILLUSTRATION (PASSENGER SHOWN) ATTACH FRAME BRACKETS USING THE FACTORY BOLTS.

INSTALLING THE FRONT BAR

- 2) LINE UP THE THREE HOLES ON THE LOWER PORTON OF FRONT BAR WITH THE THREE HOLES ON THE FRAME BRACKETS(OUTER EDGE)USING THE M12x30 HEX BOLT ,M12 HEX NUT AND 12mm FLAT WASHERS TO FASHEN THE FRONT BAR TO THE FRAME BRACKETS.
- 3) REMOVE THE REVETS LOCATED UNDERNEATH THE VEHICLE IN ORDER TO INSTALL THE L-SUPPORT BRACKETS, ATTACH L-SUPPORT BRACKETS USING THE M6X25 SCREWS, M6 HEX NYLOK NUTS, 6mm FLAT WASHER AND M12x30 HEX BOLTS, 12mm FLAT WASHERS AND M12 HEX NUT.
- 4) ONCE THE FRONT BAR IS ATTACHING TO ALL MOUNTING BRACKETS ALIGN THE LEFT AND RIGTH SIDE OF THE FRONT BAR TO THE BUMPER AND TIGHTEN ALL FASTENERS.

