

INSTALLATION INSTRUCTION








**SS Oval Rear Bumper
Guard (Double Layer)
13-15 Mercedes GL X166
PART #8B021SS-DL**




Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.
- When you use it, please check this parts at a fix time-lapse, such as one month or two months.

PART LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Rear guard		1		⑤	Hex Nut		8	M12
②	Mount Bracket		2		⑥	flat washer		12	M12
③	"U" Bolt		2	M12	⑦	Lock Washer		8	M12
④	Bolt		4	M12X30					

INSTALLATION PICTURES

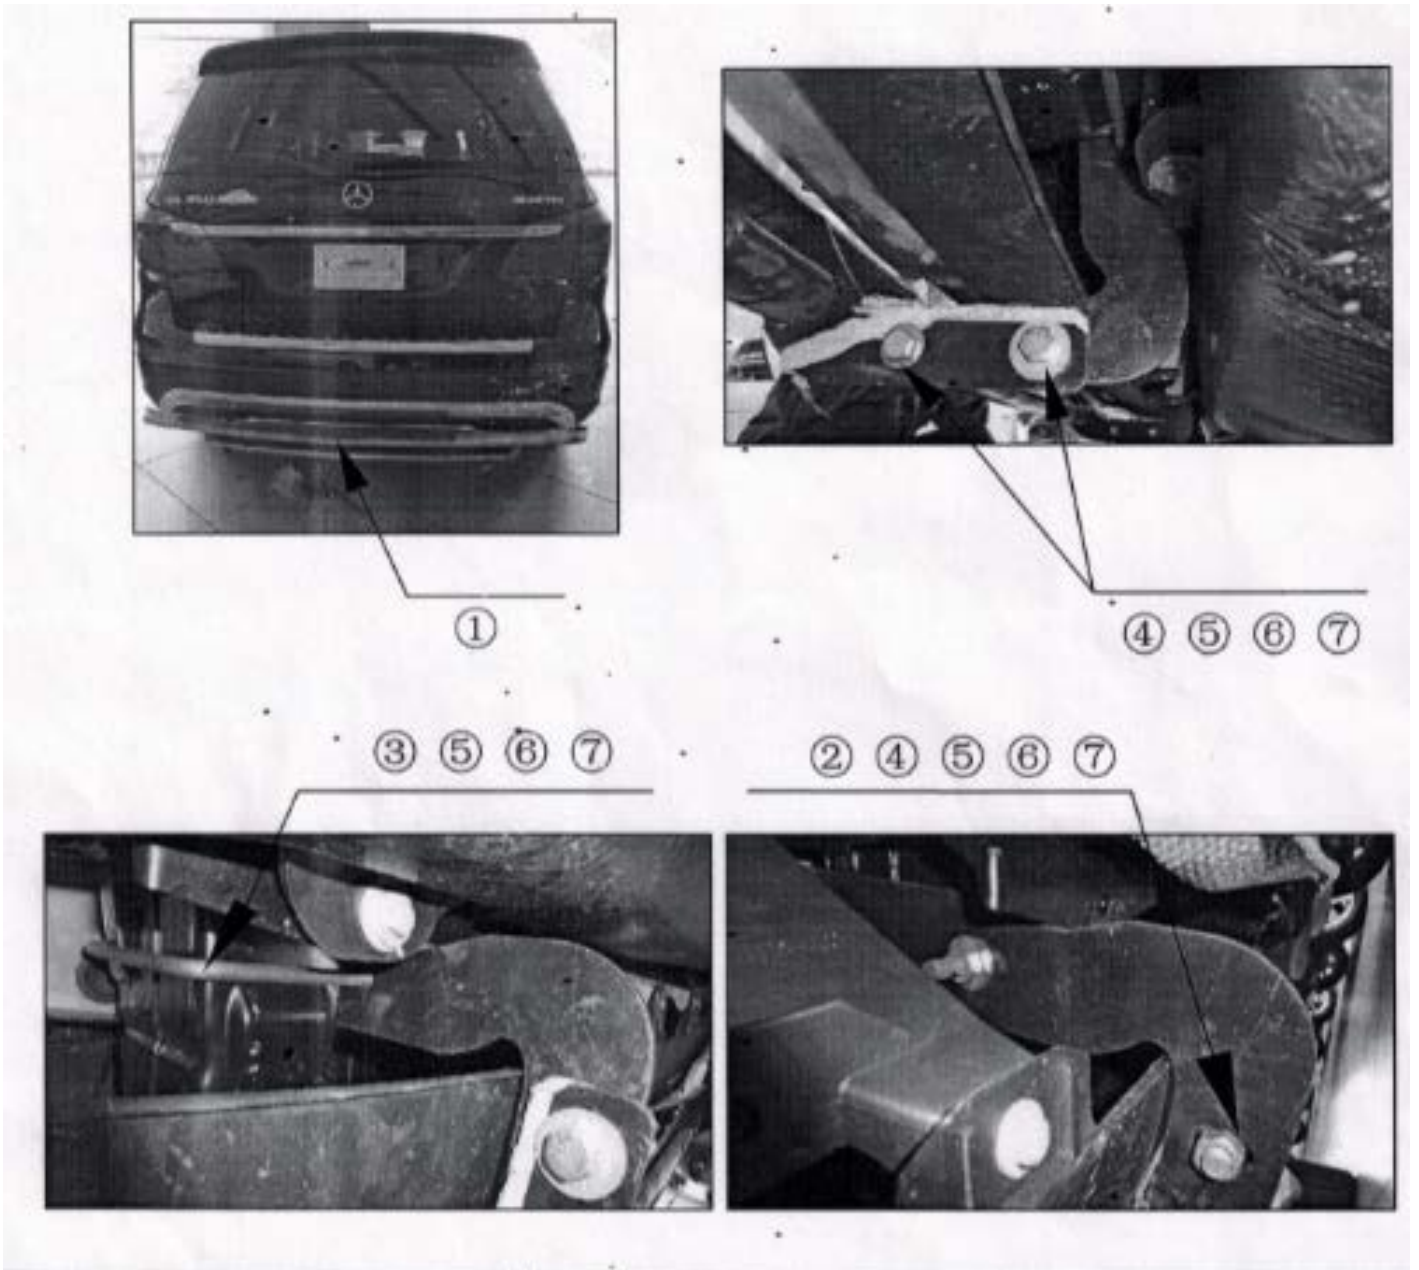

Installation Steps:

Step 1: Check the parts in the box carefully if match above list.

Step 2: Please prepare the tools for installation, follow as: 10 – 12 wrench, 14 – 17 wrench, 17- 19 wrench.

Step 3: Put the mount Bracket into the girder of the car, and tighten it with (3) “U” Bolt.

Step 4: Install the rear guard to the mount bracket, and tighten it with (4) MM12X30 BOLT.

Step 5: Installation is finished.