

INSTALLATION INSTRUCTIONS

3" Round Stainless Steel Side Steps

2015-2016 Nissan Murano

PART # 9B8503SS



**BLACK HORSE
OFF ROAD**


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

Part List

No.	NAME	QTY	REMARK	No.	NAME	QTY	REMARK
①	Side Bar(right)	1		⑪	Hexagon Bolt	12	M10x30
②	Side Bar(left)	1		⑫	Large Washer	14	φ10x30x2.5
③	Front Bracket(right)	1		⑬	Spring Washer	14	φ10
④	Front Bracket(left)	1		⑭	Hexagon Nut	2	M10
⑤	Middle Bracket(right)	1		⑮	T Bolt 1	10	M8x35
⑥	Middle Bracket(left)	1		⑯	Plastic Fixture	10	Φ8
⑦	Rear Bracket(right)	1		⑰	Large Washer	10	φ8x25x2.0
⑧	Rear Bracket(left)	1		⑱	Spring Washer	10	φ8
⑨	T Bolt 2	2	M10*40	⑲	Hexagon Nut	10	M8
⑩	Plastic Fixture	2	Φ12				


INSTALLATION PICTURE

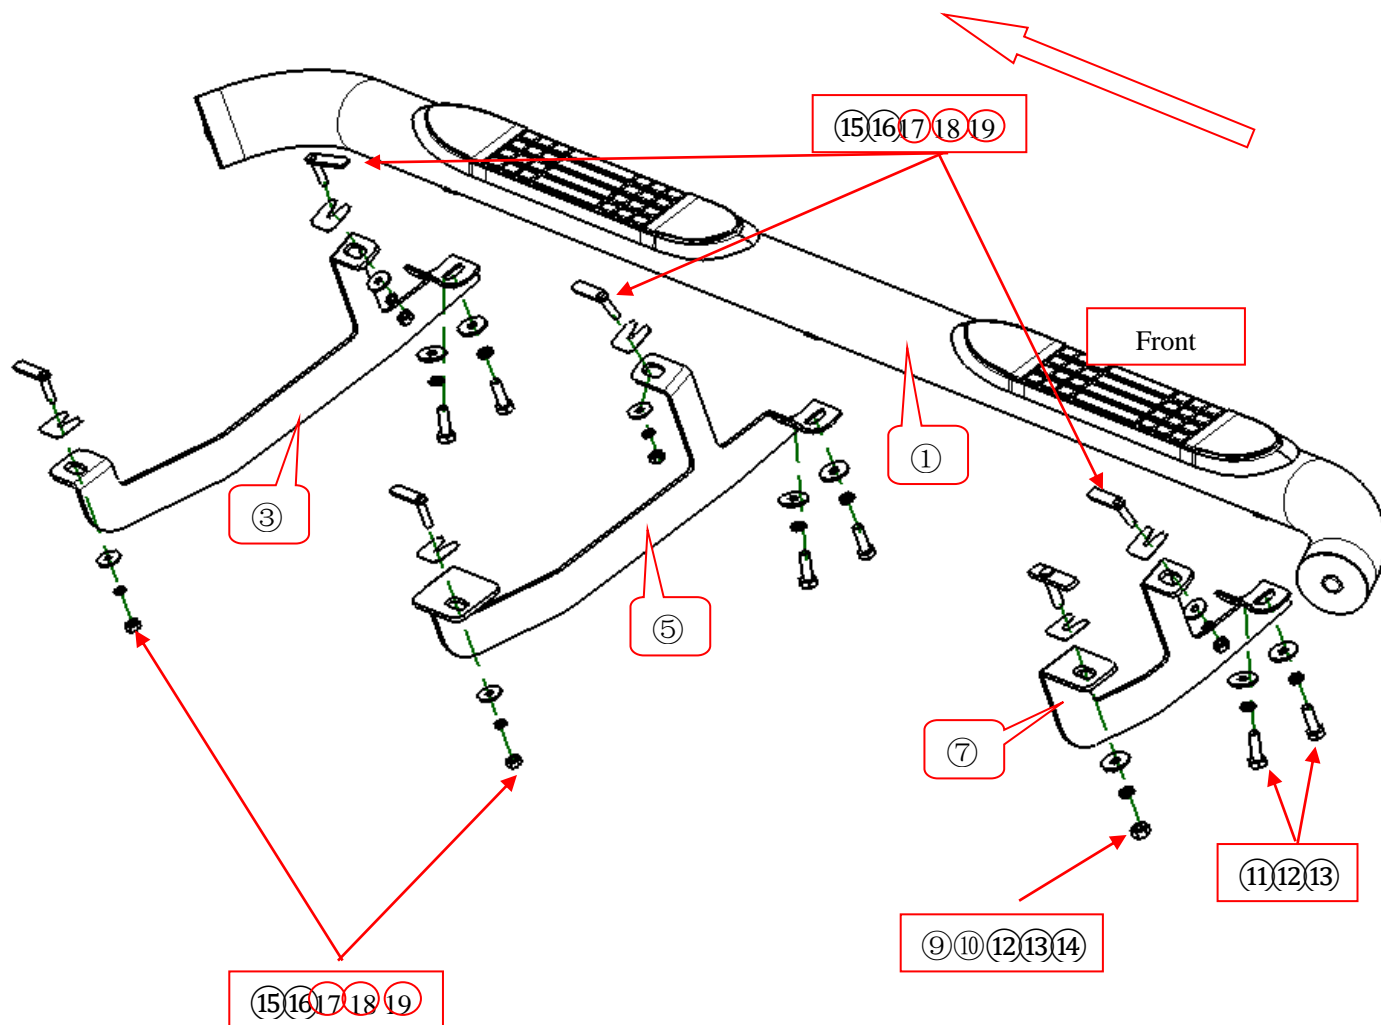


INSTALLATION PROCEDURE

Step 1: Refer to Part List to check if all hard ware are included.

Step 2: Refer to the following picture to install front, middle and rear brackets.

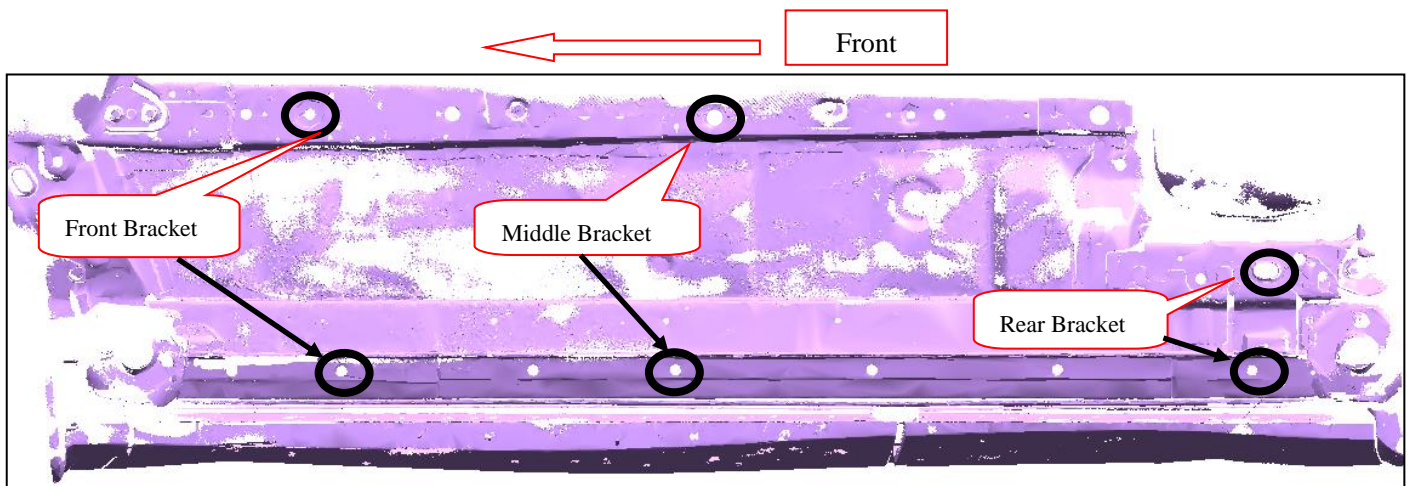

Step 3: Install the side bar on the brackets and then adjust them to the proper positions.

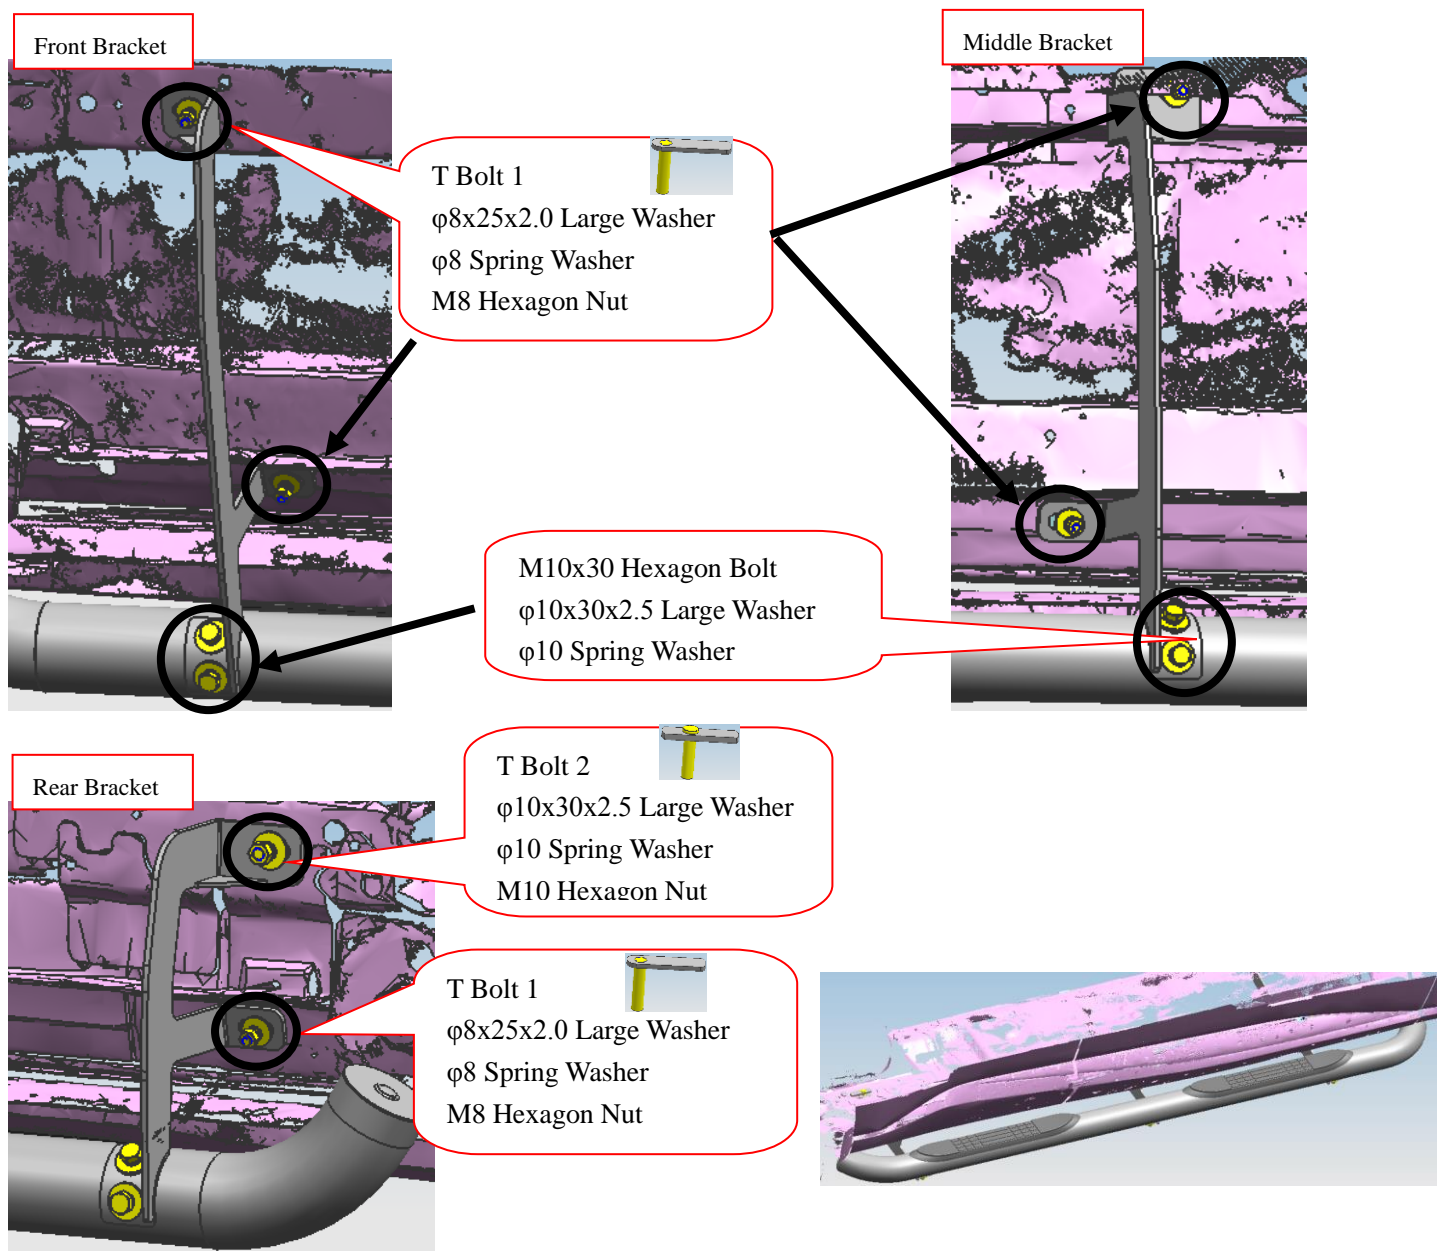

Step 4: Check if all hard ware are installed and then fasten all to complete the installation.

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.