



INSTALLATION INSTRUCTIONS

BLACK ARMOUR ROLL BAR FOR FOR NISSAN FRONTIER 2019-2020

(NEW SQUARE ONE)

PART # ARB-NIFRB


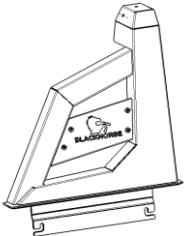
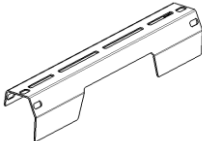






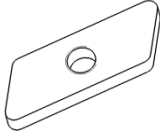
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Left installation part	②	1	 Right installation part
③	1	 Connection plate	④	4	 Hex nut M10_25
⑤	10	 Flat washer D10	⑥	6	 Button head allen bolts M10_25
⑦	6	 Hex nut M10	⑧	10	 Spring washer D10
⑨	1	 Allen wrench S=6	⑩	4	 Plate Nut M10


Installation Steps

Step1: Assemble ①Left installation part, ②Right installation part and ③Connection plate with standard parts ⑤Flat washer D10, ⑥Button head allen bolts M10_25, ⑦Hex nut M10, ⑧ Spring washer D10. Lock all the standard parts after adjust the position.

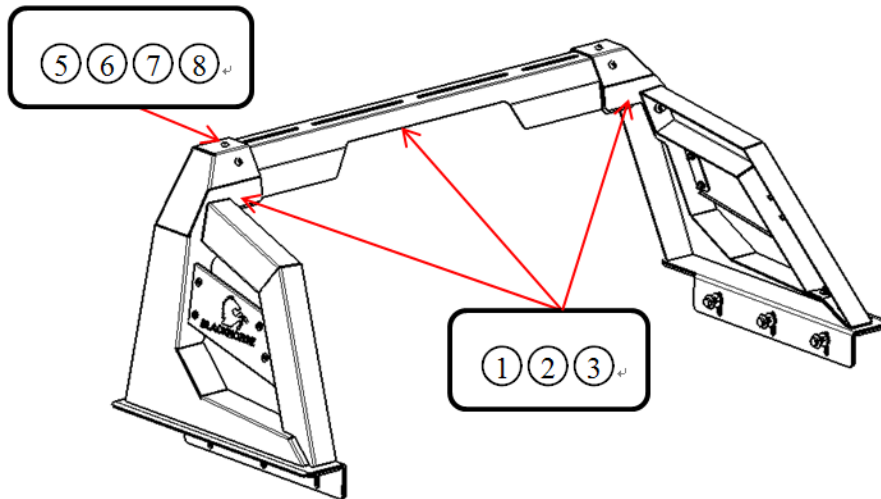

Step2: Place the roll bar on the truck in an appropriate location.

Place the roll bar on truck bed and adjust suitable position. Slide ⑩Plate Nut M10 into the trunk chute. Use standard parts ④Hex nut M10_25 ⑤ Flat washer D10, ⑧Spring washer D10, ⑩ Plate Nut M10 to fix roll bar on the trunk.

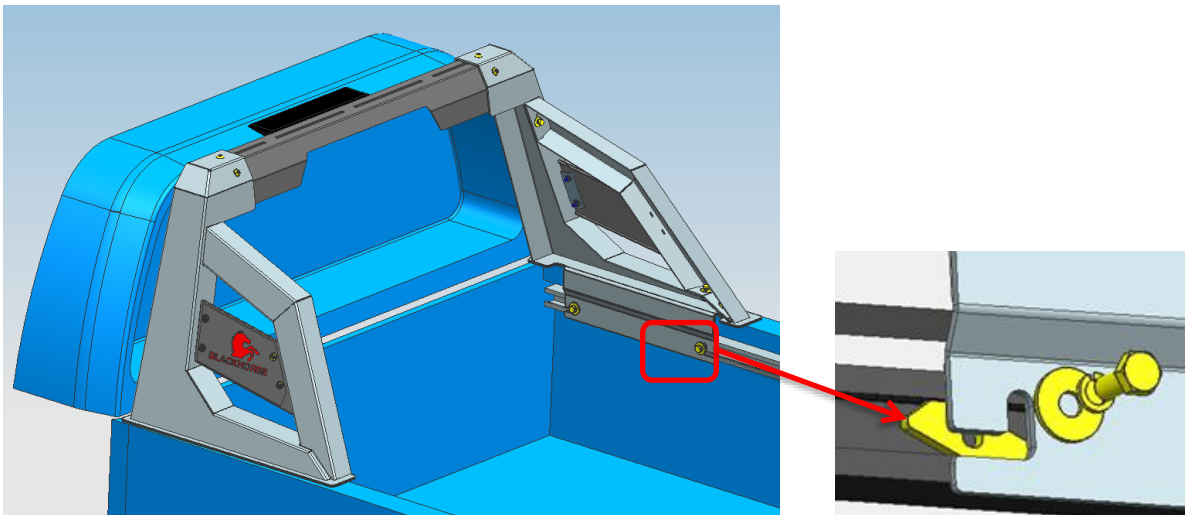

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.