



BLACK HORSE OFF ROAD®

Installation Instructions

Workhorse Auto Safe

Part# ASTS01 Fits: - TOYOTA SIENNA 2021-2023

Parts List:

- 4 pcs Self-tapping screws
- 4 pcs Acorn nuts

Tools Needed:

Socket Wrench
Phillips Screwdriver
Hole Punch

Installation:

STEP 1 Empty the armrest box including the factory mat.

STEP 2 Position the Top Panel in the armrest box.

STEP 3 Open the Lid and put the Side Panels under the top panel. The side panels are different, see Fig A. And verify the screws of the top panel are inserted accurately into the pre - drilled holes in the side panels, see Fig B.

Fig A


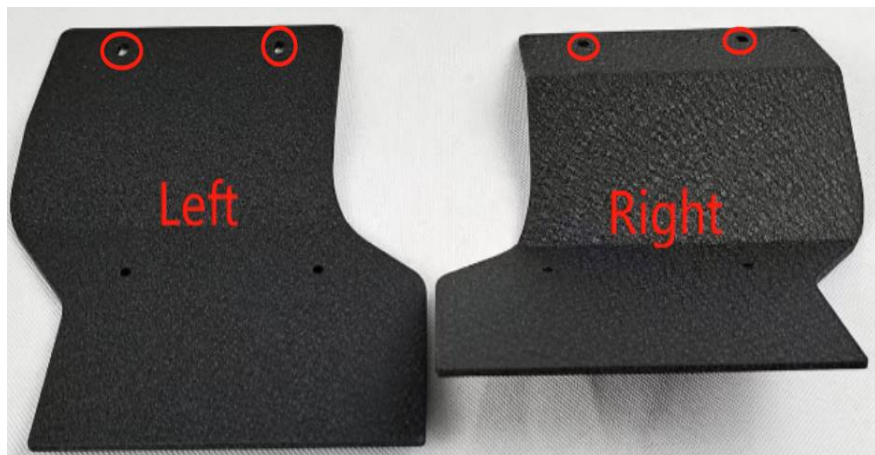


Fig B

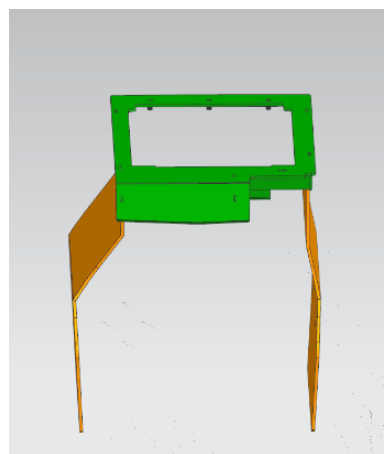

STEP 4 Install the acorn nuts on the exposed threads on the top panel and tighten down.

STEP 5 Use the hole punch to punch four pilot holes in the inner wall of the armrest box using the pre-drilled holes in the brackets as templates. Screw the 4 self-tapping screws into the side panels through into the 4 pre - drilled holes in the side panel. DO NOT OVER-TIGHTEN,

STEP 6 Re-insert the padding.



Setting the Combination

The factory preset combination is 0-0-0-0

Please keep the safe door open when changing the combination.

To change the combination, insert the coding pin provided into the hole in the side of the lock.



Remove the coding pin to lock in the combination. Test the lock operation before closing the safe door.

Please note: The combination can only be changed again by setting the saved combination and inserting the pin. Please record the combination on the card provided.