



INSTALLATION INSTRUCTIONS

**BLACK MODULAR ROLL BAR FORNISSAN FRONTIER 2019-2020
WITH ORIGINAL CARGO BASKET (FLAT BASE WITH LED BRAKE
LIGHT)(MR STYLE)**

PART # ATRB-NIFRB

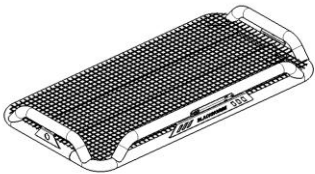
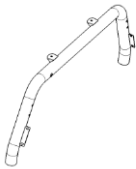
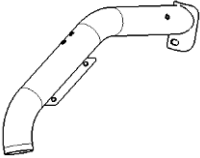
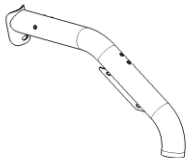
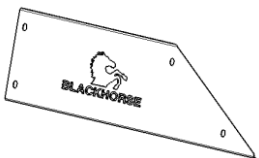
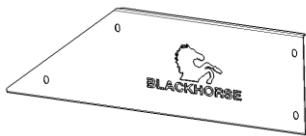
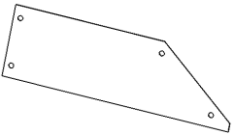
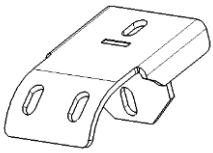
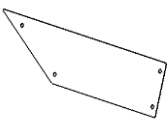

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

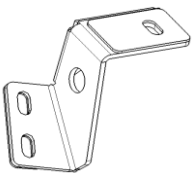
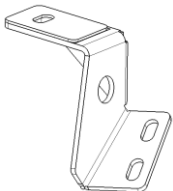



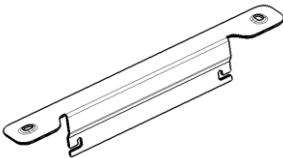














Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.








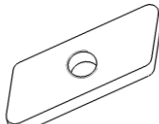
Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Luggage frame (with LED light)	②	1	 Main tube 1
③	1	 Side tube-L	④	1	 Side tube-R
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Connect bracket 1
⑨	2	 Decoration plate backboard	⑩	2	 Rubber plug

BLACK MODULAR ROLL BAR FORNISSAN FRONTIER 2019 WITH ORIGINAL CARGO BASKET (FLAT BASE
WITH LED BRAKE LIGHT)(MR STYLE)

⑪	1	 Connect bracket 2-L	⑫	1	 Connect bracket 2-R
⑬	1	 Connecting plate	⑭	4	 Block
⑮	1	 Allen wrench S=5	⑯	2	 Bracket
⑰	4	 Gum cover	⑱	8	 Flat washer D6
⑲	8	 Button head allen bolts M6_20	⑳	8	 Hex nut M6
㉑	2	 Button head allen bolts M8*50	㉒	8	 Flat washer D8
㉓	14	 Hex bolt M8*25	㉔	6	 Hex nut M8
㉕	2	 Spring washer D8	㉖	4	 Extra flat washer D10
㉗	4	 Hex nut M10*25	㉘	4	 Spring washer D10 (65Mn)
㉙	2	 Spring washer D10 (4Cr13)	㉚	2	 Button head allen bolts M10_25

BLACK MODULAR ROLL BAR FORNISSAN FRONTIER 2019 WITH ORIGINAL CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)

③①	2	 Button head allen bolts M12_40	③②	4	 Flat head allen bolts M12_40
③③	2	 Flat washer D12	③④	2	 Non-standard washer D10
③⑤	1	 Allen wrench S=8	③⑥	1	 Allen wrench S=6
③⑦	1	 Allen wrench S=4	③⑧	4	 Plate nut M10

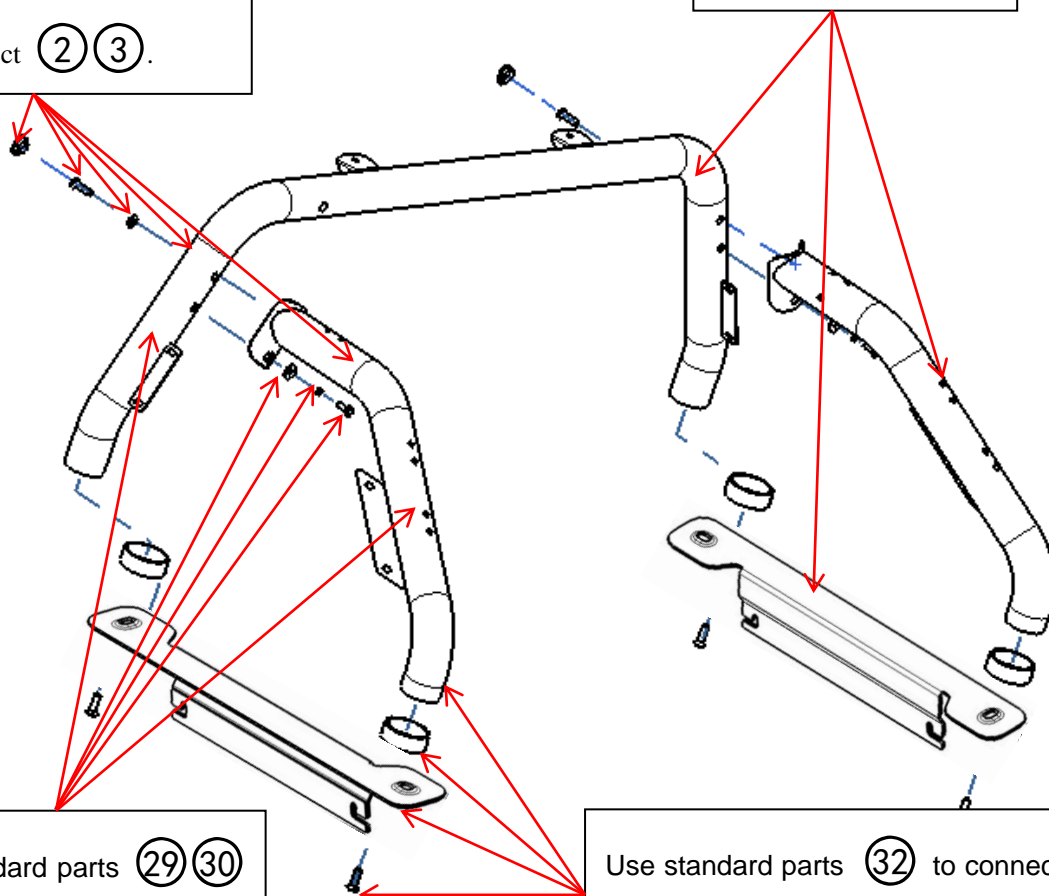
Installation Steps

Step1: Assemble tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ⑩ ③①

③③ to connect ② ③.

Installation are same at both sides.



Use standard parts ②⑨ ③⑩

③④ to connect ② ③

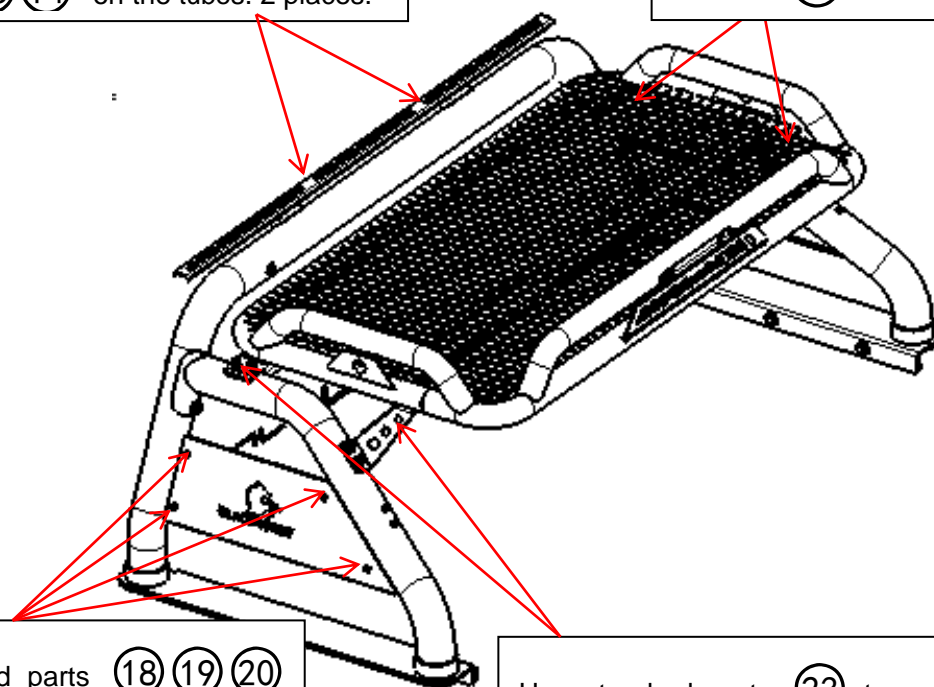
Use standard parts ③② to connect

①⑥ ①⑦ on tube. Four places.

Step2: Assemble Luggage frame and tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ②① ②② ②④ ②⑤ to connect ①③ ①④ on the tubes. 2 places.

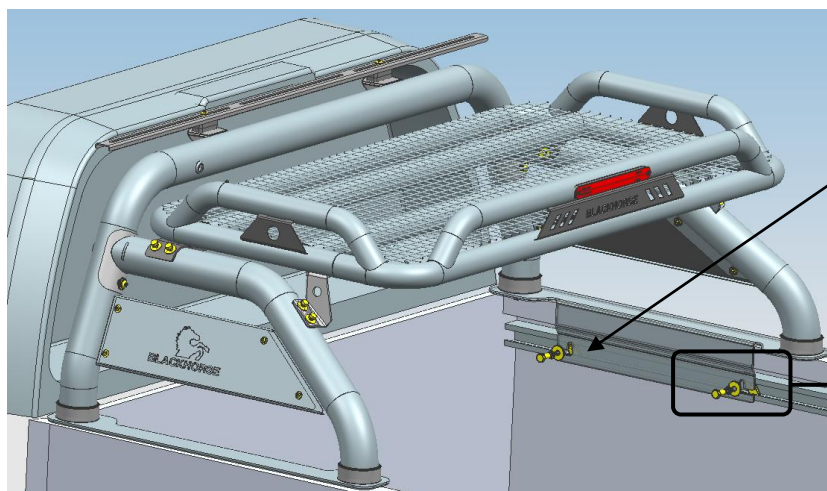
Use standard parts ②② ②③ ②④ to connect ① on the tubes. 4 places.



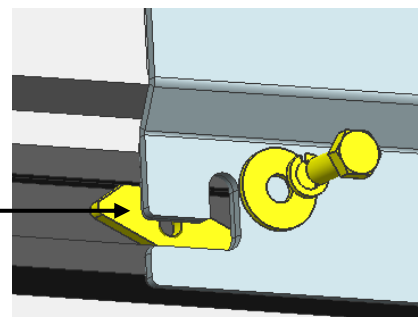
Use standard parts ①⑧ ①⑨ ②⑦ to connect ⑥ ⑦ ⑨ on the tubes. 8 places.

Use standard parts ②③ to connect ⑧ ⑪ ⑫ on the tubes. 8 places.

Step3: Put roll bar on the truck in an appropriate place. Drive the Plate nut ③⑧ into the chute on the side of the trunk Use standard ②⑥ ②⑦ ②⑧ to fasten roll bar on the truck.



2 holes in both sides



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.