



INSTALLATION INSTRUCTIONS

**BLACK ATLAS ROLL BAR FOR FORD RANGER 2019-2020 (WITH
TONNEAU COVER BASE)**

PART # ATRB8BK

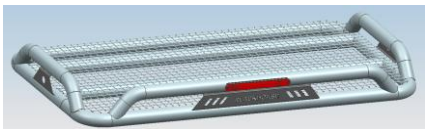
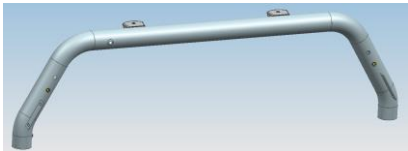
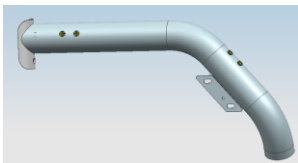






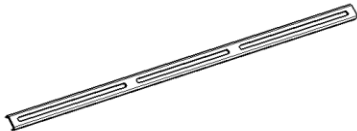
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

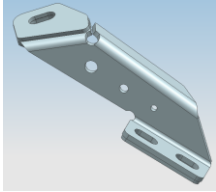
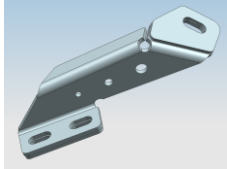
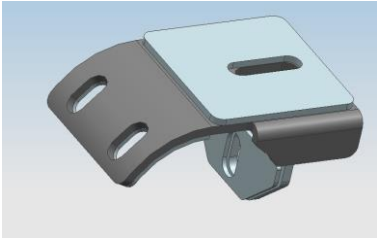
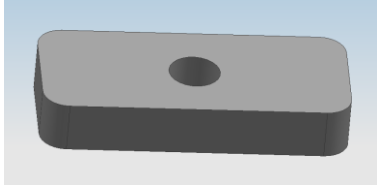
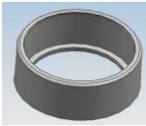

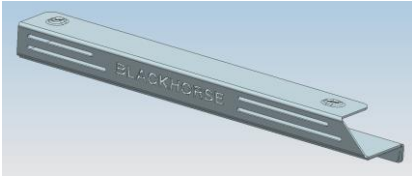
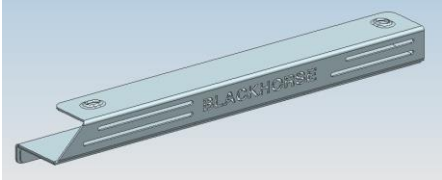
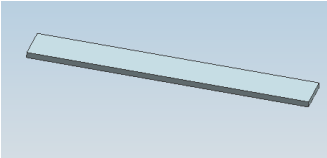
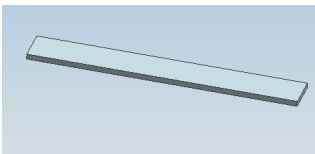
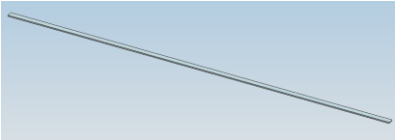
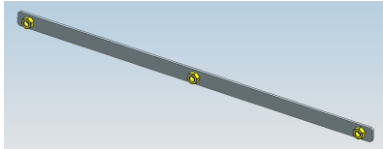
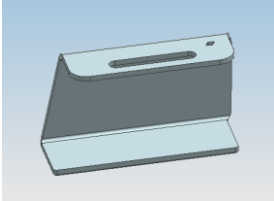
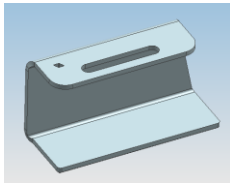
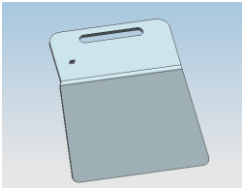
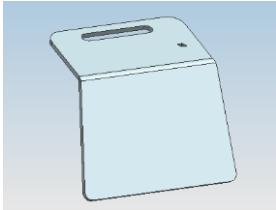
Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Luggage frame	②	1	 Main tube
③	1	 Side tube-L	④	1	 Side tube-R
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	1	 Red decoration plate-L	⑧	1	 Red decoration plate-R
⑨	2	 Decoration plate backboard	⑩	1	 Connecting plate

BLACK ATLAS ROLL BAR FOR FORD RANGER 2019-2020 (WITH TONNEAU COVER BASE)

⑪	1		⑫	1	
		Connect bracket 2-L			Connect bracket 2-R
⑬	2		⑭	2	
		Connect bracket			Block
⑮	4		⑯	10	
		Gum cover			6mm*200mm Cable ties (black)
⑰	1		⑱	1	
		Support bracket L			Support bracket R
⑲	4		⑳	4	
		Black adhesive tape 4			Black adhesive tape 5
㉑	1		㉒	2	
		Black adhesive tape 6			Connecting plate
㉓	1		㉔	1	
		Front end cover (R)			Front end cover (L)
㉕	1		㉖	1	
		Rear end cover (L)			Rear end cover (R)

BLACK ATLAS ROLL BAR FOR FORD RANGER 2019-2020 (WITH TONNEAU COVER BASE)

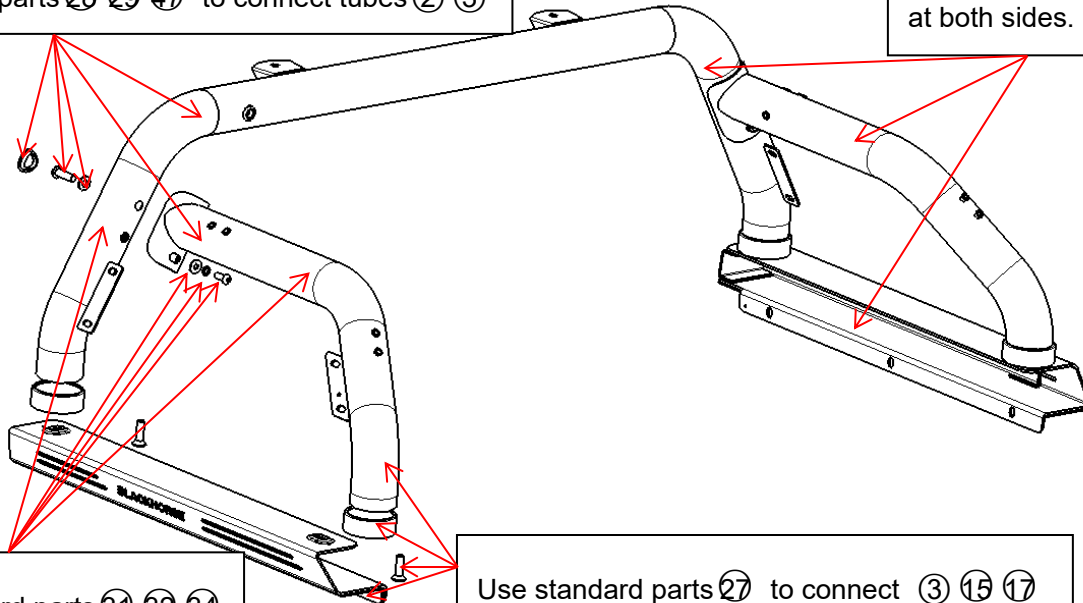
②⑦	4	Countersunk head allen bolt M12_40	②⑧	2	Button head allen bolt M12_40
②⑨	2	Flat washer D12(12x24x2.5mm)	③①	6	Hex bolt M10_35
③①	2	Button head allen bolt M10_25	③②	2	Flat washer D10_24_2.2
③③	6	Flat washer D10(10x30x2.5mm)	③④	8	Lock washer D10
③⑤	2	Button head allen bolt M8_30	③⑥	14	Assembly bolt M8_25
③⑦	8	Flat washer D8(8x24x2mm)	③⑧	2	Lock washer D8
③⑨	6	Hex nut M8	④①	12	Assembly bolt M6_20
④①	8	Flat washer D6(6x18x1.6mm)	④②	8	Hex nut M6
④③	2	Allen wrench S=8	④④	1	Allen wrench S=6
④⑤	1	Allen wrench S=5	④⑥	2	Allen wrench S=4
④⑦	2	 Rubber plug			

Installation Steps

Step1: Assemble tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ②⑧ ②⑨ ④⑦ to connect tubes ② ③

Installation are same at both sides.



Use standard parts ③① ③② ③④ to connect tubes ② ③.

Use standard parts ②⑦ to connect ③ ①⑤ ①⑦

Step2: Assemble Luggage frame and tubes with standard parts. Lock all the standard parts after adjust the position.

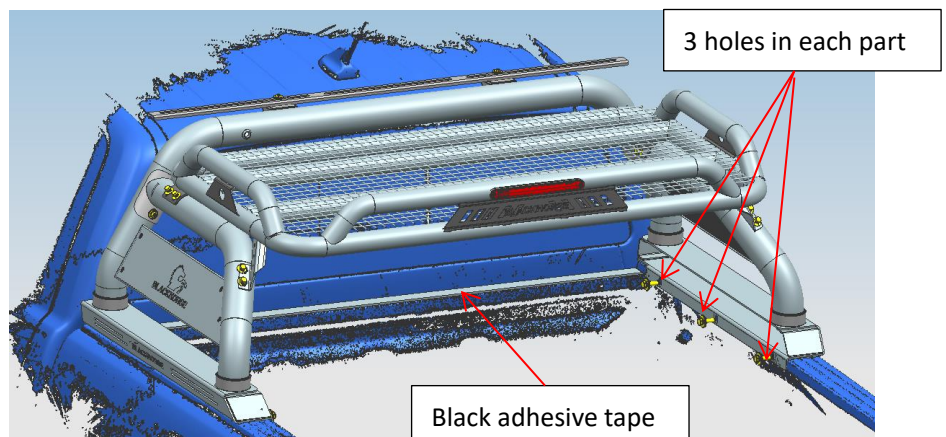
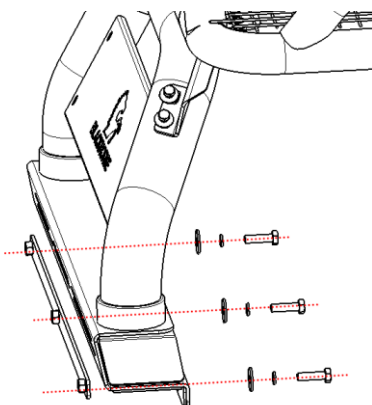
Use standard parts ③⑤ ③⑦ ③⑧ to connect Connecting plate ①⑩ ①④, two places.

Use standard parts ③⑥ ③⑦ ③⑨ to connect luggage frame ①, four places.

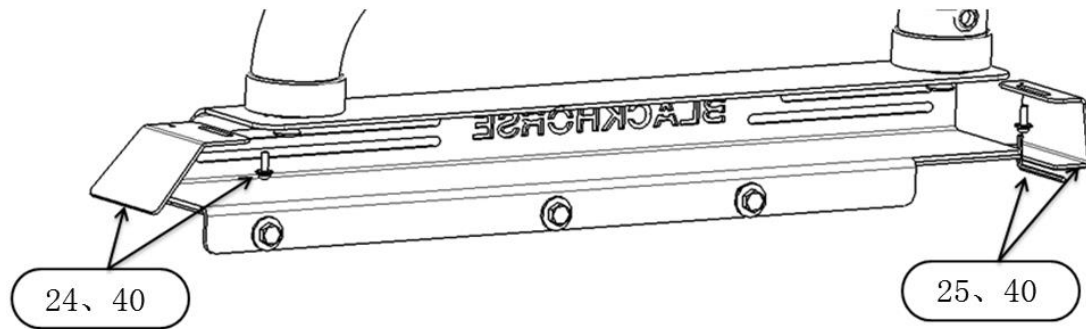
Use standard parts ③⑥, to connect Connect Brackets ①① ①② ①③, eight places.

Use standard parts ④⑩ ④① ④② to connect decoration plates ⑦ ⑨, eight places.

Step3: Put roll bar on the truck in an appropriate place. And use pen to mark the holes. 3 places in each part, 6 places total. Remove the roll bar then drill the size of $\Phi 12$ holes. Put the roll bar back and use standard ③⑩ ③③ ③④ ②② to fasten.



Step4: Install end covers 24 25 on the brackets, then use standard parts 40 to fasten.



Notice: If compatible with tonneau cover, pls sticker the black adhesive tape 21 on the truck rail to full fill the gap as the picture shown.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.