



INSTALLATION INSTRUCTIONS

**TEXTURE BLACK BEACON FRONT RUNNER 19-20 FORD RANGER
(WITH SENSORS RELOCATION)**

PART # BFRF05






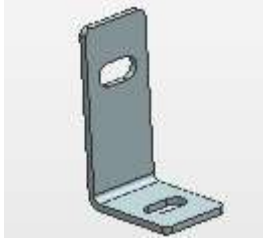


Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.


















Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

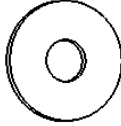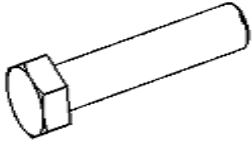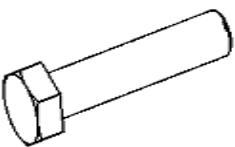

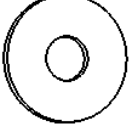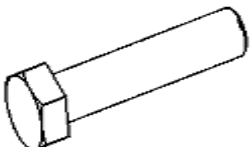

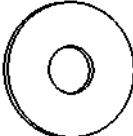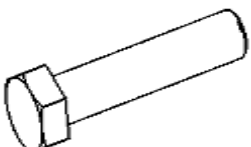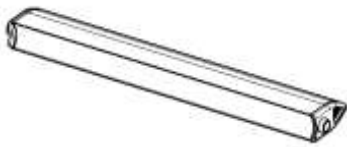NO.	QTY	PIC	NO.	QTY	PIC
①	1	 Front runner	②	1	 Bracket (L)
③	1	 Bracket (R)	④	1	 Brace bracket (L)
⑤	1	 Brace bracket (R)	⑥	2	 Lamp bracket
⑦	1	 Radar bracket (L)	⑧	1	 Radar bracket (R)

TEXTURE BLACK BEACON FRONT RUNNER 19-20 FORD RANGER (WITH SENSORS RELOCATION)

⑨	4	 Lock washer D8	⑩	4	 Flat washer D8 (8x16x1.6mm)
⑪	4	 Flat washer D8_22_2	⑫	6	 Flat washer D8 (8x24x2mm)
⑬	2	 Hex bolt M8_16	⑭	2	 Hex bolt M8_25
⑮	6	 Hex bolt M8_30	⑯	2	 Hex Nut M8
⑰	2	 Lock nut M8	⑱	8	 Flat washer D10_27_3
⑲	4	 Hex bolt M10_35	⑳	4	 Lock nut M10
㉑	4	 Lock washer D12	㉒	4	 Flat washer D12 (12x37x3mm)
㉓	4	 Hex bolt M12_45	㉔	1	 20-inch Length lamp
㉕	4	 Cable tie			


Standard parts for radar:

TEXTURE BLACK BEACON FRONT RUNNER 19-20 FORD RANGER (WITH SENSORS RELOCATION)

<p>②⑥</p>	<p>4</p>	 <p>Press cover</p>	<p>②⑦</p>	<p>4</p>	 <p>Circular glue</p>
<p>②⑧</p>	<p>4</p>	 <p>Semi-circular glue</p>	<p>②⑨</p>	<p>8</p>	 <p>Cross slot bolt ST4_15</p>
<p>③⑩</p>	<p>4</p>	 <p>Radar cover</p>			

Installation Steps

INSTALLING PICTURE:

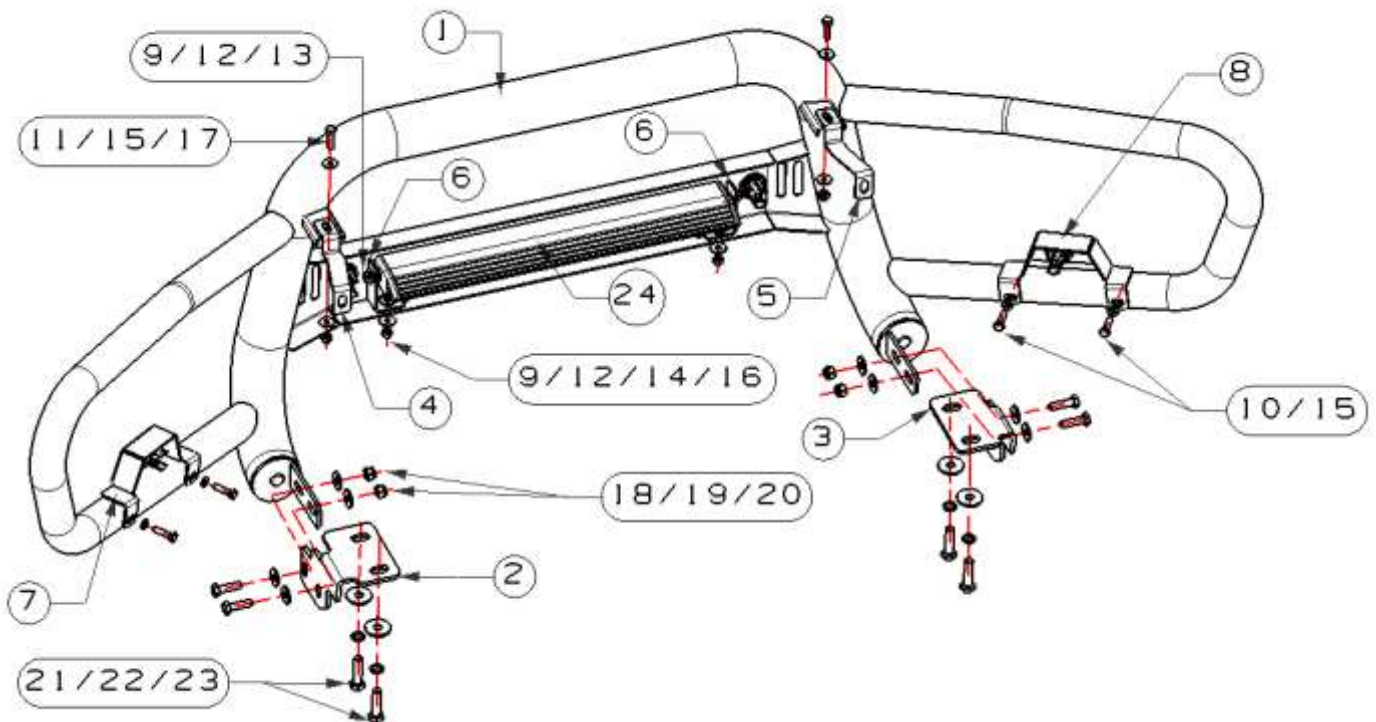


Step 1: Verify that all parts are present according to the manual.


Step 2: Before installation, use the standard parts and the lamp bracket to install 20-inch Length lamp in the bar.




Step 3: Install the bracket L/R on the girder with standard parts. The left and right side installation are consistent.

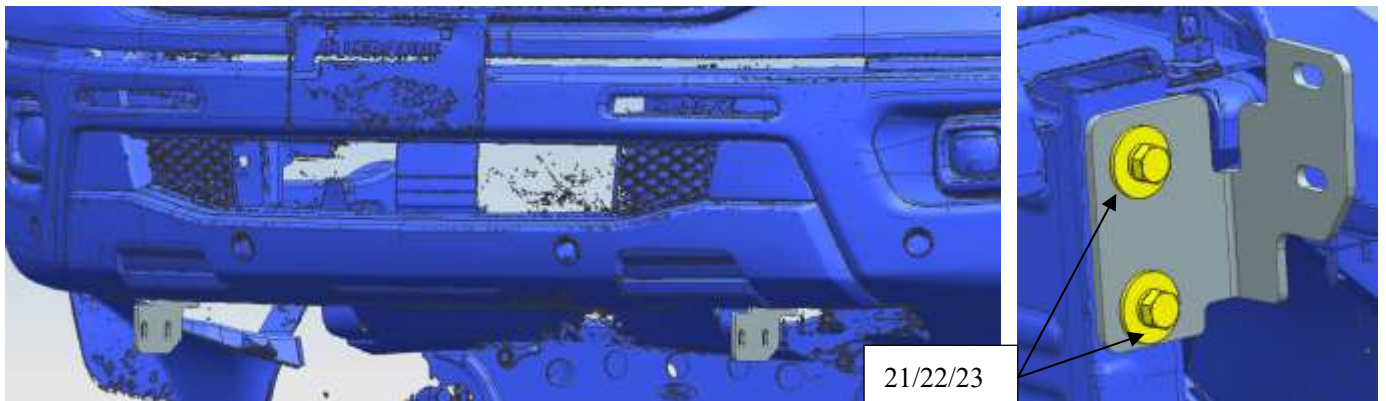

Step 4: Place the brace brackets through the bottom of the plastic grille guard and then fixed with the original standard parts. The left and right side installation are consistent.

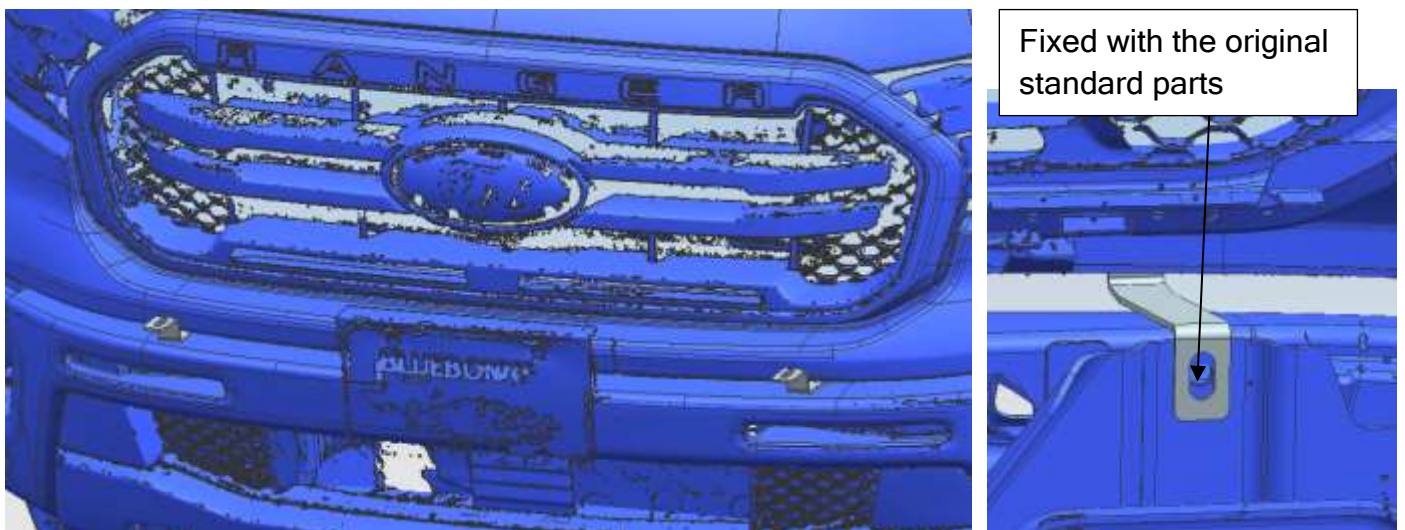


Step 5: Find out the inner radar plastic bracket from the front runner (or from the radar bracket). Then fasten the original radar on the front runner as the below shown. In addition, install the radar brackets on the front runner after the radar brackets are installed with below standard parts.

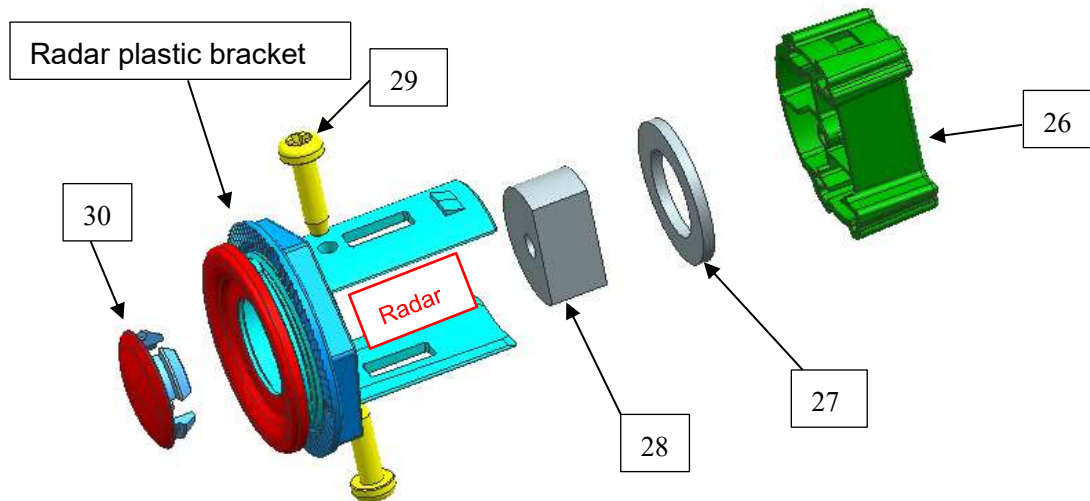

Step 6: Use standard parts to install the front runner with brackets and Brace brackets as the INSTALLING PICTURE shown.

Step7: Installation is finished, pick up all tools.

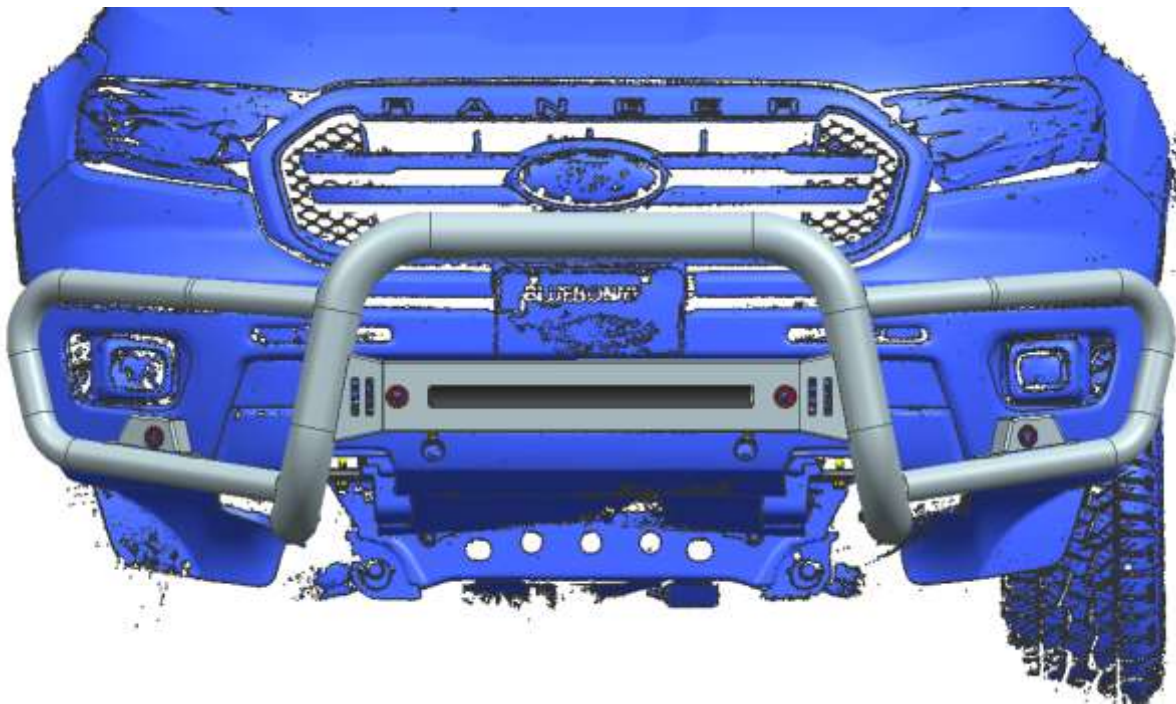

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.