



INSTALLATION INSTRUCTIONS

**TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD
FOR 15-20 CHEVY COLORADO (WITH SENSORS RELOCATION)**

PART # BFRG15




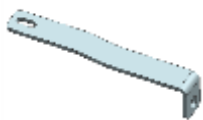






Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.









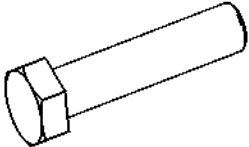
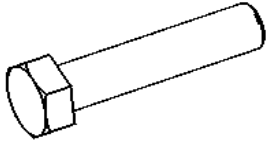

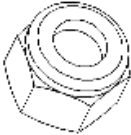



Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

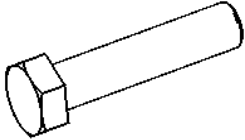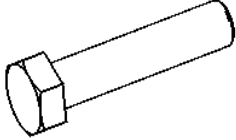Parts list






NO.	QTY	PIC	NO.	QTY	PIC
①	1	 Front runner	②	1	 Bracket (L)
③	1	 Bracket (R)	④	1	 Brace bracket (L)
⑤	1	 Brace bracket (R)	⑥	2	 Lamp bracket
⑦	2	 T Double Bolts M12	⑧	4	 Lock washer D8
⑨	4	 Flat washer D8_22_2	⑩	6	 Flat washer D8 (8x24x2mm)

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD
FOR 15-20 CHEVY COLORADO(WITH SENSORS RELOCATION)

⑪	2	 Hex bolt M8_16	⑫	2	 Hex bolt M8_25
⑬	2	 Hex bolt M8_30	⑭	2	 Hex nut M8
⑮	2	 Lock nut M8	⑯	2	 Lock washer D10
⑰	4	 Flat washer D10_24_2.2	⑱	8	 Flat washer D10_27_3
⑲	4	 Hex bolt M10_35	⑳	2	 Hex bolt M10_80
㉑	2	 Hex nut M10	㉒	4	 Lock nut M10
㉓	4	 Flat washer D12 (12x24x2.5mm)	㉔	4	 Lock nut M12
㉕	1	 20-inch Length lamp			


Standard parts for Radar:

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD
FOR 15-20 CHEVY COLORADO(WITH SENSORS RELOCATION)

②⑥	2		②⑦	2	
		Press cover			Circular glue
②⑧	2		②⑨	4	
		Semi-circular glue			Cross slot bolt st4_15
③①	2				
		Radar cover			

Installation Steps

INSTALLING PICTURE:

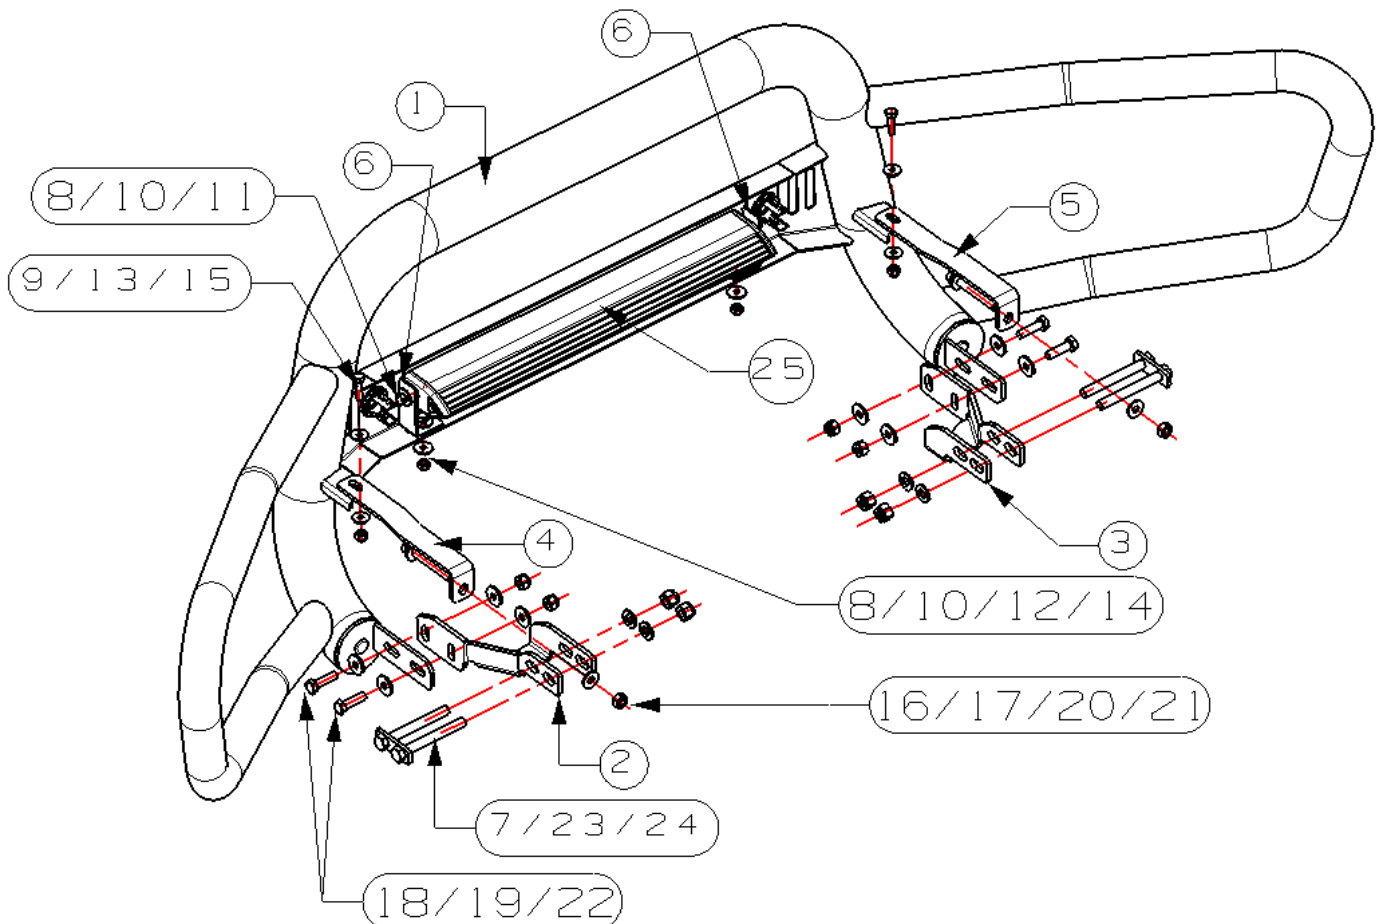



TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD
FOR 15-20 CHEVY COLORADO(WITH SENSORS RELOCATION)

Step 1: Verify that all parts are present according to the manual.



Step 2: Before installation, use the standard parts and the lamp bracket to install 20-inch Length lamp in the bar.




Step 3: Install the brackets L/R in the hole of the trailer. Fasten the brackets with T Double bolt M12 and other standard parts on the girder. The left and right side installation are consistent.

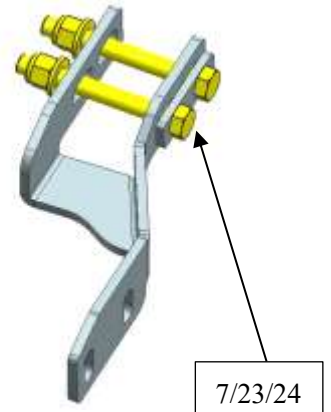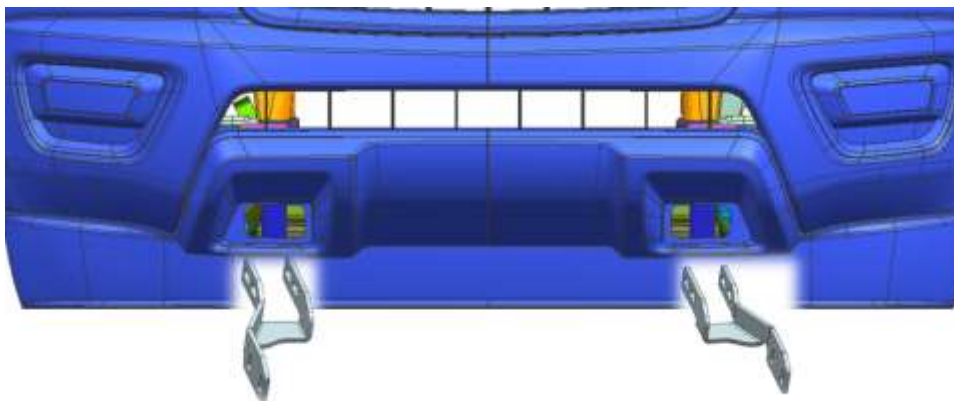

Step 4: Place the brace brackets through the plastic grille guard and then fixed in the rear of the collision beam by the standard parts. The left and right side installation are consistent.

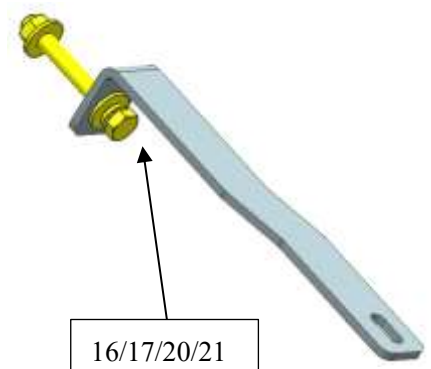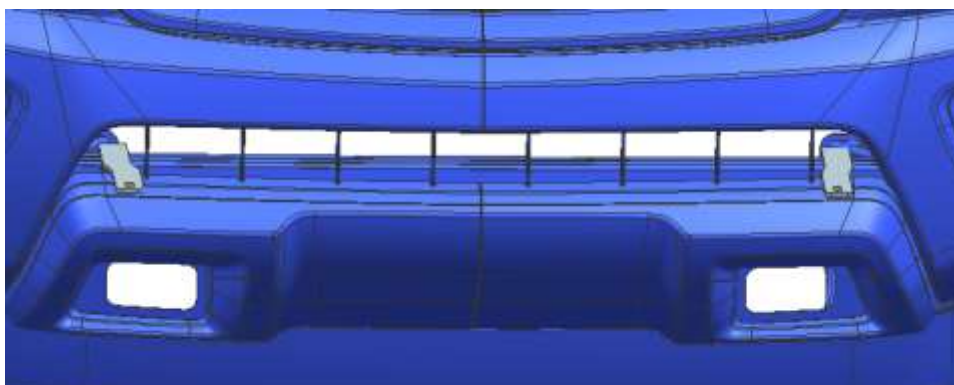


Step 5: Find out the inner radar plastic bracket from the front runner. Then fasten the original radar on the front runner as the below shown.

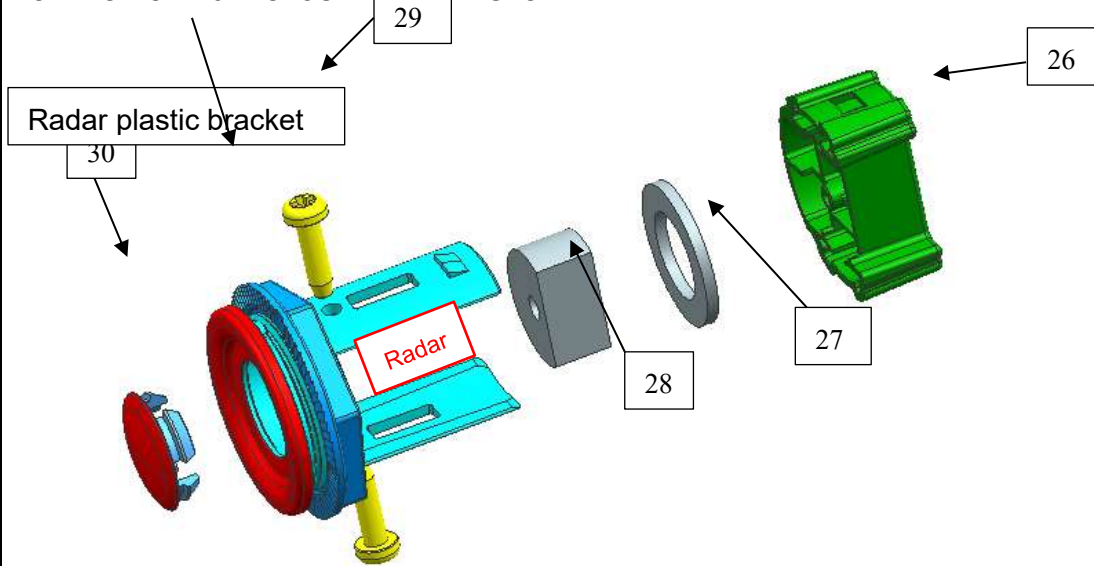

Step 6: Use standard parts to install the front runner with brackets and Brace brackets as the INSTALLING PICTURE shown.

Step 7: Installation is finished, pick up all tools.

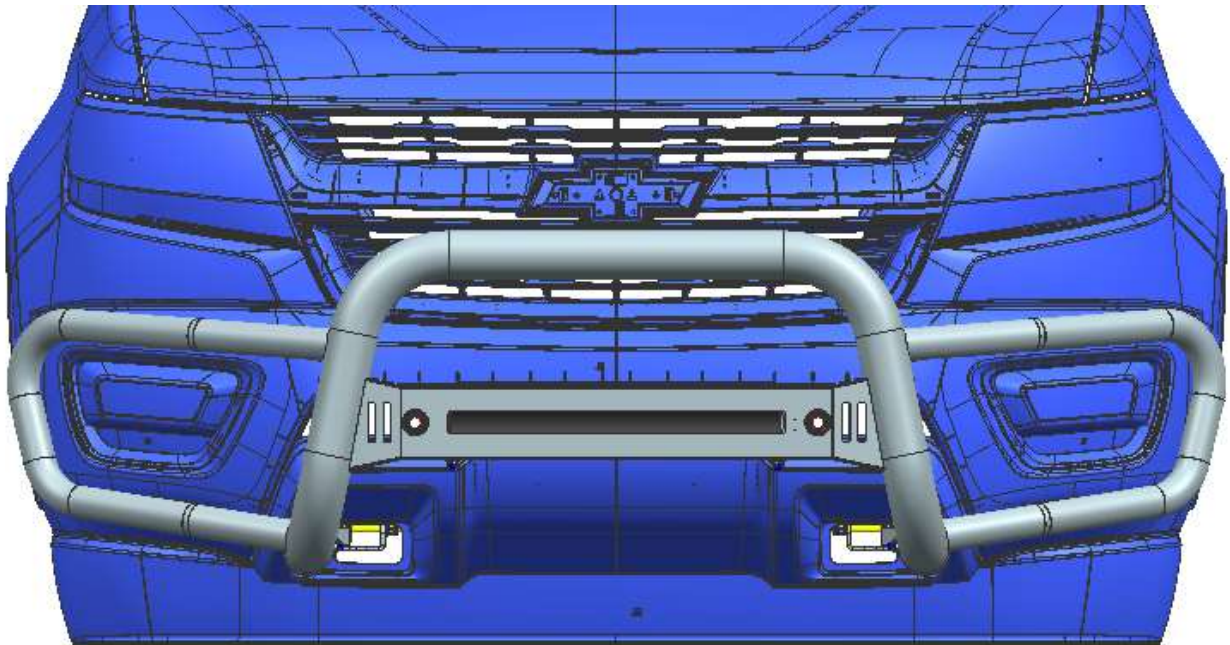

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.