



## **INSTALLATION INSTRUCTIONS**

**TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR**

**05-22 TOYOTA TACOMA**

**(WITH SENSORS RELOCATION)**

**PART # BFRT01**









## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.











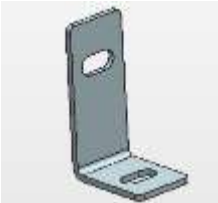


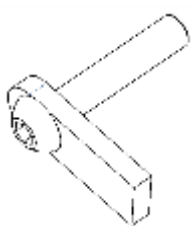

## Care and Cleaning

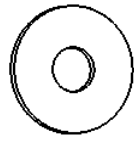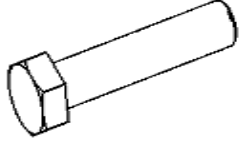- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

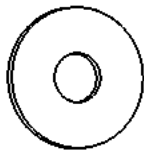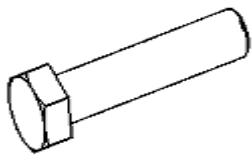
## Parts list

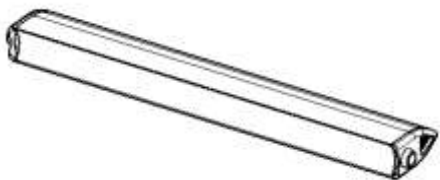NO.	QTY	PIC	NO.	QTY	PIC
①	1	 Front runner	②	1	 Bracket (L)
③	1	 Bracket (R)	④	2	 Brace bracket
⑤	2	 Lamp bracket	⑥	4	 Plate ( φ 48 40mm)
⑦	2	 M8 Plastic retainer	⑧	2	 T Bolt M8

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 05-20 TOYOTA TACOMA  
(WITH SENSORS RELOCATION)


⑨	8	 Lock washer D8	⑩	12	 Flat washer D8 (8x24x2mm)
⑪	2	 Hex nut M8_16	⑫	4	 Hex nut M8_25
⑬	6	 Hex Nut M8	⑭	6	 Lock washer D10
⑮	12	 Flat washer D10 (10x30x2.5mm)	⑯	4	 Hex nut M10_30
⑰	2	 Hex nut M10_120	⑱	6	 Hex Nut M10
⑲	1	 20-inch Length lamp			
Standard parts for radar:					
⑳	2	 Press cover	㉑	2	 Circular glue
㉒	2	 Semi-circular glue	㉓	4	 Cross slot bolt ST4_15

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 05-20 TOYOTA TACOMA  
(WITH SENSORS RELOCATION)

<p>24</p>	<p>2</p>				
		<p>Radar cover</p>			


## Installation Steps

### INSTALLING PICTURE:

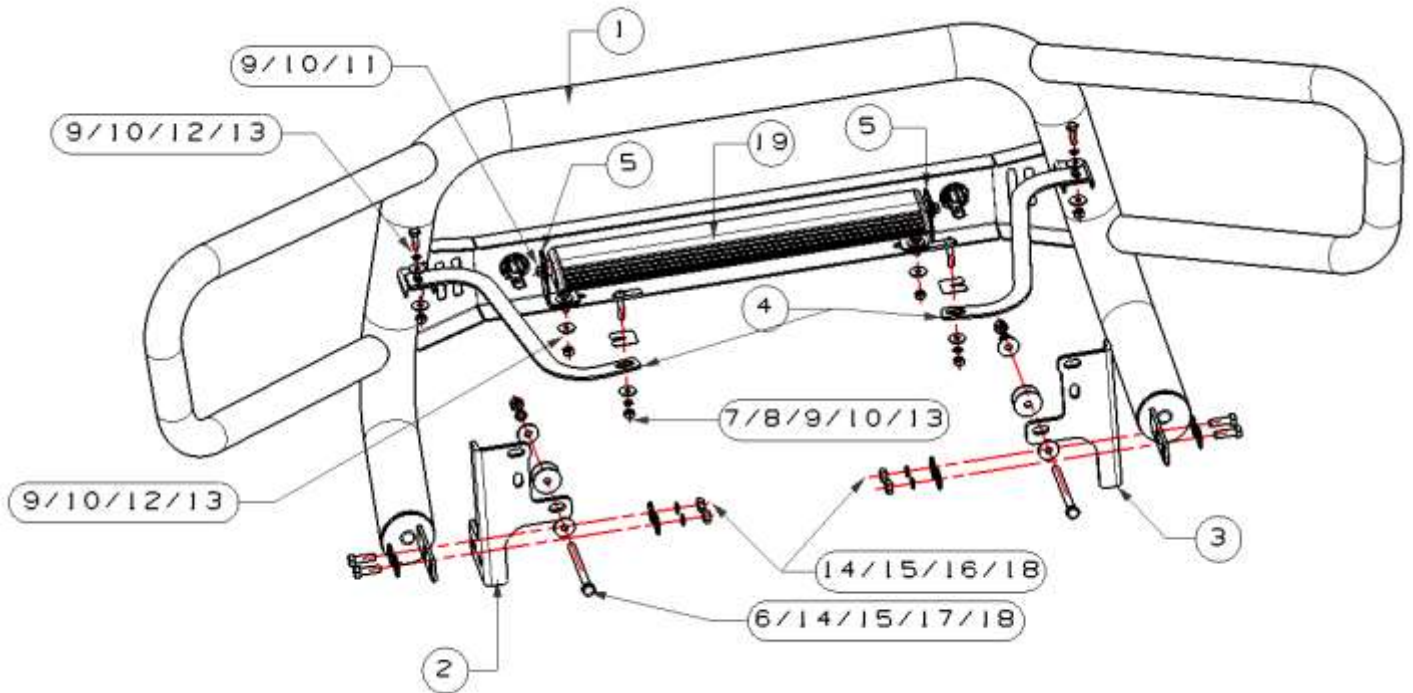


Step 1: Verify that all parts are present according to the manual.

Step 2: Before installation, use the standard parts and the lamp bracket to install 20-inch Length lamp in the bar.

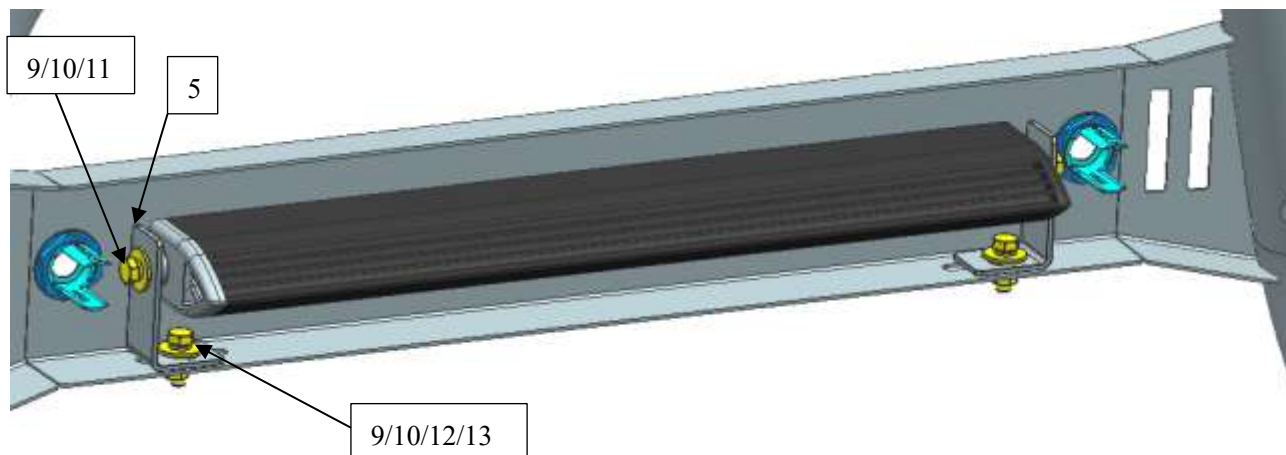

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 05-20 TOYOTA TACOMA  
(WITH SENSORS RELOCATION)


Step 3: Remove the lower factory splash guard before install brackets. Use standard parts and the original standard parts to fasten the left and right brackets on the girder.

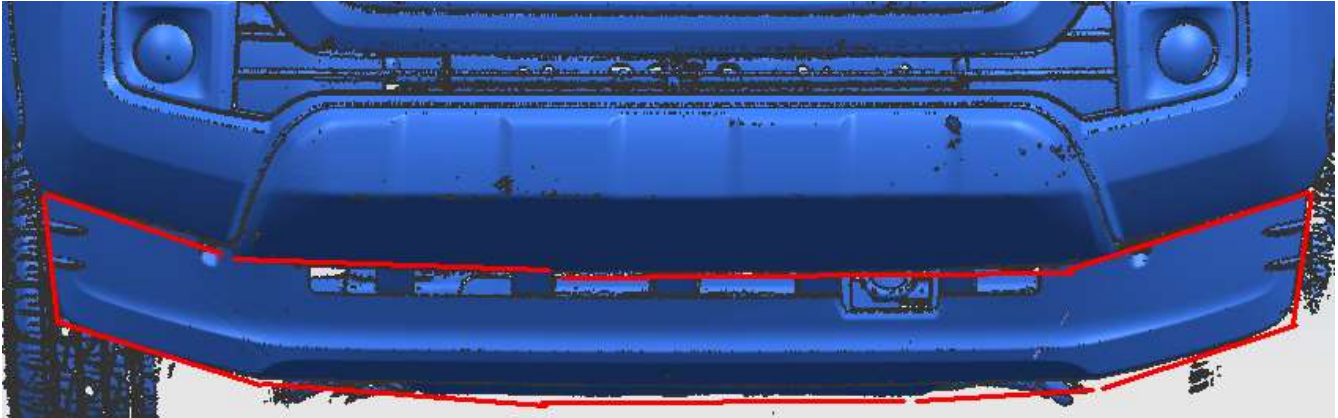


Step 4: Use T Bolt M8, M8 Plastic retainer and other standard parts to install Brace brackets on the girder as the below shown.





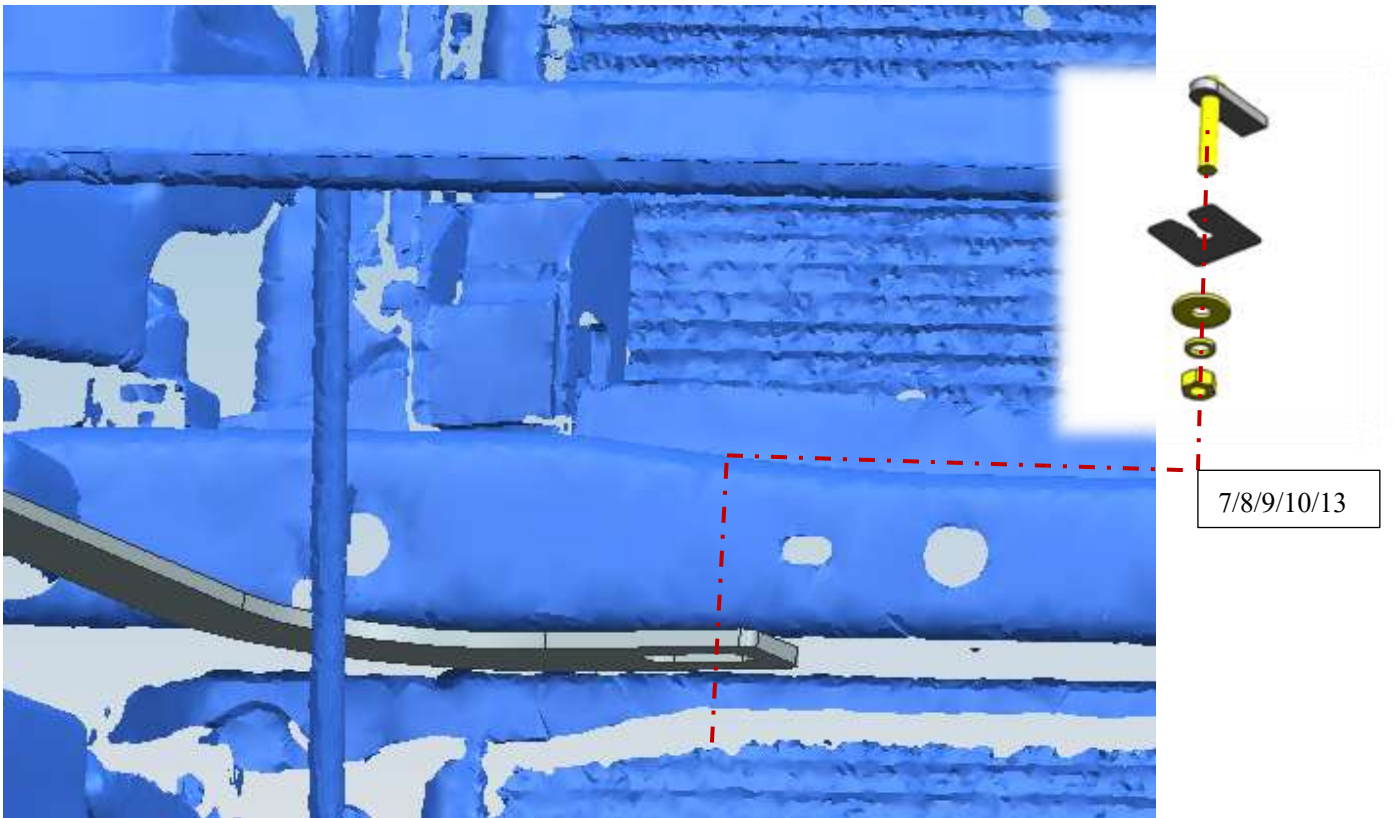


Step 5: Find out the inner radar plastic bracket from the front runner. Then fasten the original radar on the front runner as the below shown.

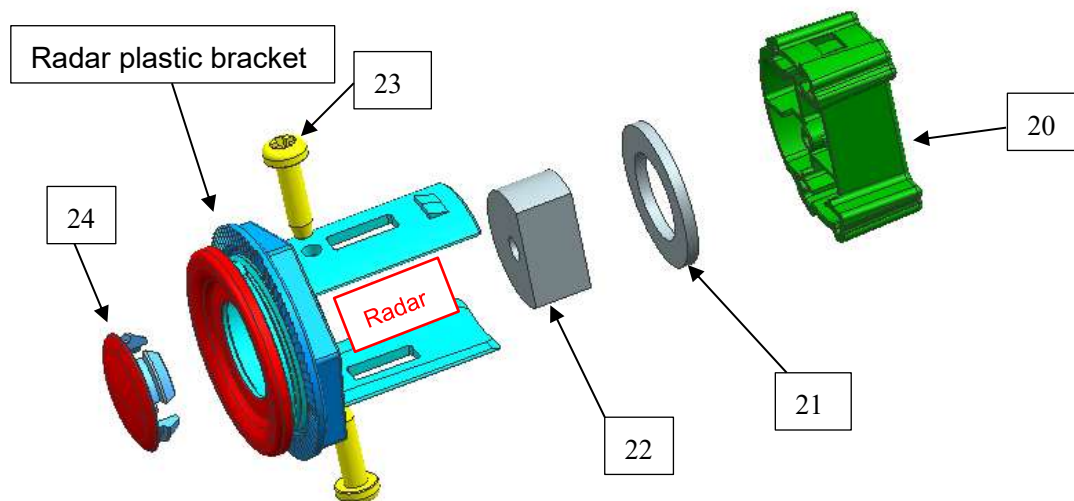

Step 6: Use standard parts to install the front runner with brackets and Brace brackets as the INSTALLING PICTURE shown.

Step 7: Installation is finished, pick up all tools.

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 05-20 TOYOTA TACOMA  
(WITH SENSORS RELOCATION)

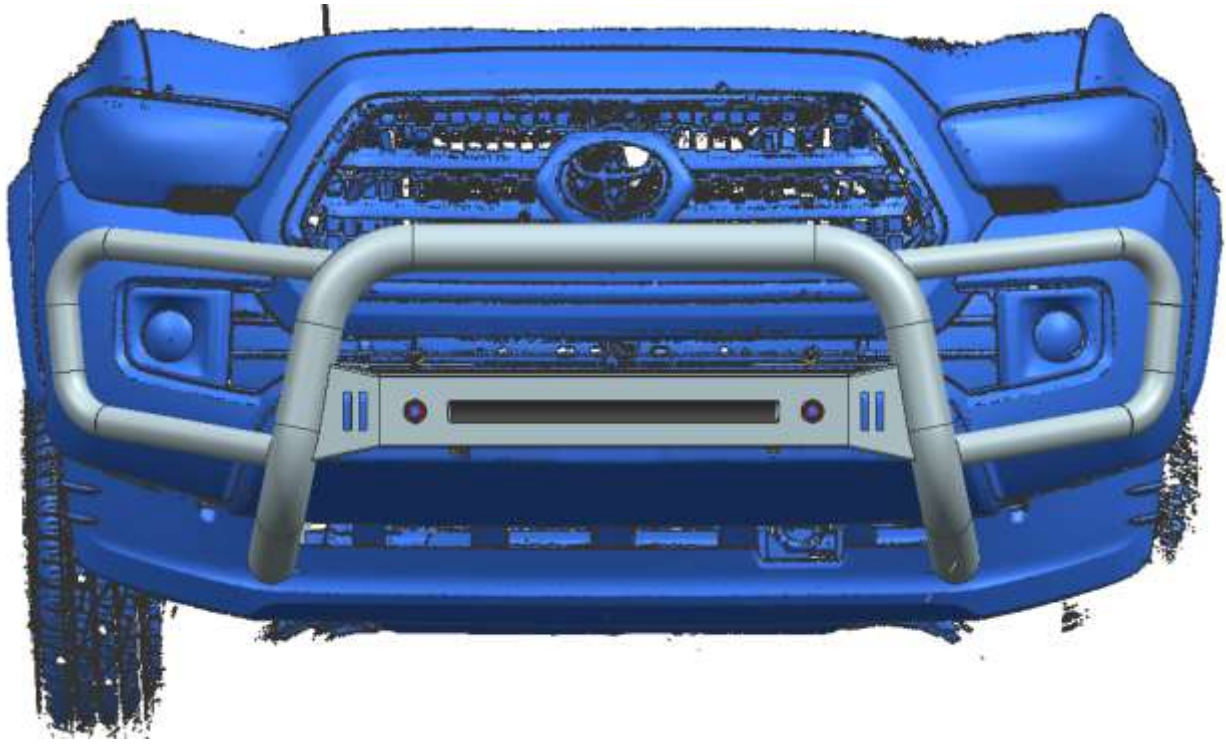

**NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.