

INSTALLATION INSTRUCTIONS

UNIVERSAL SLIDE TRAY WITH AL. CHECKER PLATE FOR MID SIZE PICKUPS (TOYOTA TACOMA 15-23/CHEVY COLORADO 19-23/FORD RANGER / 22-23 NISSAN FRONTIER / 21-23 JEEP GLADIATOR

PART # BSCP03B

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you
 received, however they share the same assembly way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	NAME	NO.	QTY	NAME
1	1	Slide tray			
Hardware list :					
2	4	Hex bolt M10_65	3	8	Large washer D12 (12x44x4mm)
4	4	Lock washer D10	(5)	4	Hex nut M10
6	4	φ16×12 Pastic washer			

Installation Steps


Installation Figure:

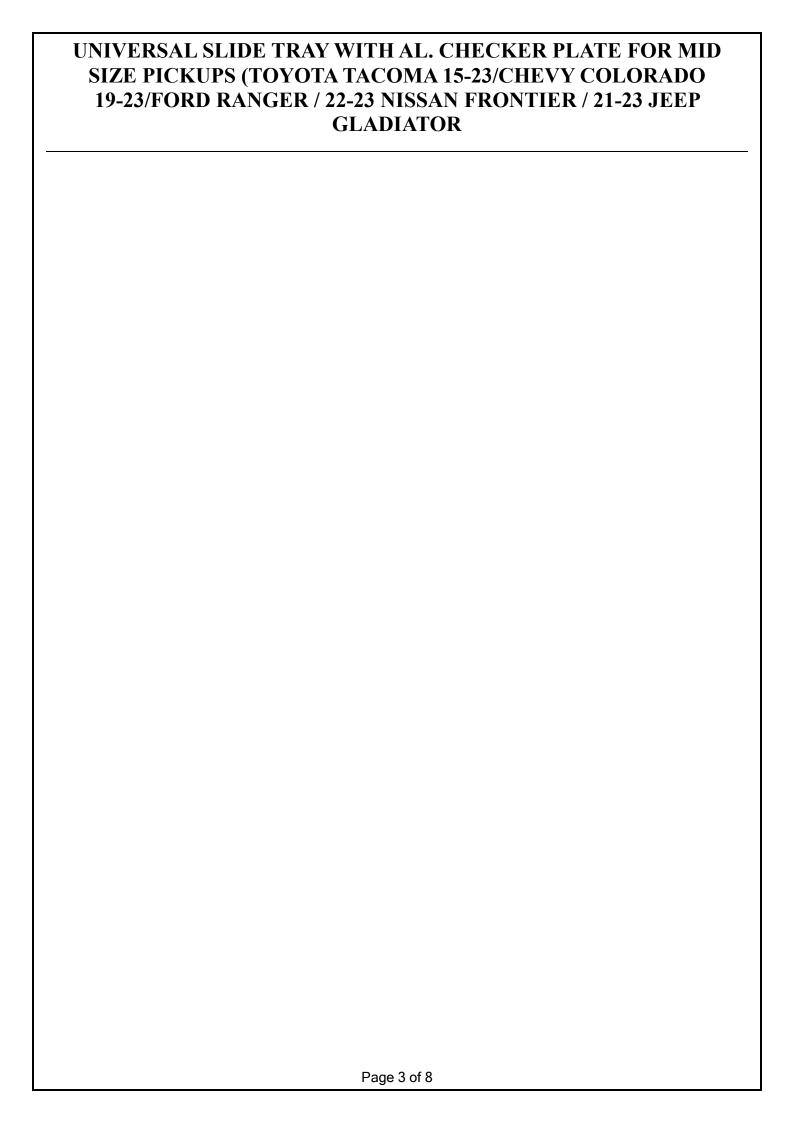


Step 1: Put the slide tray on the truck bed, adjust the base of slide tray to appropriate position.

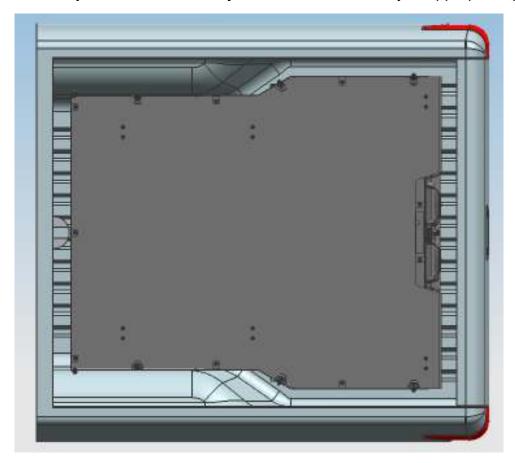


Step 2: After adjusted the position, remove the plate from the base according to the following steps.

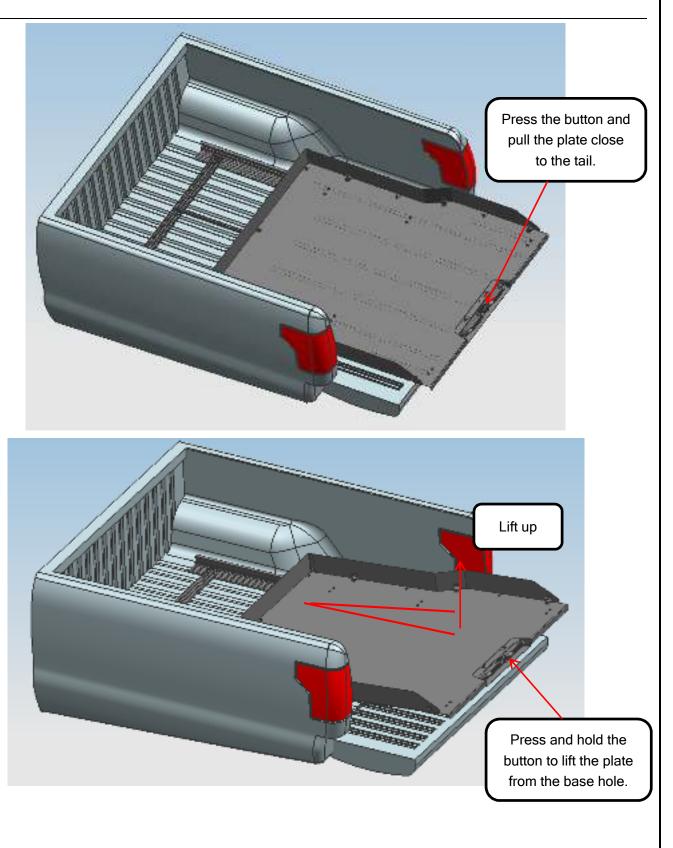


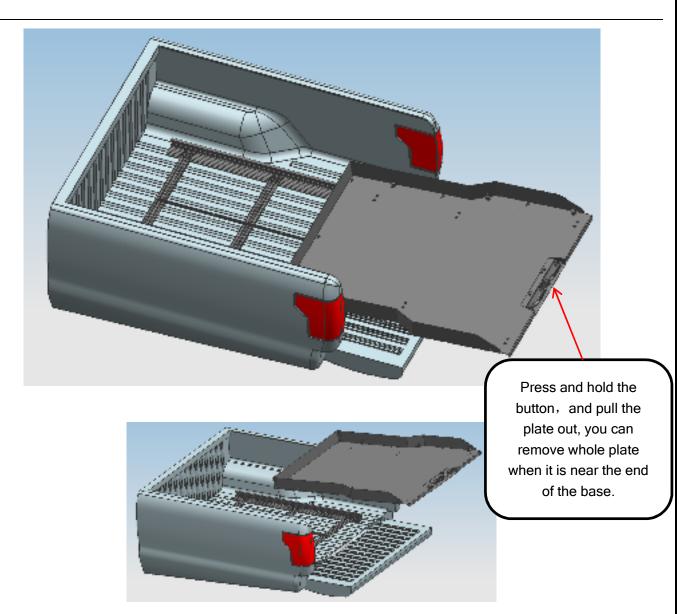

Step 3: Drill 4 holds (\emptyset 12mm) on the aluminum base, as figure shown below. Holds on each side should be kept in the same distance;

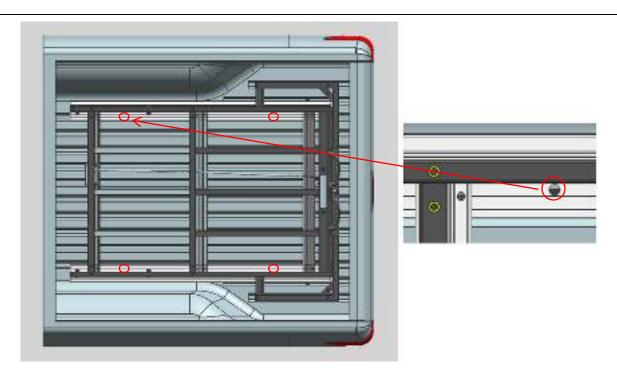

Step 4: Install the base of slide tray ① on the truck bed with hardwares ②③④⑤⑥

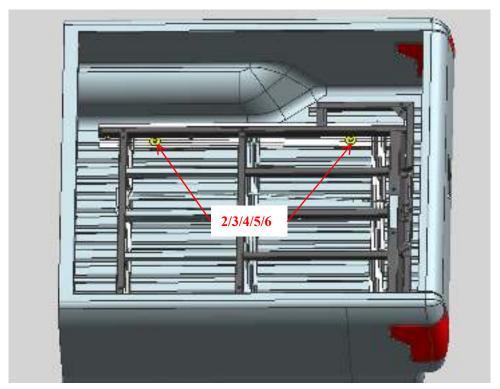

Step 5: Install the plate on the base according to the remove method.

Step 6: Test and make sure that the slide tray is steadily fixed, fully tighten all hardware.

Step 7: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.



- 866-926-2867
- Email: info@blackhorseoffroad.com
 - Mon-Fri 9AM-6PM EST
 - Headquarters
- 39 ST. MARY'S PLACE FREEPORT, NY 11520