

INSTALLATION INSTRUCTION

ITEM NO: **HD17-TS-A10350**

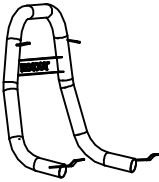











ATTENTION

1. Please read this installation instruction before installing this Rear guard.

When install it, please pay attention to protecting your **main body**

PARTS LIST

2. When you use it, please check this **main body** at a fix time-lapse, such as one month or two month.

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
A	main body 		1		J	M8*20 Pan head with hex bolts		2	
					K	M6X30 bolt		1	
B	supprot bracket 1		1		L	M6flat washer		3	
C	supprot bracket 2		1						
D	Ø 22x25 Sleeve		2						
E	M6lock washer		3						
F	M8 nut		2						
G	M6X50 bolt		2						
H	M8flat washer		2						
I	M8lock washer		2						