# **INSTALLATION INSTRUCTION**

# Stainless Rear Bumper Guard Double LAYER 18-20 Honda Odyssey PART # CRDL-HOH704S




## Attention

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

### PART LIST


NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Bracket (Driver Side)	1		7	Large Flat Washer	12	ф 12х30х3. 0
2	Bracket (Passenger Side)	1		8	Spring Washer	8	ф 12
3	Bracket (Driver Side)	1		9	Hexagon Nut	4	M12
4	Bracket (Passenger Side)	1		10	Hex Head Bolt	4	M8X25
5	Hex Head Bolt(Fine thread)	4	M12X1.25X30	11	Large Flat Washer	4	Ф8х25х2.0
6	Hex Head Bolt	4	M12X35	12	Spring Washer	4	Ф8

# **INSTALLATION PICTURES**

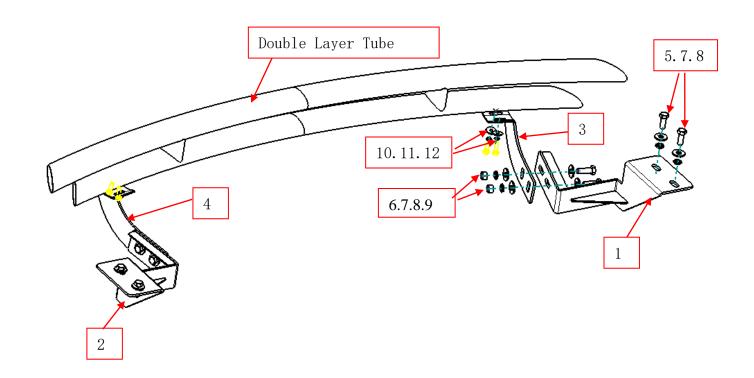

### INSTALLATION PROCEDURES


- Step 1: Refer to the Part list to check if all the hardware are included.
- Step 1: Refer to the car bottom to install bracket 1 and bracket 2.

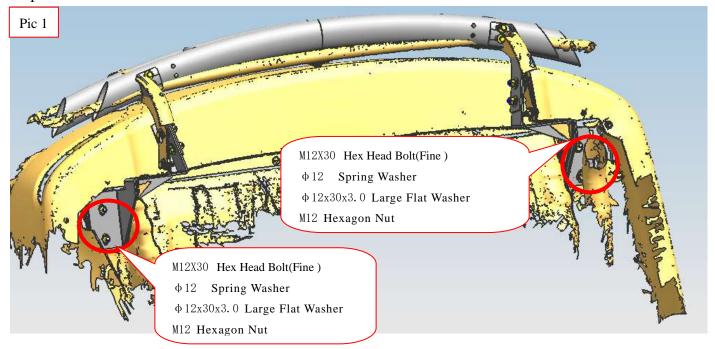

Step 3: Refer to Pic 2 and install the rear bumper on the brackets and adjust the rear bumper to the proper position.

Step 4: Check if all hard ware are installed and fasten.

Step5: Complete the installation.

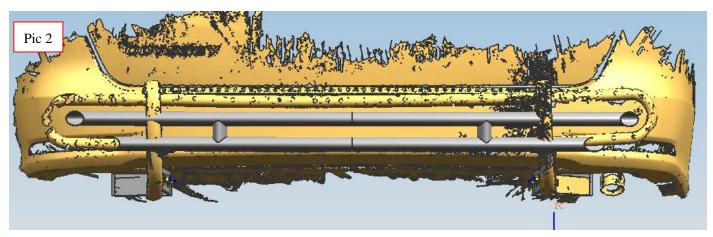

**Disclaimer**: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.