



**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**

**SE5 SIDEBAR**

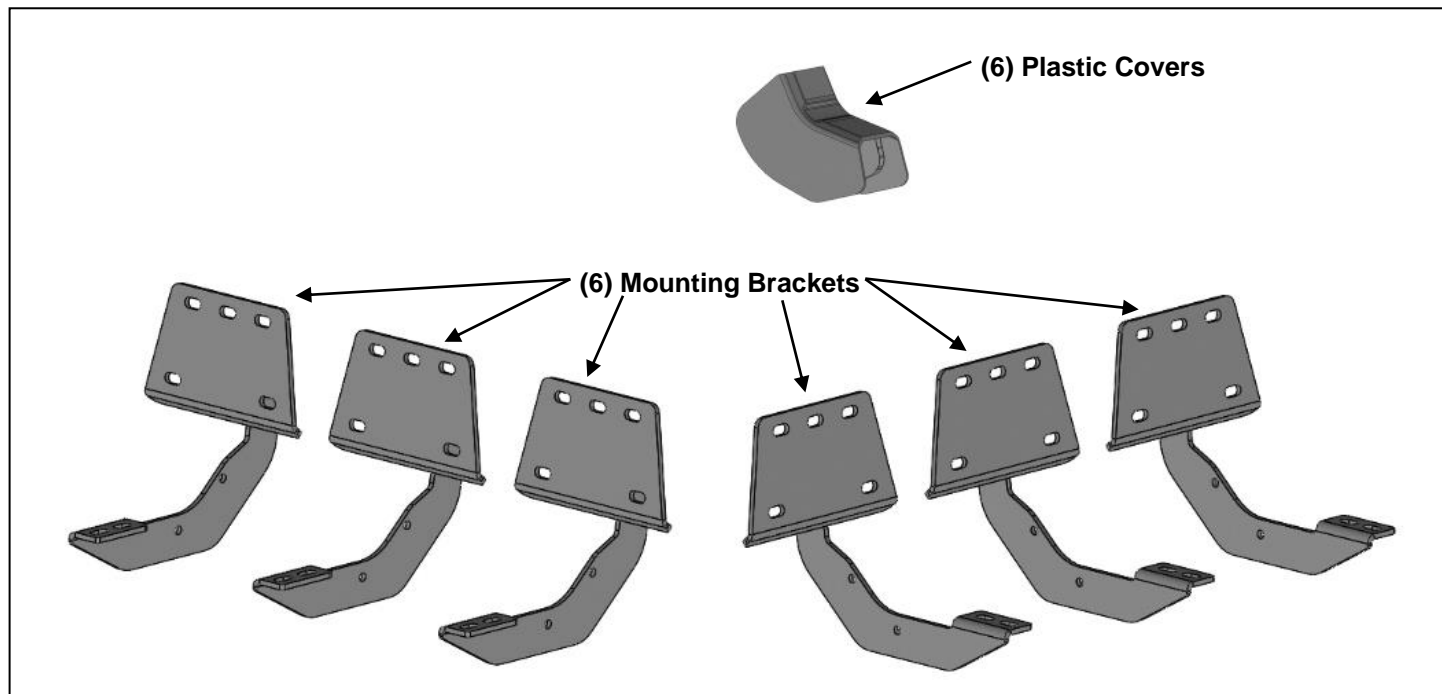
**2019-24 DODGE RAM 1500 QUAD CAB/CREW CAB**

**(Excl. 19-24 Ram 1500 Classic)**

**PART# E0785/E07**

**PARTS LIST:**

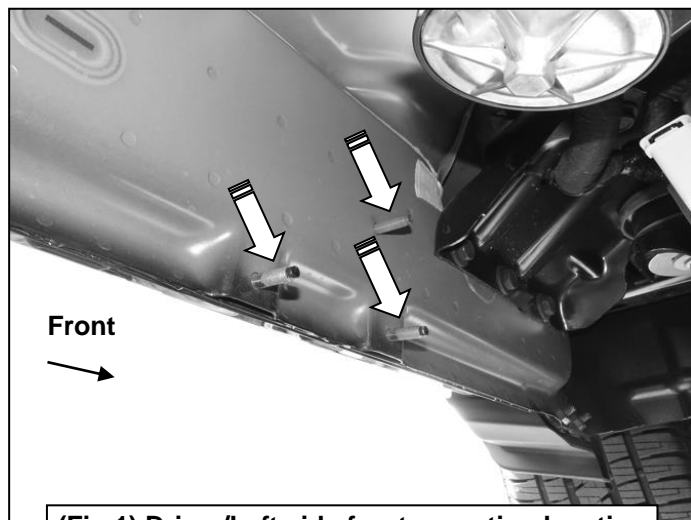
2	SE5 Sidebars	30	8mm x 24mm OD x 2mm Flat Washers
6	Mounting Brackets	12	8mm Lock Washers
6	Plastic Covers	12	8mm Hex Nuts
12	Plastic Clips	18	8mm nylon Lock Nuts
12	8mm x 20mm T-Bolts		

**PROCEDURE:**

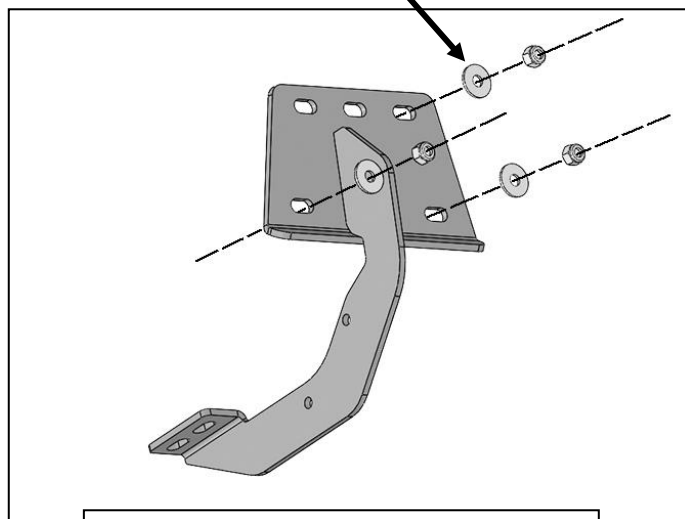
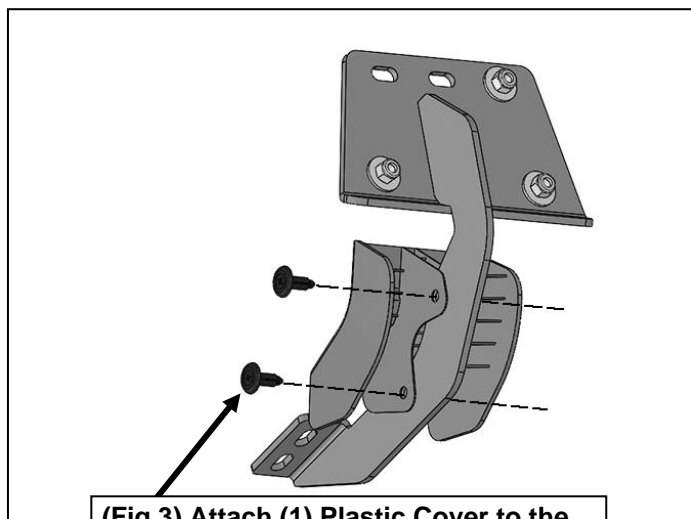
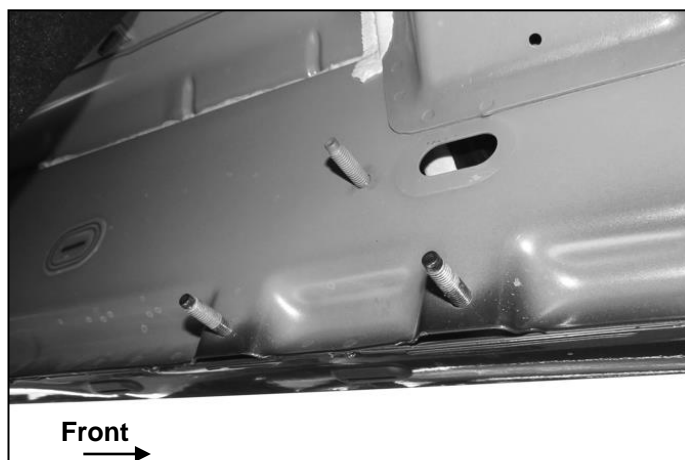
**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.**

1. Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, **(Figure 1)**. **NOTE:** Clean threads on the studs first before installing Brackets to remove paint buildup.
2. Select (1) Driver/Left Mounting Bracket. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts, **(Figure 2)**. Leave brackets loose at this time.
3. Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 3)**.
4. Repeat **Steps 1—3** to attach (2) Mounting Brackets to the center and rear mounting locations along the body panel, **(Figures 4 & 5)**.
5. Select (1) SE5 Sidebar. Insert (6) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 6)**. Attach the Sidebar to the Mounting Brackets with (6) 8mm Flat Washers, (6) 8mm Lock Washers and (6) 8mm Hex Nuts, **(Figure 7)**.
6. Level and adjust the Running Board as necessary and fully tighten all hardware.
7. Repeat **Steps 1—6** to attach (1) Sidebar to the Passenger/Right side.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Sidebars.

**Driver/Left Side Installation Pictured****(Fig 1) Driver/Left side front mounting location**

(3) 8mm Flat Washers  
(3) 8mm Nylon Lock Nuts

**(Fig 2) Attach Bracket to the (3) studs****(Fig 3) Attach (1) Plastic Cover to the Mounting Bracket with (2) Plastic Clips****(Fig 4) Driver/Left side center mounting location**

2019-24 DODGE RAM 1500 CREW CAB (Excl. 19-24 Ram 1500 Classic)  
Driver/Left Side Installation Pictured

