



TEL: 1-866-XANATOS


INSTALLATION INSTRUCTIONS

SE5 SIDEBARS

**05-24 NISSAN FRONTIER KING CAB/05-12 SUZUKI EQUATOR EXTRA CAB
PART#E3069**

PARTS LIST:


1	Driver/Left Sidebar	12	8mm Lock Washers
1	Passenger/Right Sidebar	12	8mm Hex Nuts
3	Driver/Left Mounting Brackets	12	8mm Flanged Nuts
3	Passenger/Right Mounting Brackets	6	Plastic Covers
12	8mm x 20mm T-Bolts	12	Plastic Clips
24	8mm x 24mm OD x 2mm Flat Washers		

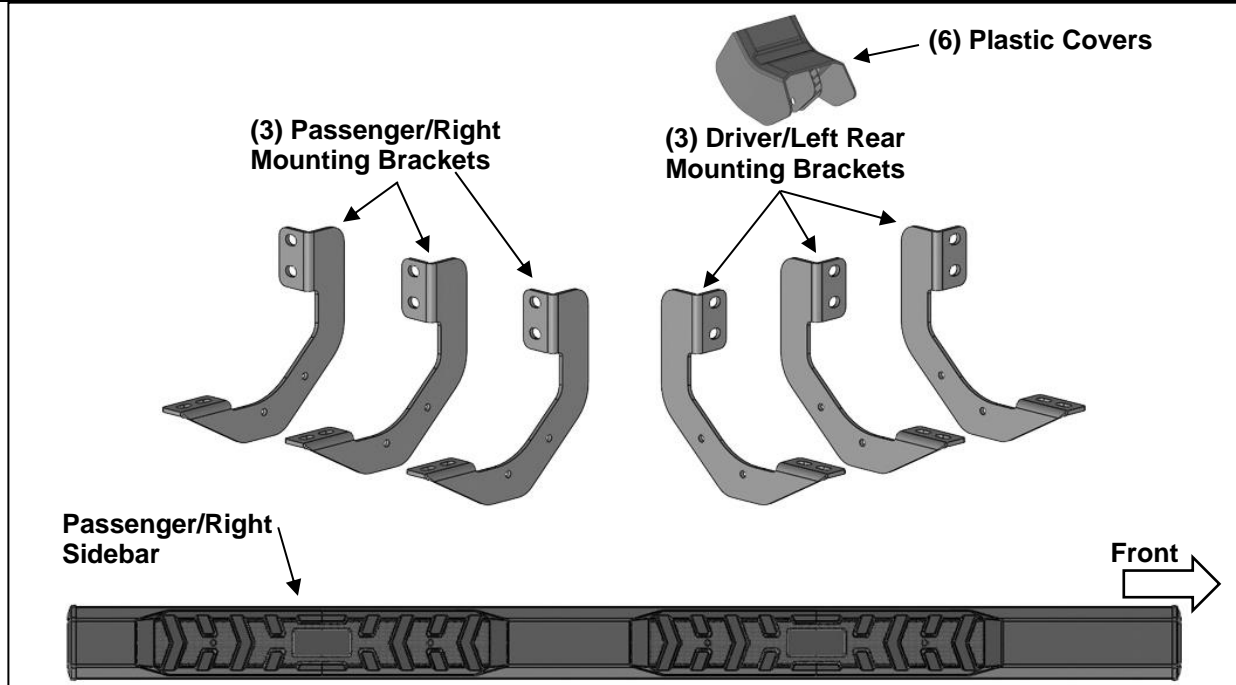


PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CLEAN MOUNTING STUDS WITH WIRE BRUSH TO REMOVE PAINT AND DEBRIS.
2. Starting on the Passenger/Right front of the vehicle, **(Figure 1)**. Attach (1) Mounting Bracket to the front location with (2) 8mm Flat Washers and (2) 8mm Flange Nuts, **(Figure 2)**. Do not tighten hardware.
3. Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 3)**.
4. Repeat **Steps 2 & 3** to attach the remaining (2) Passenger/Right Mounting Brackets to the center and rear locations, **(Figure 4)**.
5. Select the Passenger/Right SE5 Sidebar. Insert (6) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 5)**. Attach the Sidebar to the Mounting Brackets with (6) 8mm Flat Washers, (6) 8mm Lock Washers and (6) 8mm Hex Nuts, **(Figure 6)**. Do not tighten hardware.
6. Level and adjust the SE5 Sidebar and tighten all hardware.
7. Repeat **Steps 1—6** to attach the Driver/Left SE5 Sidebar.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Sidebars.

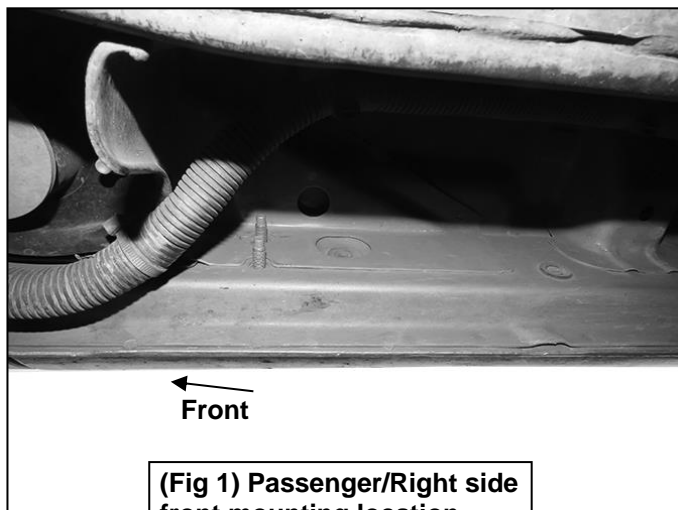Passenger/Right Side Installation Pictured


(Fig 1) Passenger/Right side front mounting location

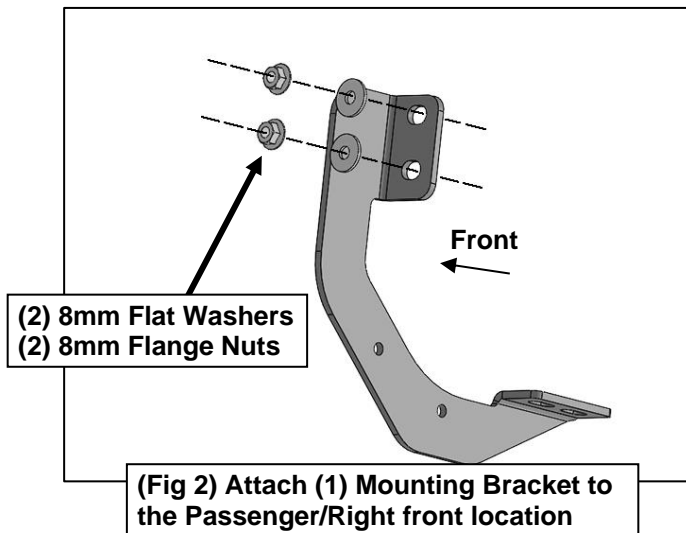


(Fig 2) Attach (1) Mounting Bracket to the Passenger/Right front location

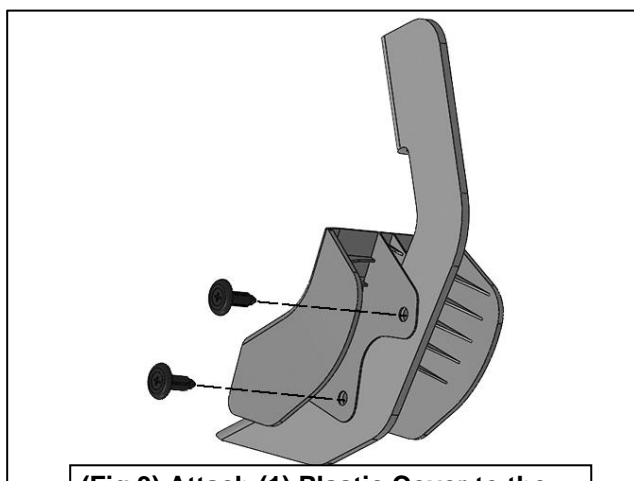


(Fig 3) Attach (1) Plastic Cover to the Mounting Bracket with (2) Plastic Clips

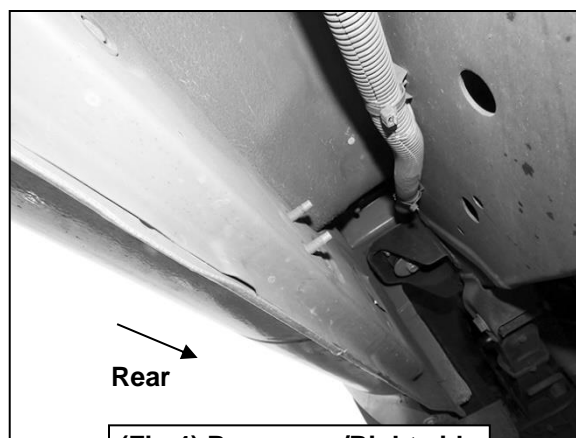

(Fig 4) Passenger/Right side rear mounting location

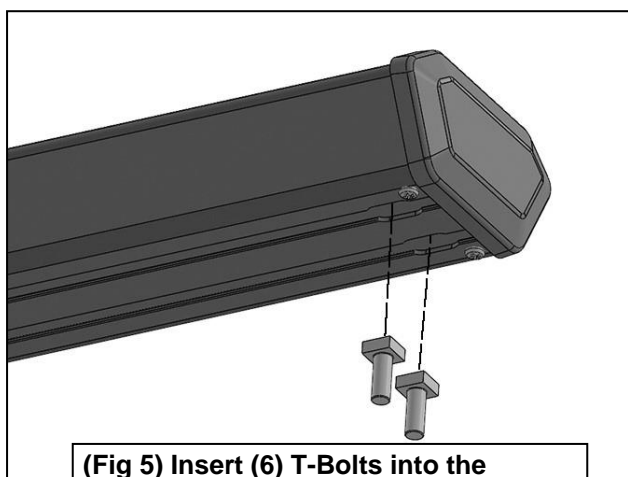

(Fig 5) Insert (6) T-Bolts into the bottom of the Sidebar, (3) per channel

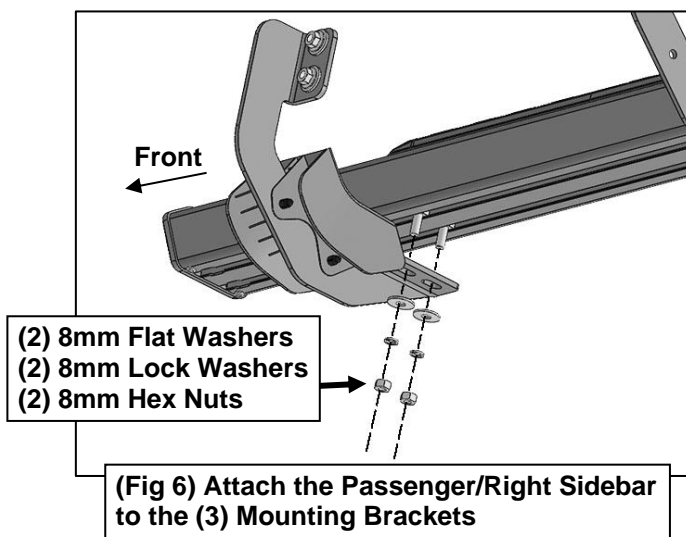

(Fig 6) Attach the Passenger/Right Sidebar to the (3) Mounting Brackets