



**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**


**SE5 SIDEBAR**

**05-24 NISSAN FRONTIER CREW CAB**

**PART#E30/E3079**

## PARTS LIST:

2	SE5 Sidebars	12	8mm Lock Washers
3	Driver/Left Mounting Brackets	12	8mm Hex Nuts
3	Passenger/Right Mounting Brackets	12	8mm Flanged Nuts
12	8mm x 20mm T-Bolts	6	Plastic Covers
24	8mm x 24mm OD x 2mm Flat Washers	12	Plastic Clips

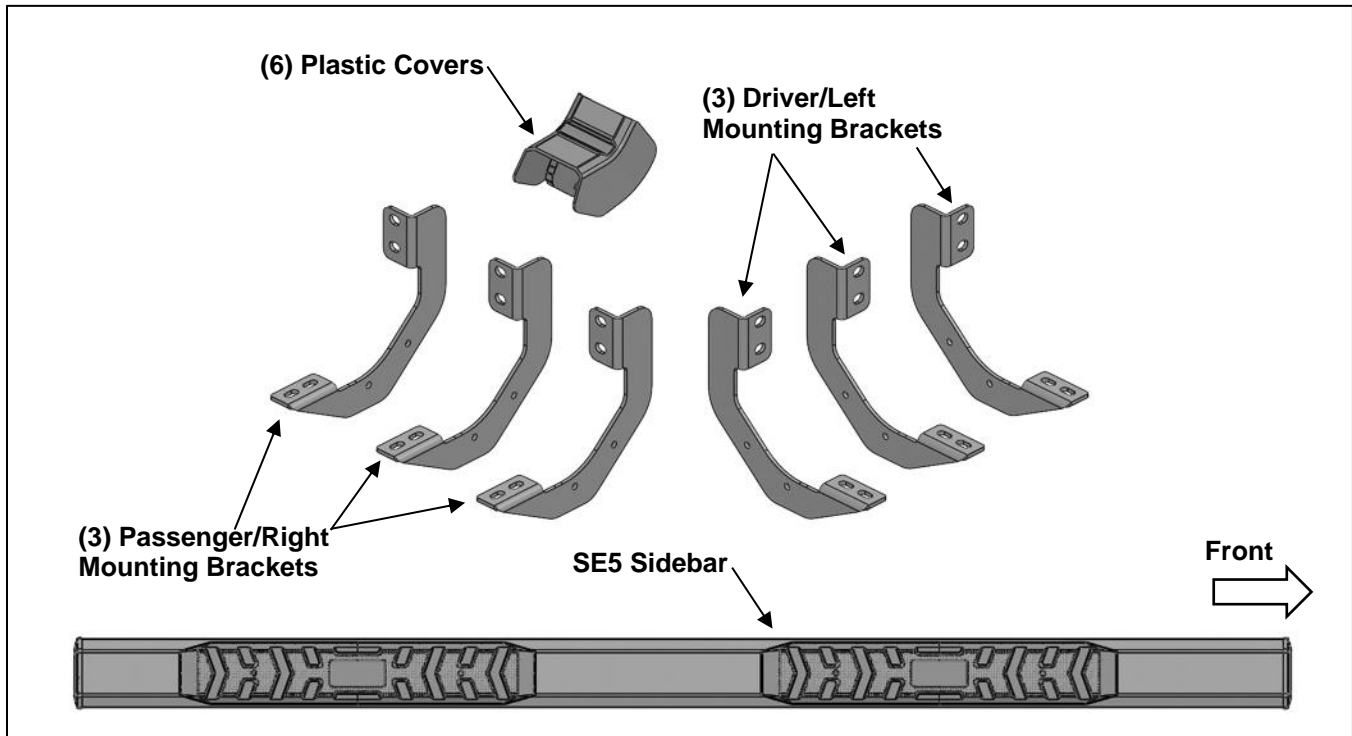


## PROCEDURE:


1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CLEAN MOUNTING STUDS WITH WIRE BRUSH TO REMOVE PAINT AND DEBRIS.
2. Starting on the Passenger/Right front of the vehicle, **(Figure 1)**. Attach (1) Passenger/Right Mounting Bracket to the front location with (2) 8mm Flat Washers and (2) 8mm Flange Nuts, **(Figure 2)**. Do not tighten hardware.
3. Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 3)**.
4. Repeat **Steps 2 & 3** to attach the remaining (2) Passenger/Right Mounting Brackets and (2) Plastic covers to the Passenger/Right center and rear locations, **(Figure 4)**.
5. Select the Passenger/Right SE5 Sidebar. Insert (6) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 5)**. Attach the Sidebar to the Mounting Brackets with (6) 8mm Flat Washers, (6) 8mm Lock Washers and (6) 8mm Hex Nuts, **(Figure 6)**. Do not tighten hardware.
6. Level and adjust the SE5 Sidebar and tighten all hardware.
7. Repeat **Steps 1—5** to attach the Driver/Left SE5 Sidebar.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Sidebars.


## Passenger/Right Side Installation Pictured

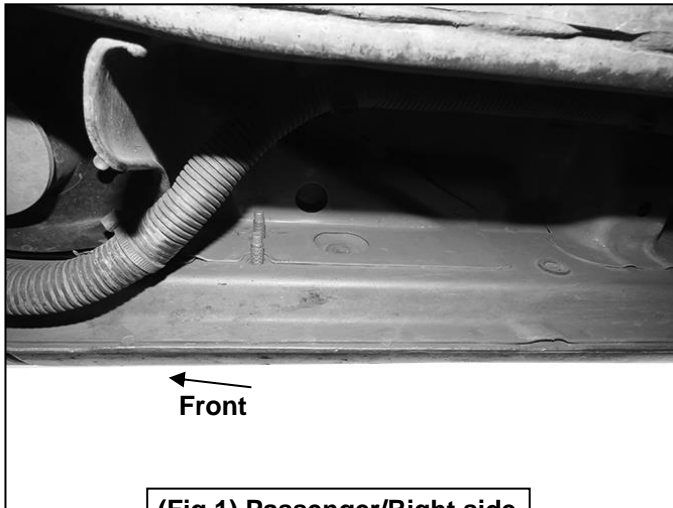


(Fig 1) Passenger/Right side front mounting location

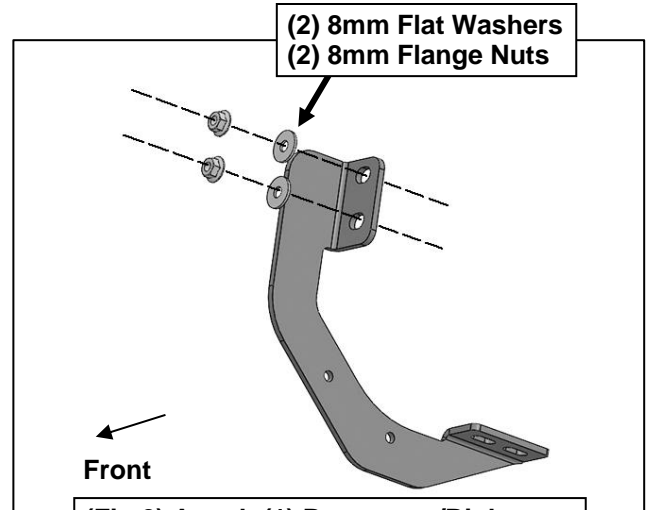


(Fig 2) Attach (1) Passenger/Right Mounting Bracket to the front location

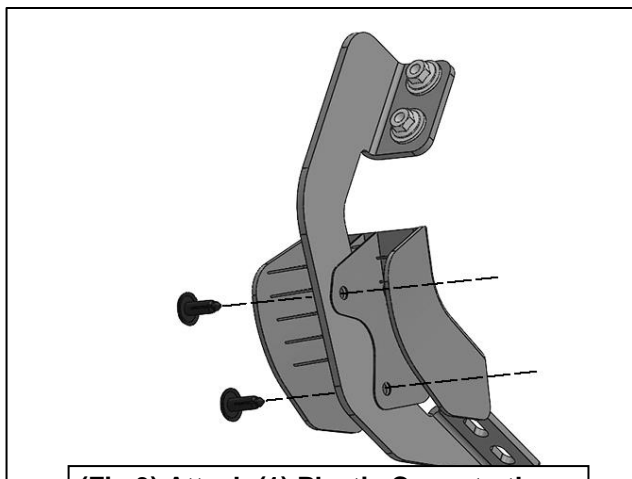


(Fig 3) Attach (1) Plastic Cover to the Mounting Bracket with (2) Plastic Clips

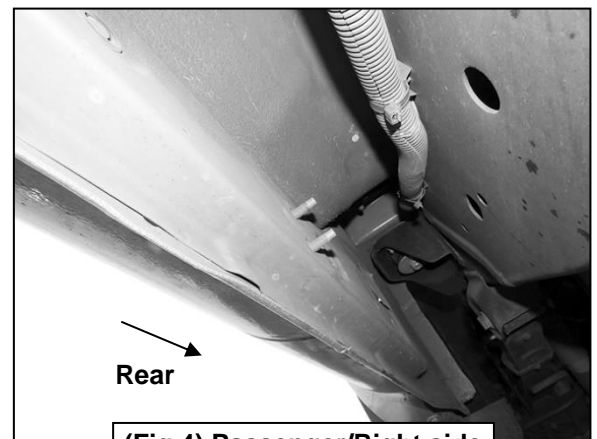

(Fig 4) Passenger/Right side rear mounting location

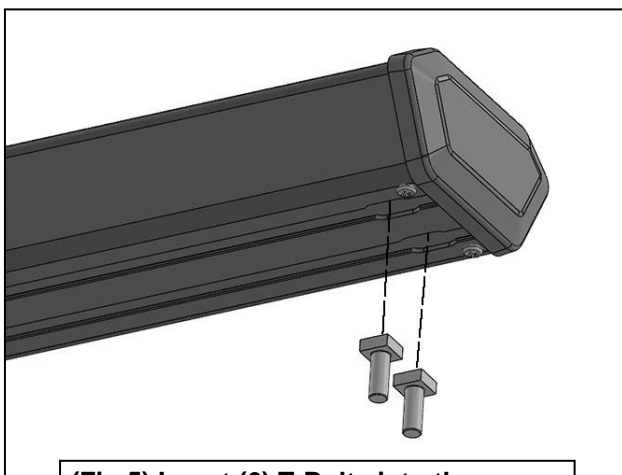

(Fig 5) Insert (6) T-Bolts into the bottom of the Sidebar, (3) per channel

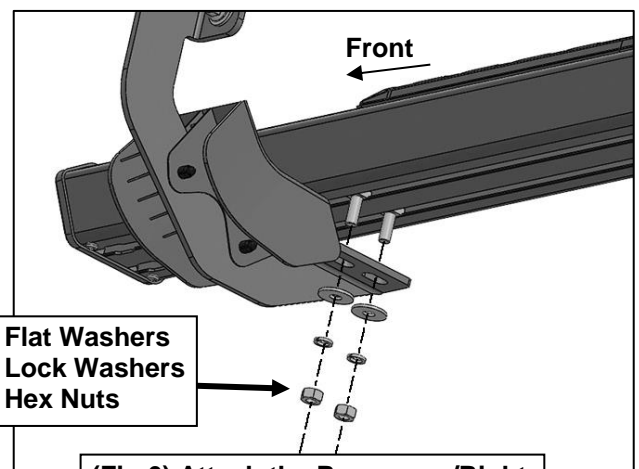

(2) 8mm Flat Washers  
(2) 8mm Lock Washers  
(2) 8mm Hex Nuts

(Fig 6) Attach the Passenger/Right Sidebar to the Mounting Brackets