

# **INSTALLATION INSTRUCTION**

**17-21 Honda CRV**

**Stainless Double Layer Front Runner**

**PART # FD-HO01S**




Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Grille Guard	1		7	Hexagon Nut	4	M12
2	Bracket (left)	1		8	U-Bolt	2	M10
3	Bracket (right)	1		9	Large Washer	4	$\phi 10 \times 30 \times 2.5$
4	Hex Head Bolt	4	M12X35	10	Spring Washer	4	$\phi 10$
5	Large Washer	8	$\phi 12 \times 30 \times 3.0$	11	Hexagon Nut	4	M10
6	Spring Washer	4	$\phi 12$				

INSTALLATION PICTURES

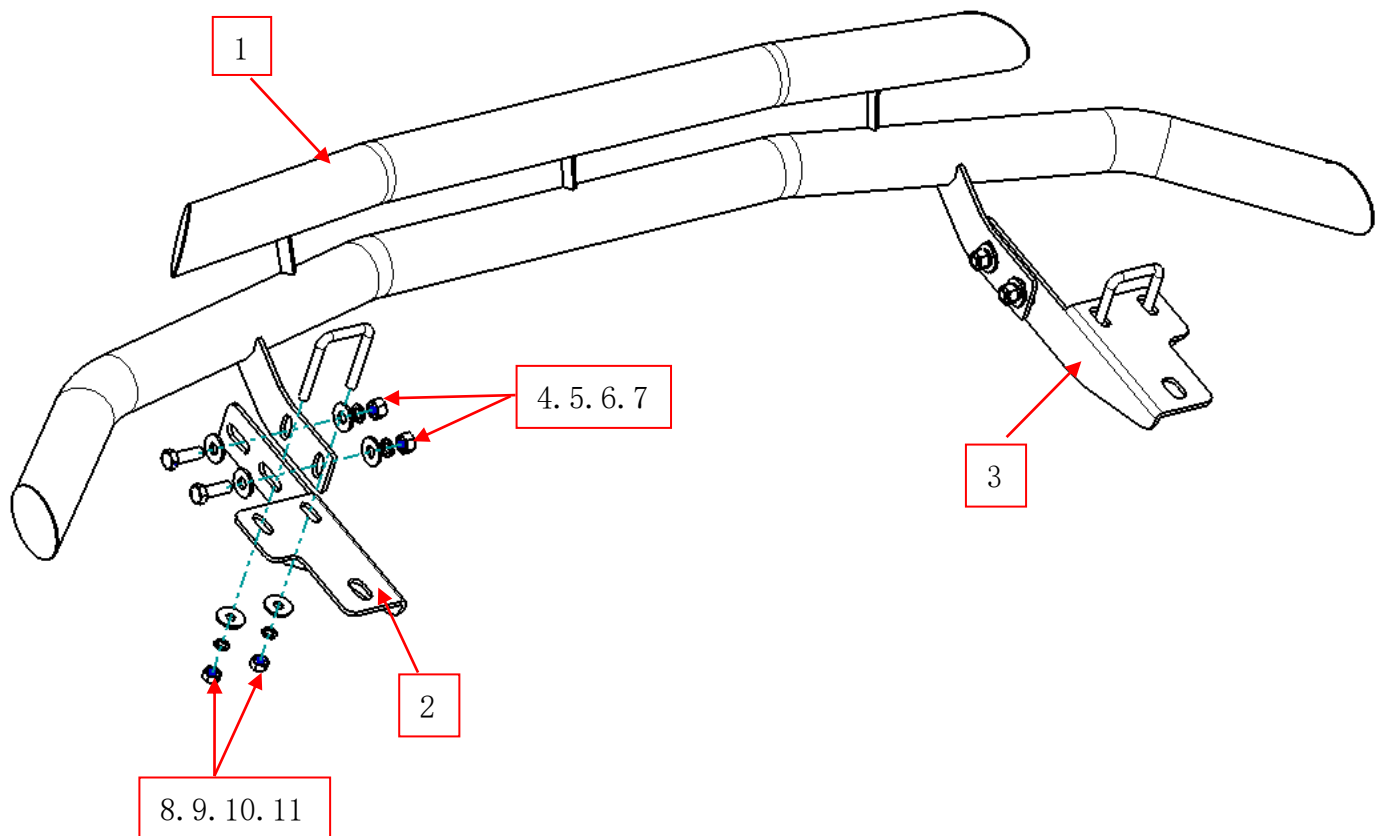

**Disclaimer:** Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.

