



**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**

**MAX BEACON BULL BAR FOR NISSAN PATHFINDER 13-21**

**PART # MAB-NIA1802B**




## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list


NO.	QTY	PIC	NO.	QTY	PIC
①	2		②	2	
		Bracket (L/R)			M10 Plastic Block
③	2				
		M10 Bolt			

### Standard Parts:

NO.	NAME	QTY	NO.	NAME	QTY
④	Lock Washer D12	6	⑤	Flat Washer D12	12
⑥	Flat Washer D10	2	⑦	Lock Washer D10	2
⑧	Hex Nut M12	6	⑨	Hex Bolt M12-35	6
⑩	Hex Nut M10	2			

## Installation Steps

### INSTALLING PICTURE:

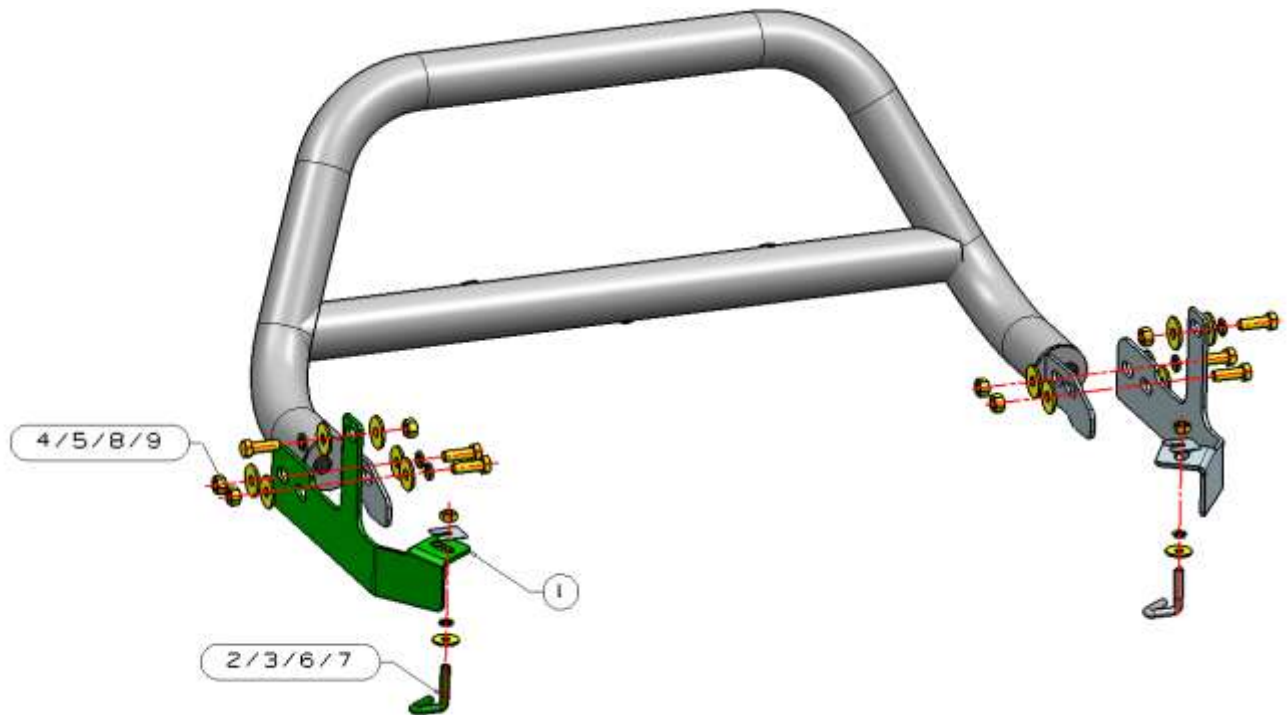

STEP 1: Check all the contents are available in accordance with the above list.

STEP 2: Install Bracket L/R on the car.

STEP 3: Install the bull bar on the brackets as above figure shown

STEP 4: Test and make sure that the bull bar is steadily fixed.

STEP 5: Installation is finished.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.