



INSTALLATION INSTRUCTIONS

MAX BULL BAR FOR NISSAN MURANO 15-20

PART # MBB-NIA1602

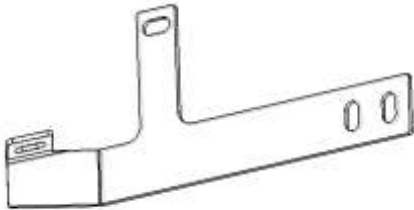
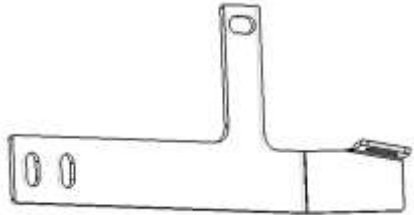
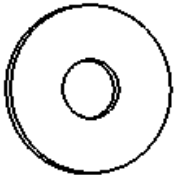

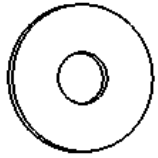

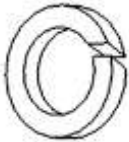
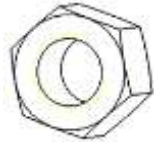
Before Installation

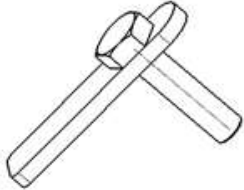

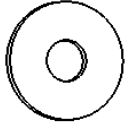



- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | QTY | PIC | NO. | QTY | PIC |
|-----|-----|---|-----|-----|---|
| ① | 1 |  | ② | 1 |  |
| | | Bracket-L | | | Bracket-R |
| ③ | 2 |  | ④ | 2 |  |
| | | D14 Flat washer | | | M12*40 Hex bolt |
| ⑤ | 12 |  | ⑥ | 4 |  |
| | | D12 Flat washer | | | M12*35 Hex bolt |
| ⑦ | 6 |  | ⑧ | 6 |  |
| | | D12 Spring washer | | | M12 Hex nut |

| | | | | | |
|---|---|--|---|---|---|
| ⑨ | 2 |  M8 T-bolt | ⑩ | 2 |  D8 Spring washer |
| ⑪ | 4 |  D8 Spring washer | ⑫ | 2 |  M8 Hex nut |
| ⑬ | 2 |  M12 Plastic fixture block | ⑭ | 2 |  M8 Plastic fixture block |

Installation Steps

INSTALLING PICTURE

FIG.1

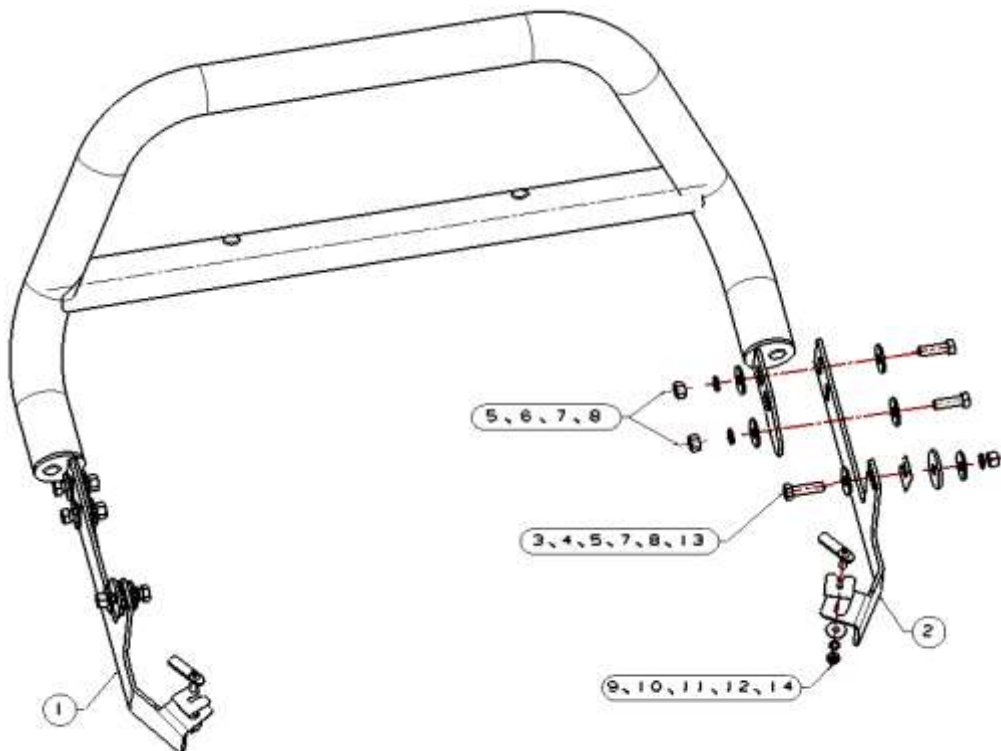
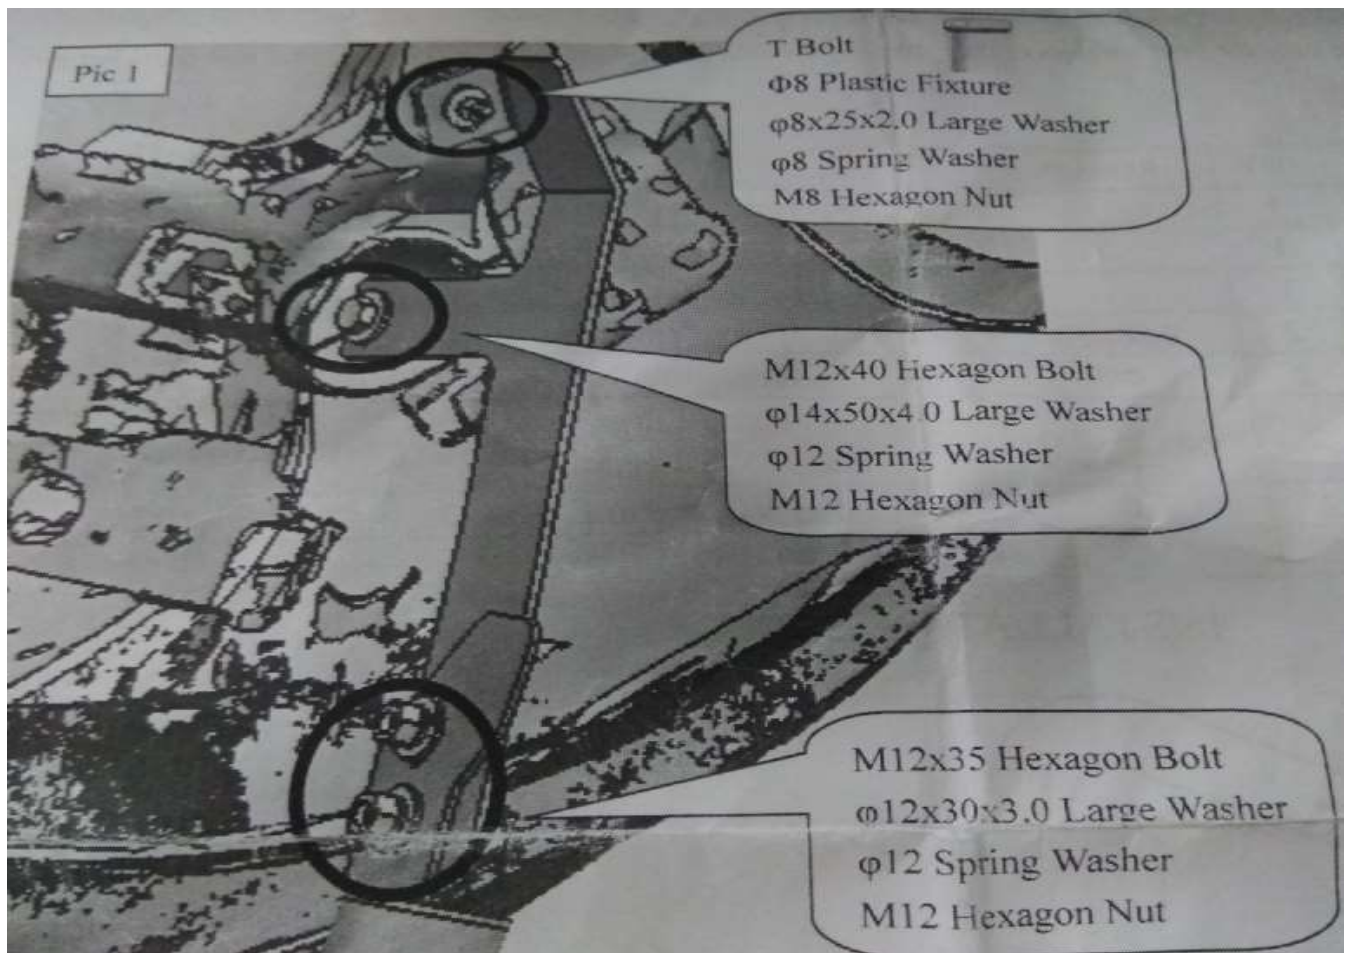
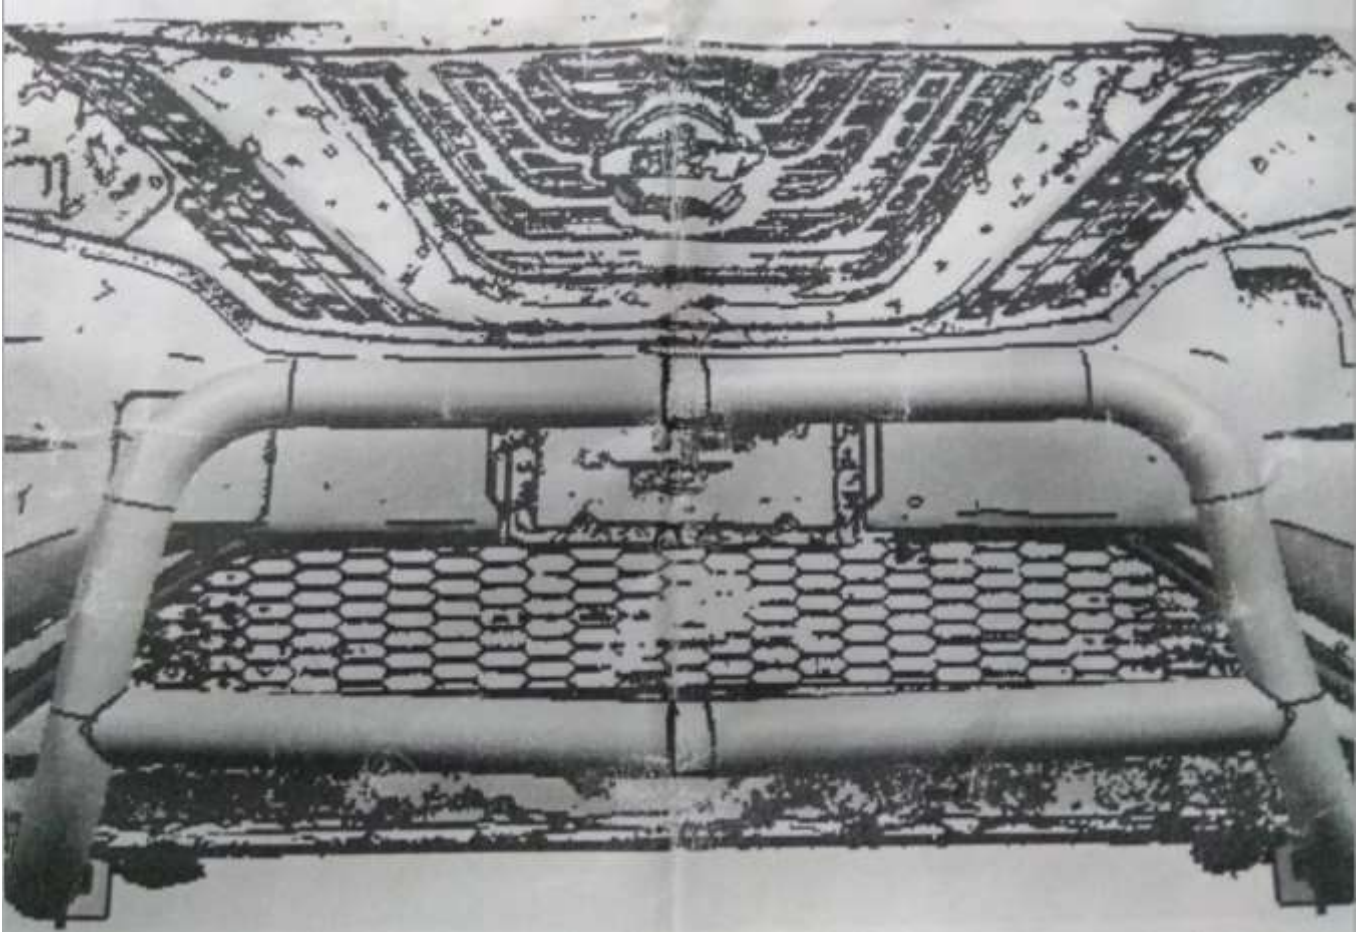


FIG.2



Step 1: Check all the contents are available in accordance with the above list.

Step 2: Find out the mounting position (FIG.2), using factory bolts to install bracket -L&R, then connect the bull bar and the brackets as FIG.1.



Step 3 : Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.