



**TEL: 1-866-XANATOS**

**INSTALLATION INSTRUCTIONS**  
**MAX T BULL BAR FOR 2007-2020 Toyota TUNDRA**  
**(BBMAX12T+MT02)**  
**PART # MBT-MT0212**








## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


## Parts list

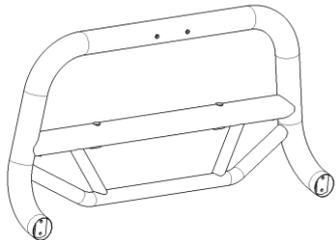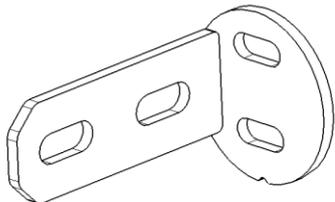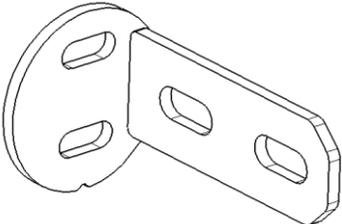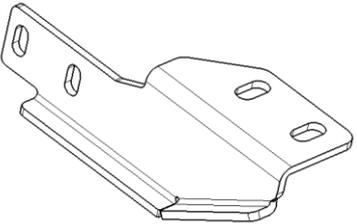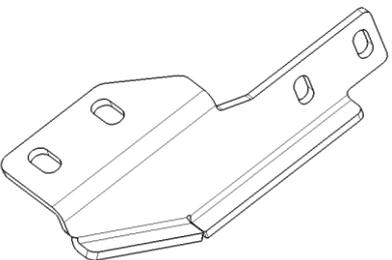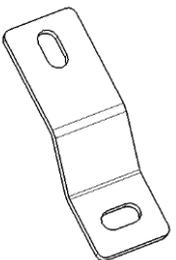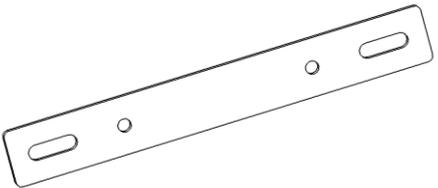NO.	QTY	NAME	NO.	QTY	NAME
①	1	 BULL BAR	②	1	 LEFT TUBE BRACKET
③	1	 RIGHT TUBE BRACKET	④	1	 LEFT FRAME BRACKET
⑤	1	 RIGHT FRAME BRACKET	⑥	2	 LICENSE PLATE BRACKET1
⑦	1	 LICENSE PLATE BRACKET2			

⑧	4	COMBO BOLT M6_20	⑨	4	FLAT WASHER D8_22_2
⑩	8	FLAT WASHER D10_27_3	⑪	4	HEX BOLT M10_35
⑫	4	HEX BOLT M8_35	⑬	4	HEX NUT M6
⑭	4	NYLON LOCK NUT M10	⑮	2	HEX BOLT M6_20
⑯	4	FLAT WASHER D6 (6x12x1.6mm)	⑰	4	FLAT WASHER D8
⑱	4	FLAT WASHER D6	⑲	1	Wrench S=4


## Installation Steps

### Installation Fig.

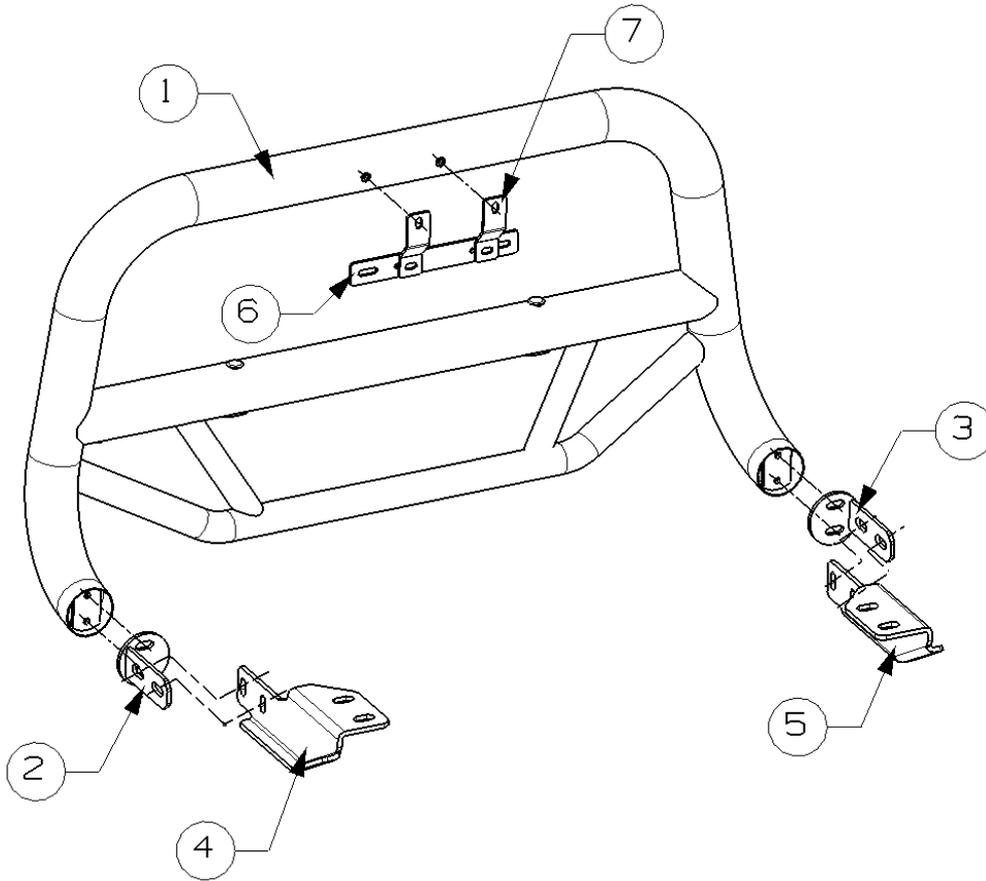

### STEP 1:


Start installation at the driver side, front of the vehicle. Remove the driver side tow hook, (Fig 1).

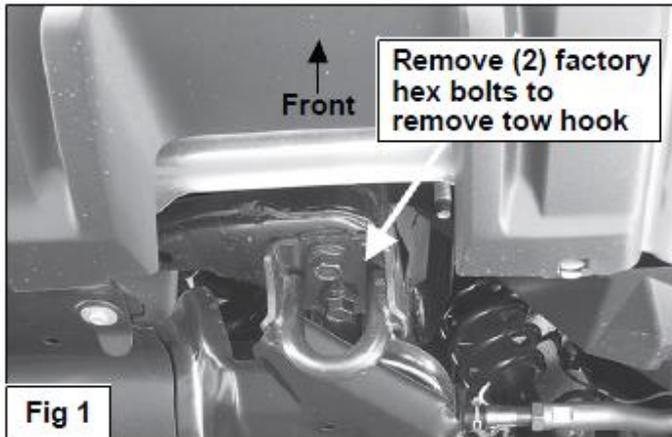

### STEP 2:

Select the driver side Frame Bracket, (Fig 2). Check the fit between the tow hook and the Bracket for reinstallation over the Bracket.

NOTE: Some factory tow hooks may not clear the Bracket and cannot be reinstalled. Check for fit before bolting tow hook and Bracket in place.



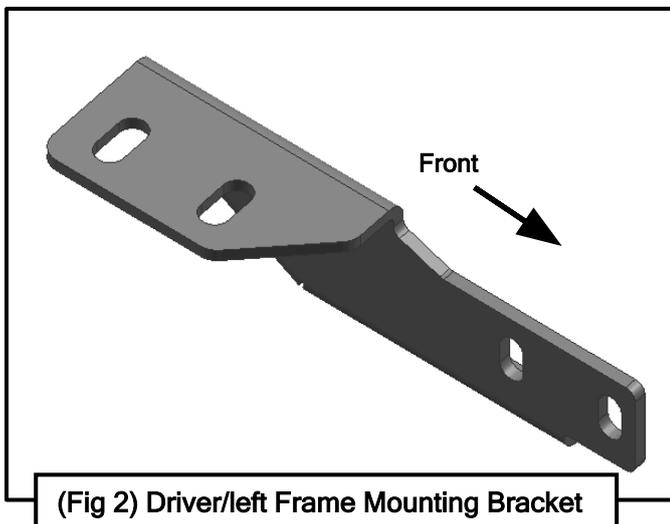


### STEP 3:

Reuse the factory tow hook bolts to attach the Bracket to the underside of the frame channel, either with or without the tow hook, (Fig 3). Do not fully tighten hardware at this time.



**STEP 4:**

Repeat Steps 1-3 for passenger side Frame Mounting Bracket installation. Carefully unwrap the Guard. Select (1) Tube Mounting Bracket. Attach the Bracket to the end of the Guard with (2) 8mm Flat Hex Bolts, (2) 8mm Lock Washers, (2) 8mm Flat Washers, (Fig 4-5). Do not tighten hardware at this time.

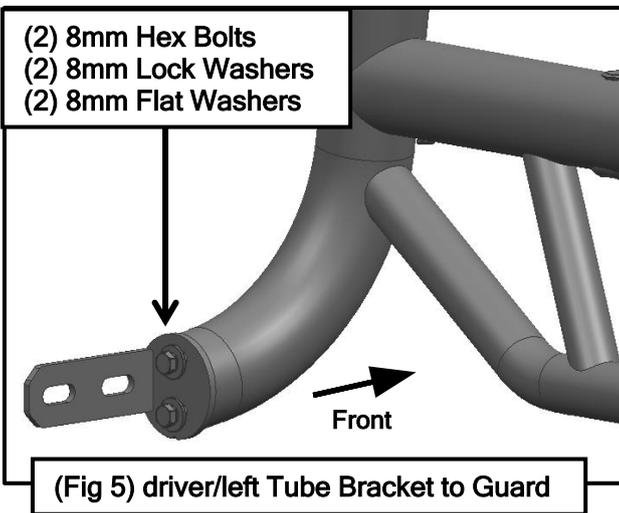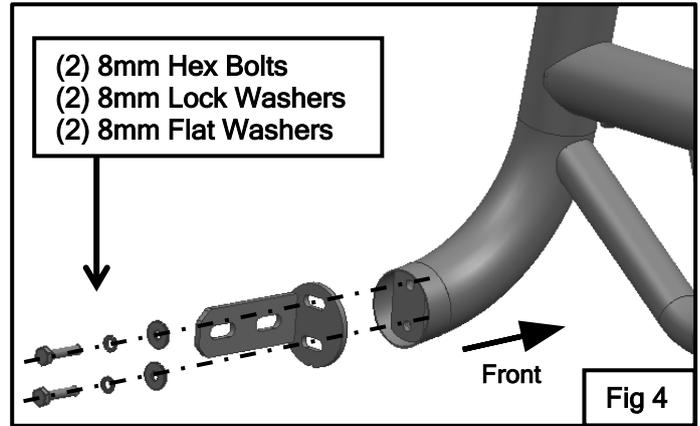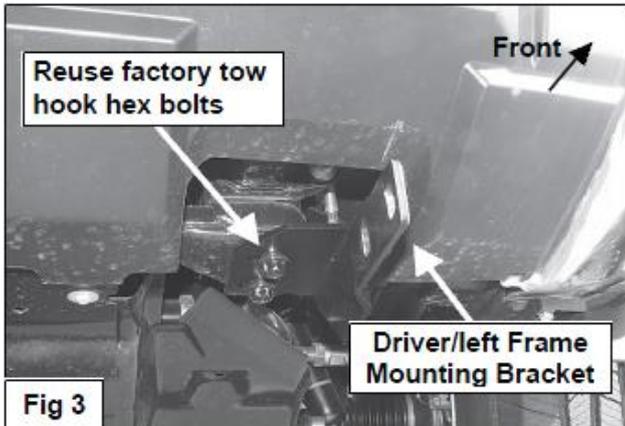

**STEP 5:**

Repeat Step 5 to install the passenger side Tube Mounting Bracket. With assistance, line up the Tube Mounting Brackets on the Guard with the outside of the Frame Brackets. Attach the Guard to the Frame Brackets with the included (4) 10-1.5mm Hex Bolts, (8) 10mm Flat Washers and (4) 10-1.5mm Nylon Lock Nuts, (Fig 6-7). Do not tighten hardware.

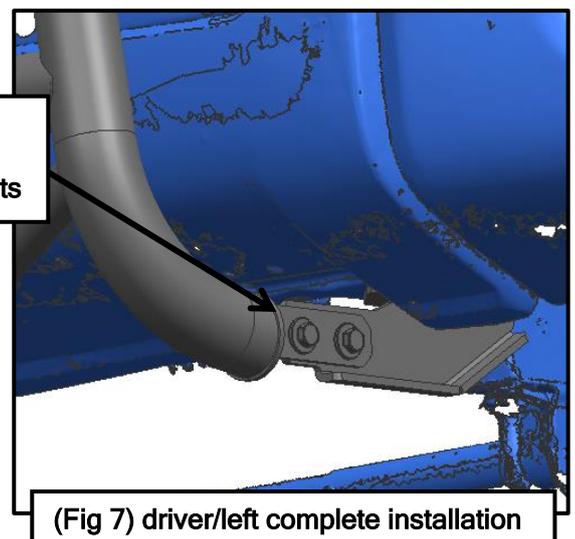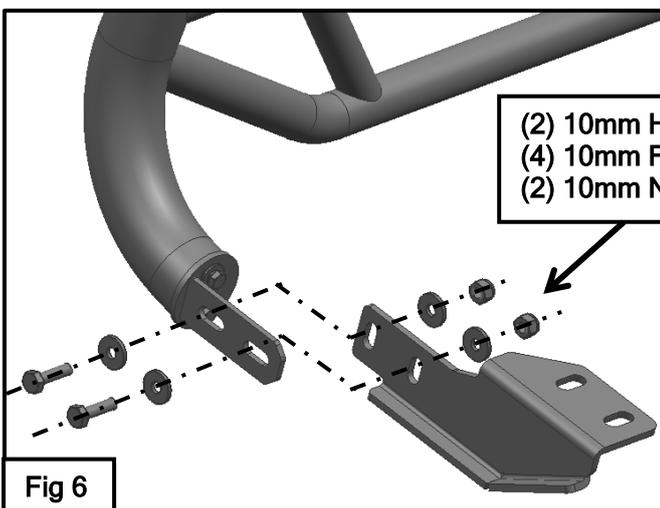


## STEP 6:

Install the license plate as the picture shown

**Step A.** Connect the license plate bracket1 to guard by Combo bolt M6\_20.

**Step B.** Connect the license plate bracket 1 with license plate bracket 2 by (2) HEX BOLT M6\_20;  
(2) FLAT WASHER D6;(2) LOCK WASHER D6;(2) HEX NUT M6.

**Step C.** Install the license plate to license plate bracket 2 by (2) COMBO BOLT M6\_20;  
(2) FLAT WASHER D6;(2) LOCK WASHER D6;(2) HEX NUT M6

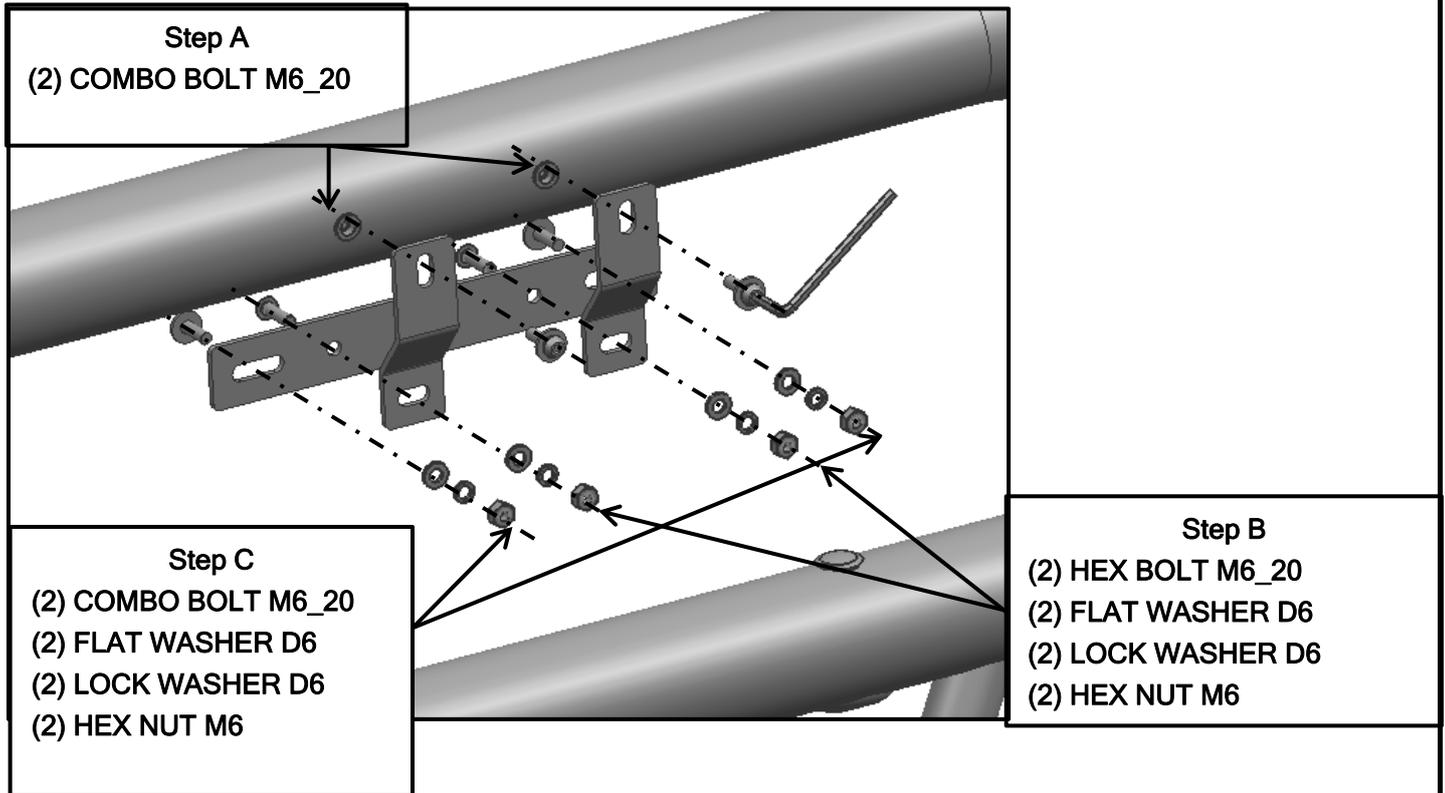


## STEP 7:

Level and adjust the Guard properly and tighten all hardware.

**STEP 8:**

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

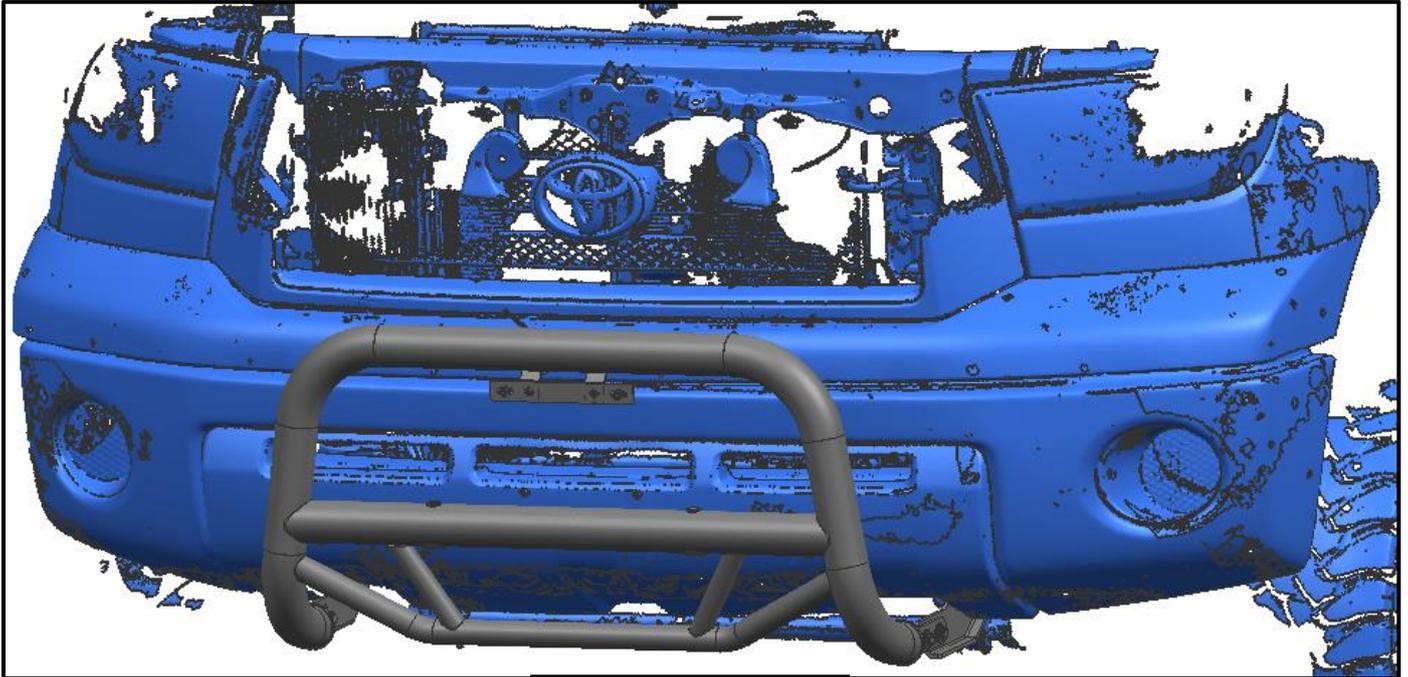

Complete Installation

**NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.