



# **INSTALLATION INSTRUCTIONS**

**PEERLESS RUNNING BOARD FOR NISSAN MURANO 2015-2020**

**PART #PR-NIMUBK-15**






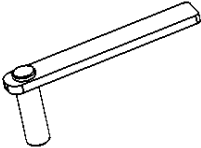


## Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.
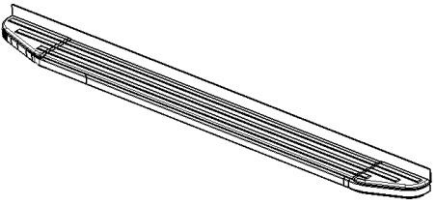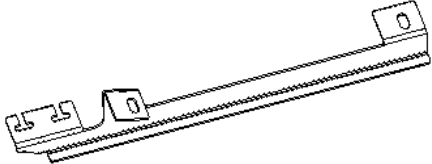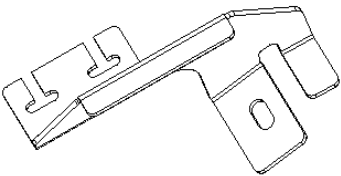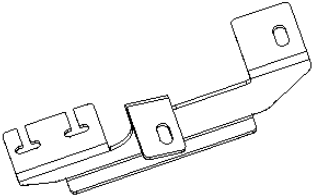
## Parts list

NO.	QTY	PIC	NO.	QTY	PIC
①	2	 Running board	②	2	 Front bracket
③	2	 Middle bracket	④	2	 Rear bracket
⑤	10	 Hex nut M10	⑥	10	 T Bolt
⑦	10	 Lock washer D10	⑧	10	 Flat washer D10

⑨	10	 PVC Plastic block $\phi 10$			
---	----	--	--	--	--

## Installation Steps


### INSTALLING PICTURE:

(The left and right installation methods are the same. Below only shows the left side installation)

Step 1: Verify that all parts are present according to the parts list. Make a clear distinction of left and right side (driving position).

Step 2: Remove the screws or buckles from the mounting brackets of the chassis with tools, and keep the screws.


#### Bottom vehicle hole position diagram



#### Front bracket mounting point

#### Middle bracket mounting point


#### Rear bracket mounting point

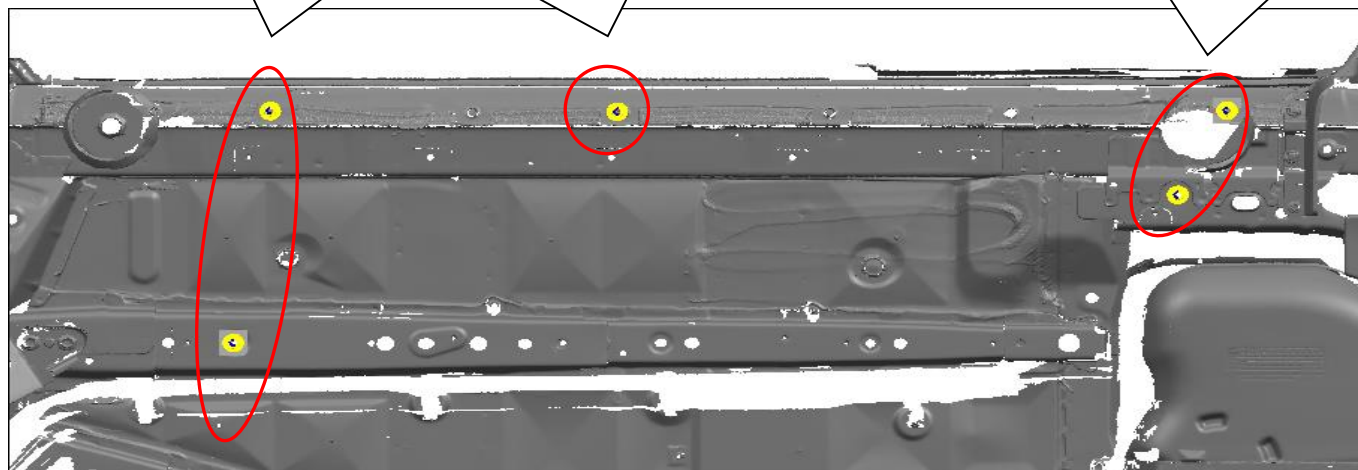

### Step 3: Install brackets


#### 1. Install front brackets

Find out the hole position of the front brackets before installation, put the plastic blocks in T-bolts, then place the bolts to the corresponding hole position. Place the front brackets to the corresponding hole position, mount the brackets with the corresponding accessories (flat washers, lock washers and nuts), snug but do not tighten hardware. (as shown in the diagram below)

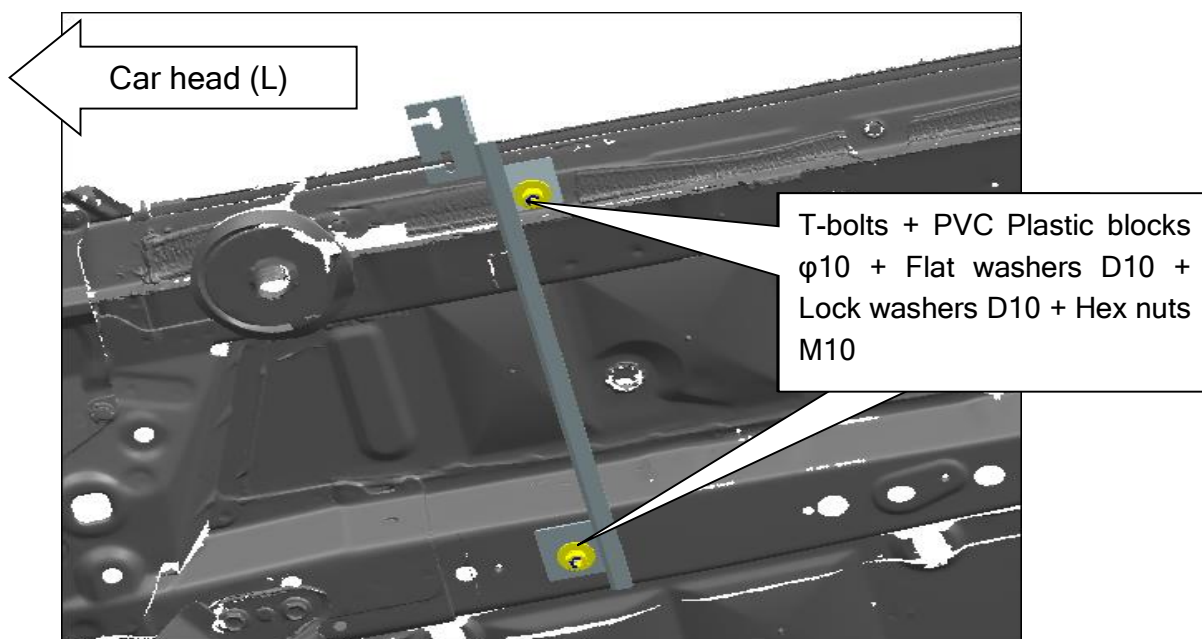

## 2. Install middle brackets


Find out the hole position of the middle brackets before installation, put the plastic blocks in T-bolts, then place the bolts to the corresponding hole position (4 holes). Place the middle brackets to the corresponding hole position, mount the brackets with the corresponding accessories (flat washers, lock washers and nuts), snug but do not tighten hardware. (as shown in the diagram below)

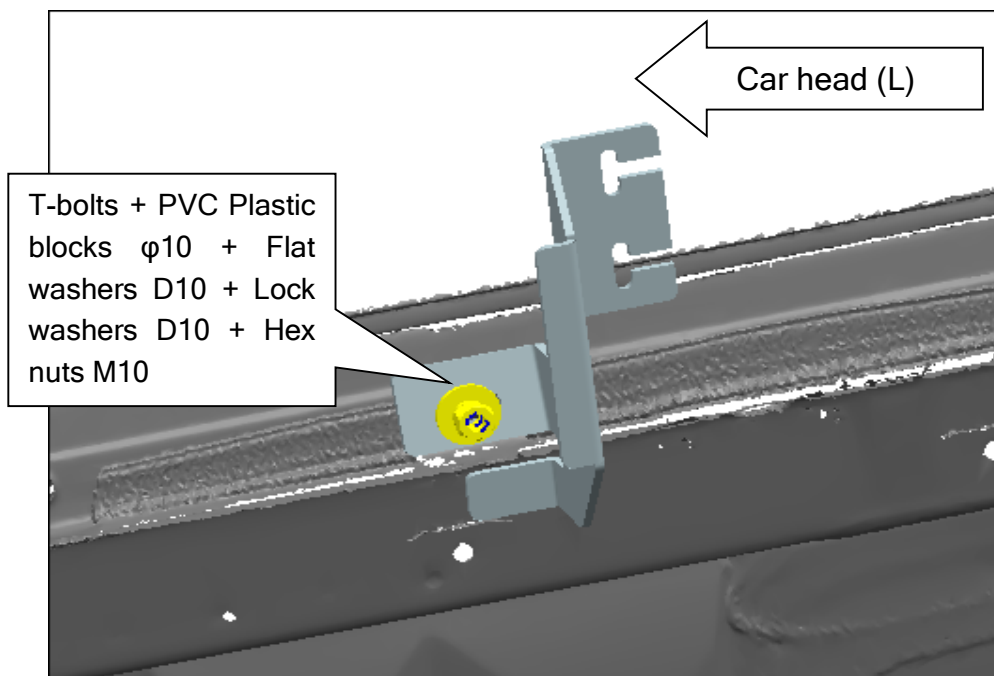

## 3. Install rear brackets


Find out the hole position of the rear brackets before installation, put the plastic blocks in T-bolts, then place the bolts to the corresponding hole position. Place the rear brackets to the corresponding hole position, mount the brackets with the corresponding accessories (flat washers,


lock washers and nuts), snug but do not tighten hardware. (as shown in the diagram below)

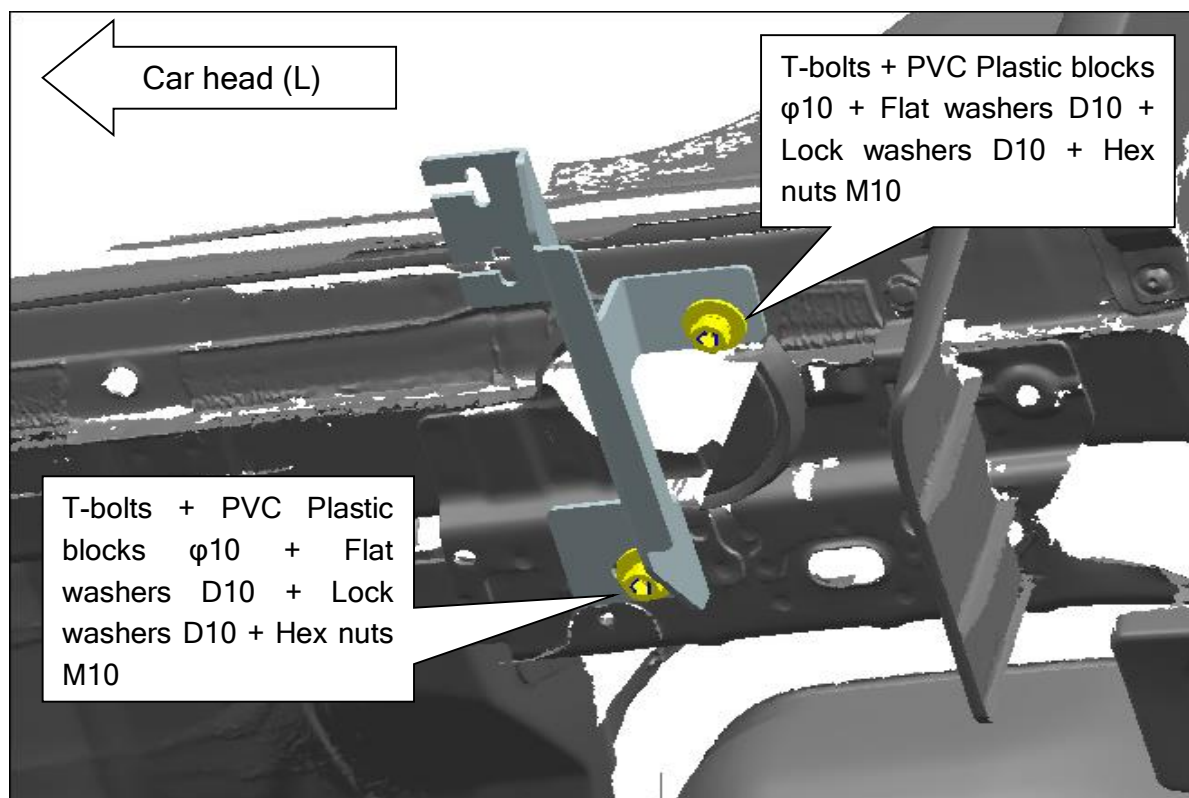


#### 4. Install running board

Remove the original standard parts on the running board that are connected with the brackets, then install the running board and push them toward the car body direction, adjust them to the optimal position, use standard parts to lock the brackets and running boards, and lock the bolts.

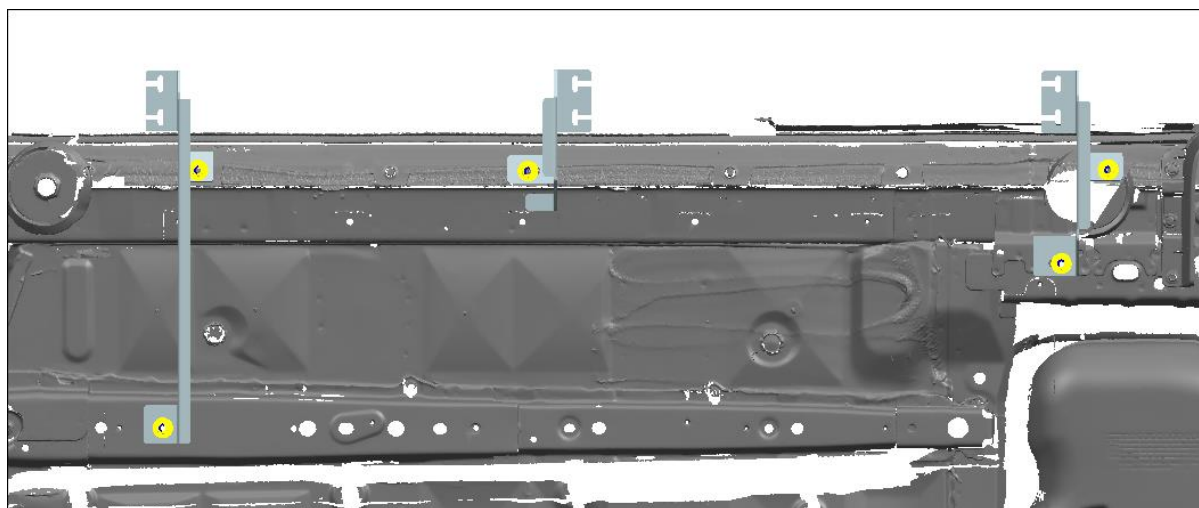

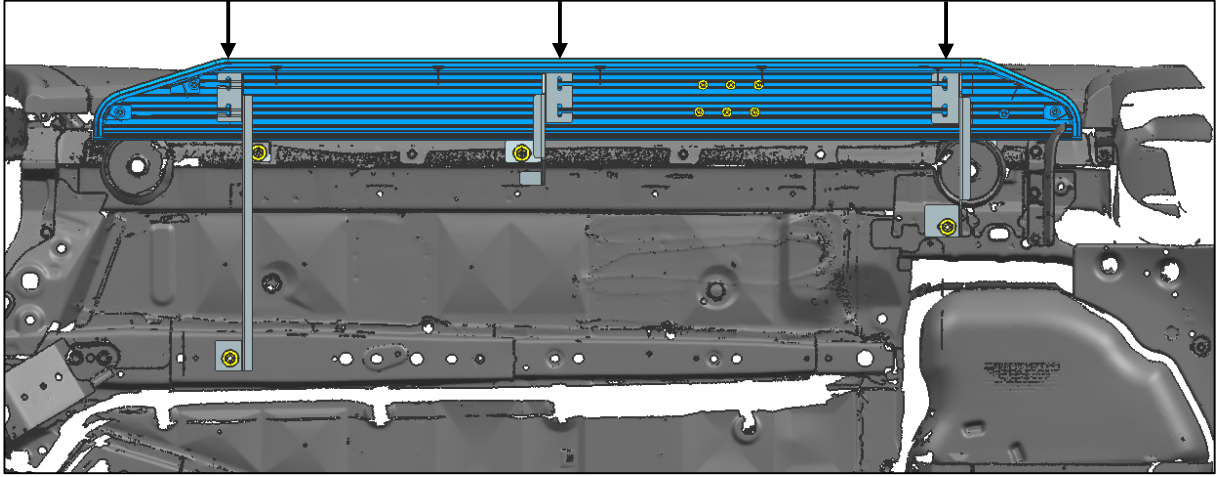

Step4: Installation is finished, pick up all tools.

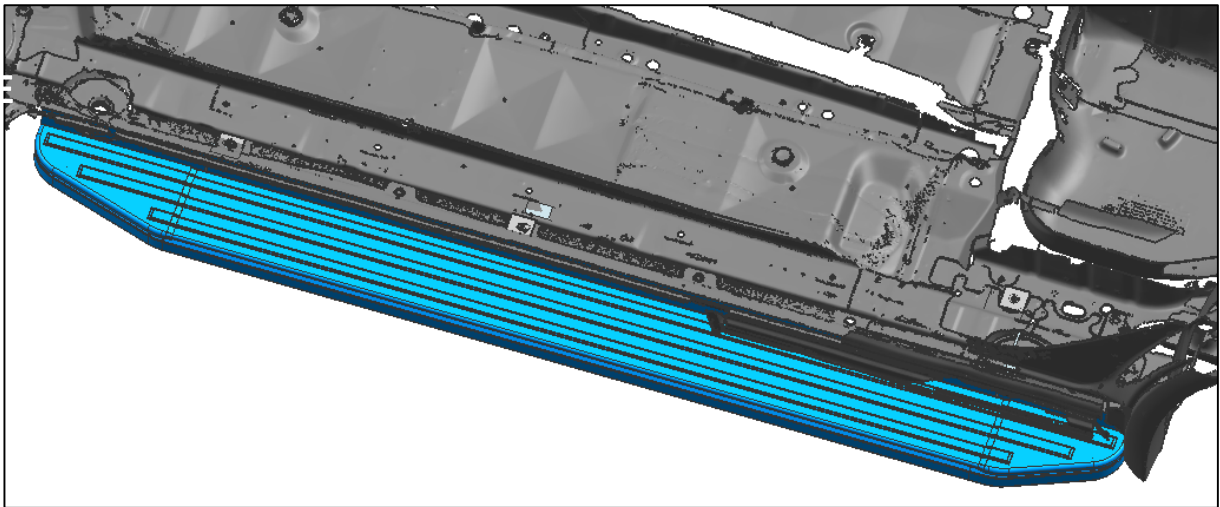

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.