



**TEL: 1-866-XANATOS**

**INSTALLATION INSTRUCTIONS**  
**PREMIUM RUNNING BOARD FOR VW ATLAS 2018-2020**  
**PART # PR-W2076**



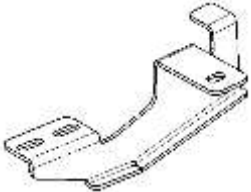
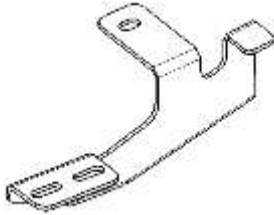
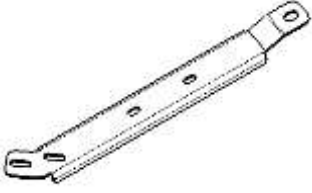
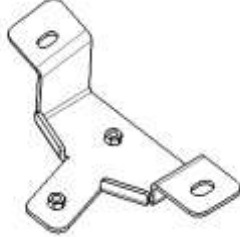
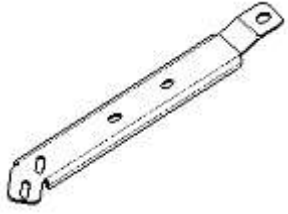
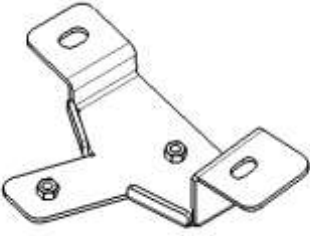
## Before Installation




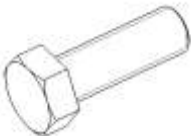



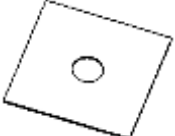



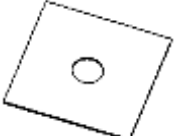
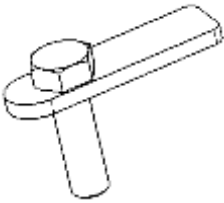
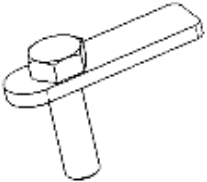
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

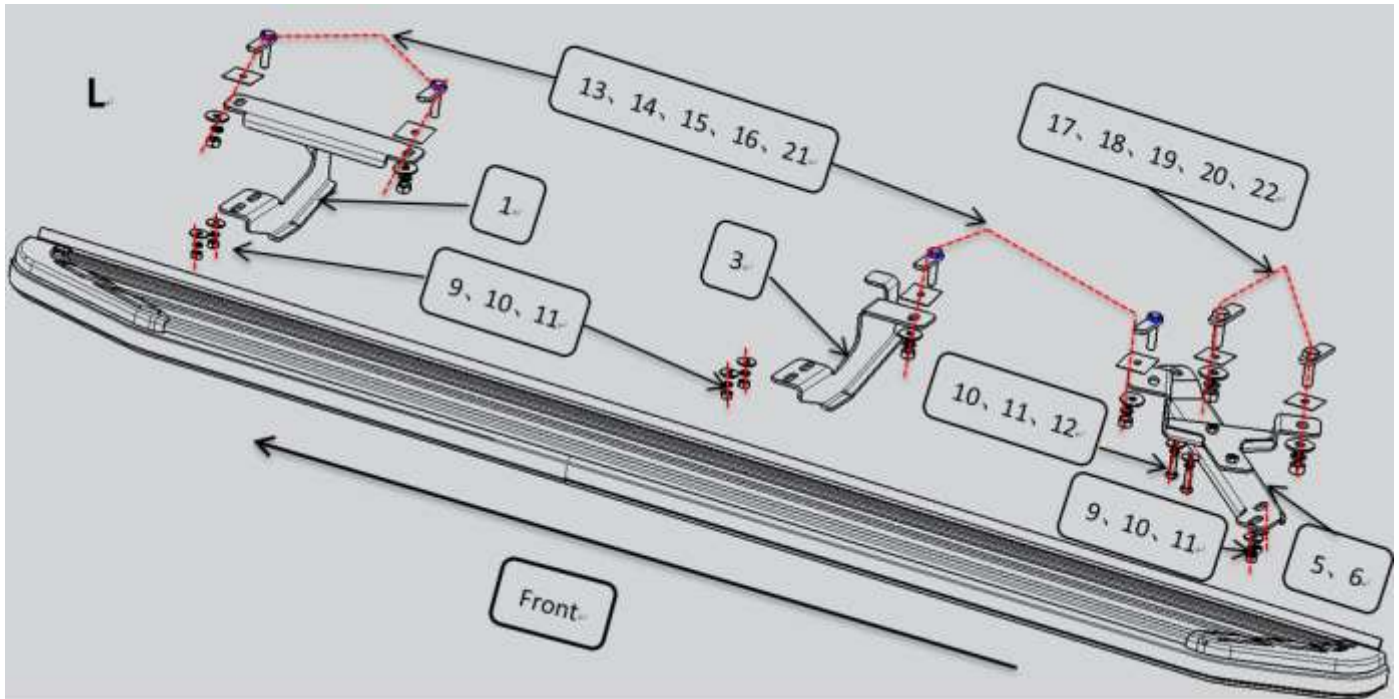
## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front Bracket (L)	②	1	 Front Bracket (R)
③	1	 Middle Bracket (L)	④	1	 Middle Bracket (R)
⑤	1	 Rear Bracket 1 (L)	⑥	1	 Rear Bracket 2 (L)
⑦	1	 Rear Bracket 1 (R)	⑧	1	 Rear Bracket 2 (R)

⑨	12	 Hex Nut M8	⑩	16	 Large Washer D8
⑪	16	 Spring Washer D8	⑫	4	 Hex bolt M8-25
⑬	8	 Hex Nut M10	⑭	8	 Large Washer D10
⑮	8	 Spring Washer D10	⑯	8	 PVC D10
⑰	4	 Hex Nut M12	⑱	4	 Large Washer D12
⑲	4	 Spring Washer D12	⑳	4	 PVC D12
㉑	8	 T-Bolt M10	㉒	4	 T-Bolt M12

## Installation Steps

### Installation Figure:



**STEP 1:** Verify all parts are present.

**STEP 2:** Install the brackets and running board on the bottom of vehicle as above picture.

**STEP 3:** Check the running board if it install correctly, then tighten all the hardware.

**STEP 4:** Installation finished.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.