

INSTALLATION INSTRUCTION

Peerless Rear Bumper

Guard

16-21 Honda Pilot

PART #PRB1H3



**BLACK HORSE
OFF ROAD**


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

PART LIST

NO.	NAME	QT Y	REMARK	NO.	NAME	QT Y	REMARK
①	Rear Guard	1		⑨	Hexagon Bolt	4	M10x35
②	Right Bracket 1	1		⑩	Large Washer	8	φ10x30x2.5
③	Left Bracket 1	1		⑪	Spring Washer	4	φ10
④	Right Bracket 2	1		⑫	Hexagon Nut	4	M10
⑤	Left Bracket 2	1		⑬	Hexagon Bolt (fine thread)	4	M14x1.5x40
⑥	Hexagon Bolt	4	M8x25	⑭	Spring Washer	4	φ14
⑦	Large Washer	4	φ8x25x2.0	⑮	Large Washer	4	φ14x40x2.5
⑧	Spring Washer	4	φ8				

INSTALLATION PICTURE

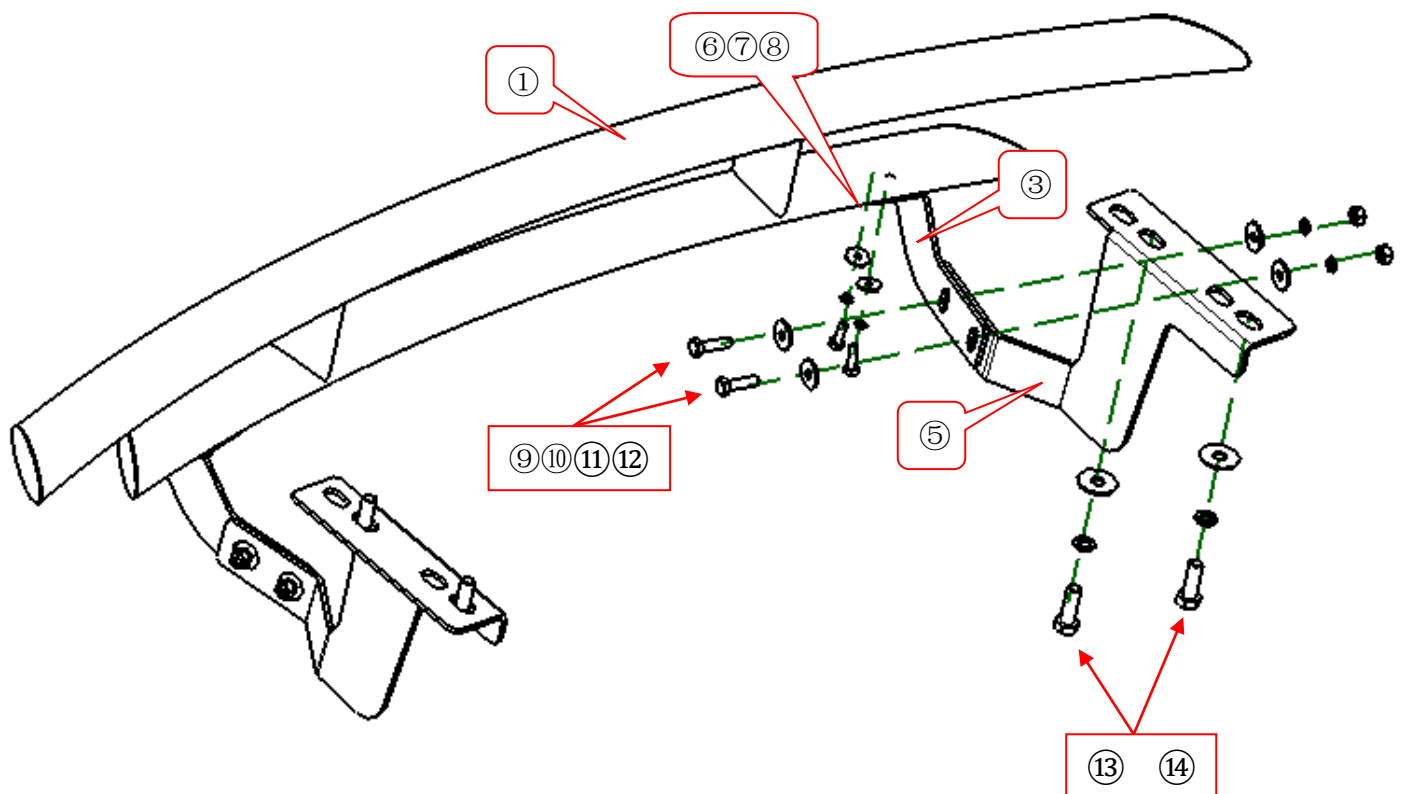

Disclaimer: Caused due to improper installation initiates some related problem and losses, are beyond our company's quality assurance.