

INSTALLATION INSTRUCTION

Peerless Rear Bumper Guard

16 – 21 Jeep Renegade

Part # PRB1J2



Attention:


- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

Part List:

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Double Layer	1		9	Hexagon Nut	4	M12
2	Bracket (Right)	1		10	Plastic Fixture	2	Φ8
3	Bracket (Left)	1		11	T-Bolt 1	2	
4	Bracket 2 (Right)	1		12	Hexagon Bolt	4	M8x25
5	Bracket 2 (Left)	1		13	Flat Washer	6	Φ 8x25x2.0
6	Hexagon Bolt	4	M12x35	14	Spring Washer	6	Φ 8
7	Spring Washer	4	Φ 12	15			
8	Flat Washer	8	Φ 12x30x3.0	16			

Remark: The installation way for the driver side is same with the passenger side.

INSTALLATION PICTURE

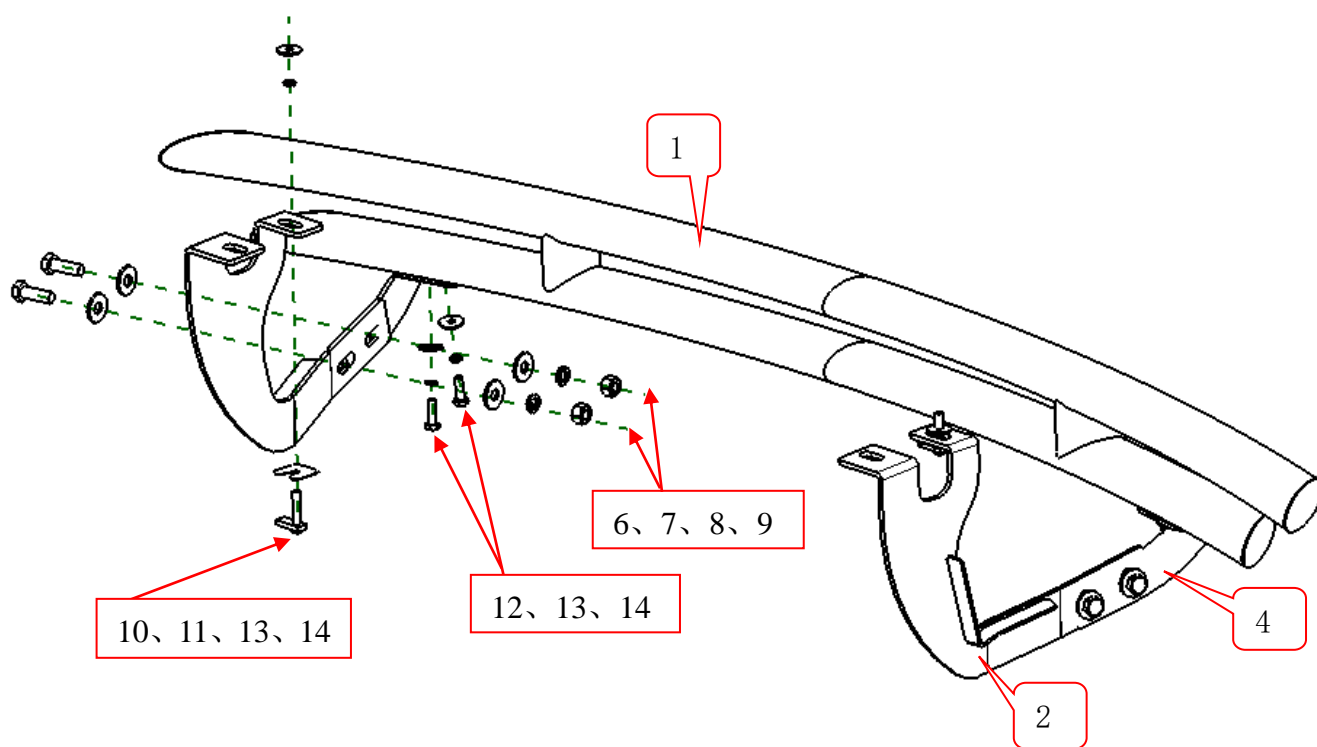

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.