



INSTALLATION INSTRUCTIONS

BLACK ARMOUR UNIVERSAL ROLL BAR FOR CHEVY COLORADO

**& GMC CANYON 2015-2021/TOYOTA TACOMA 2015-2021(NEW
SQUARE ONE)**

PART # RB-AR3B

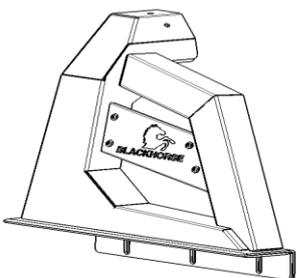
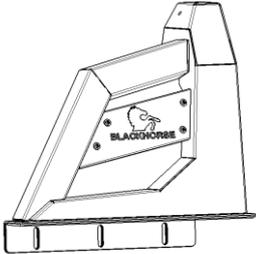
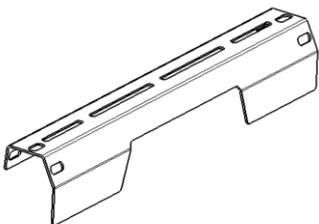
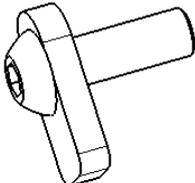

Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Left installation part	②	1	 Right installation part
③	1	 Connection plate	④	6	 T type bolt M8_28
⑤	18	 Flat washer D10	⑥	6	 Button head allen bolts M10_25
⑦	12	 Hex nut M10	⑧	12	 Spring washer D10

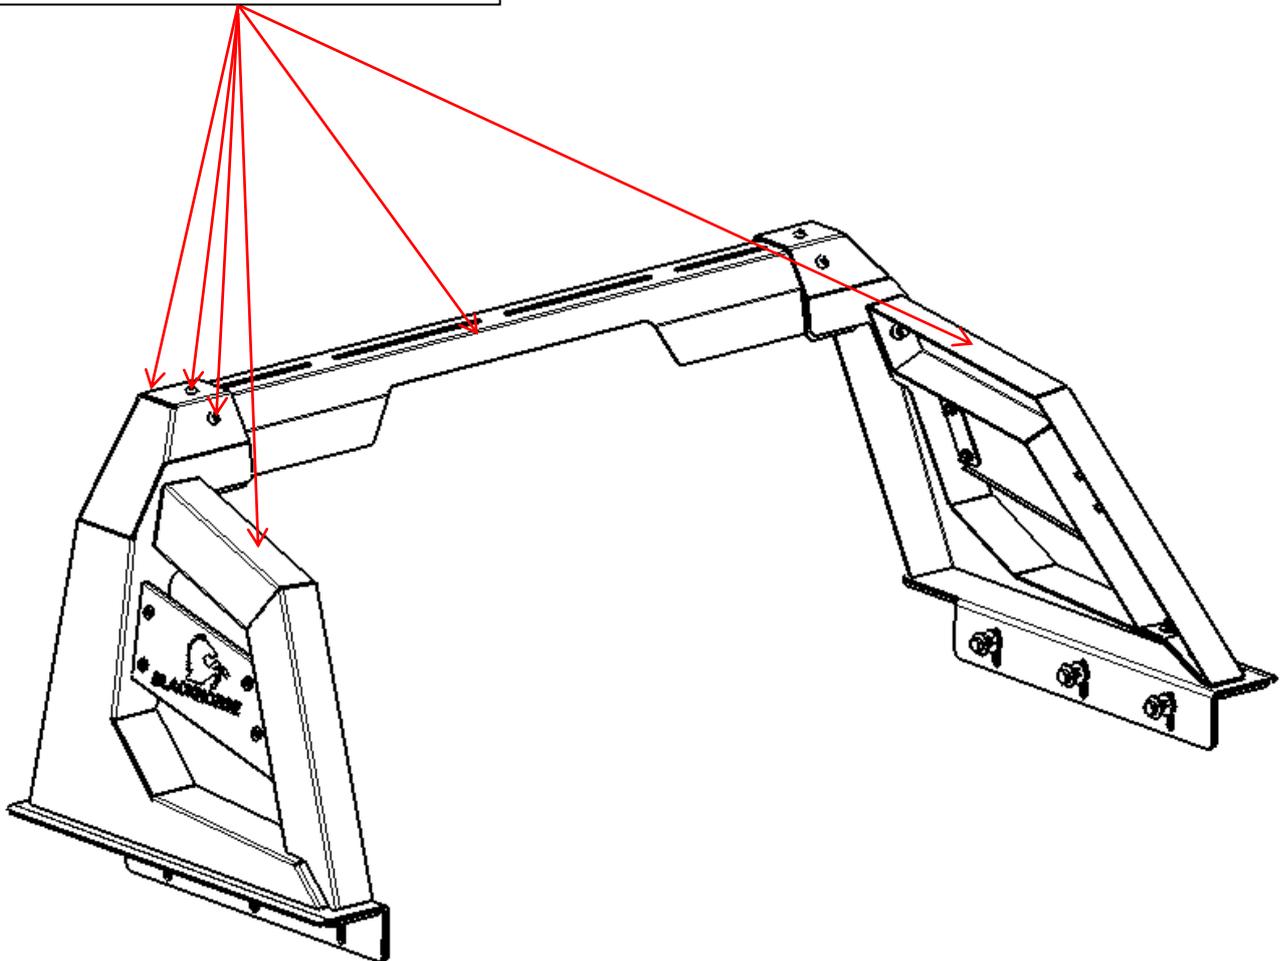
⑨	6	 Hex nut M10_35	⑩	6	 Hex nut M8
⑪	6	 Flat washer D8	⑫	1	 Allen wrench S=6

Installation Steps

Step1: Assemble ① Left installation part, ② Right installation part and ③ Connection plate with standard parts.

Lock all the standard parts after adjust the position.

Use standard parts ⑤ ⑥ ⑦ ⑧ to
connect ① ② ③



Step2: Place the roll bar on the truck in an appropriate location.

For TACOMA:

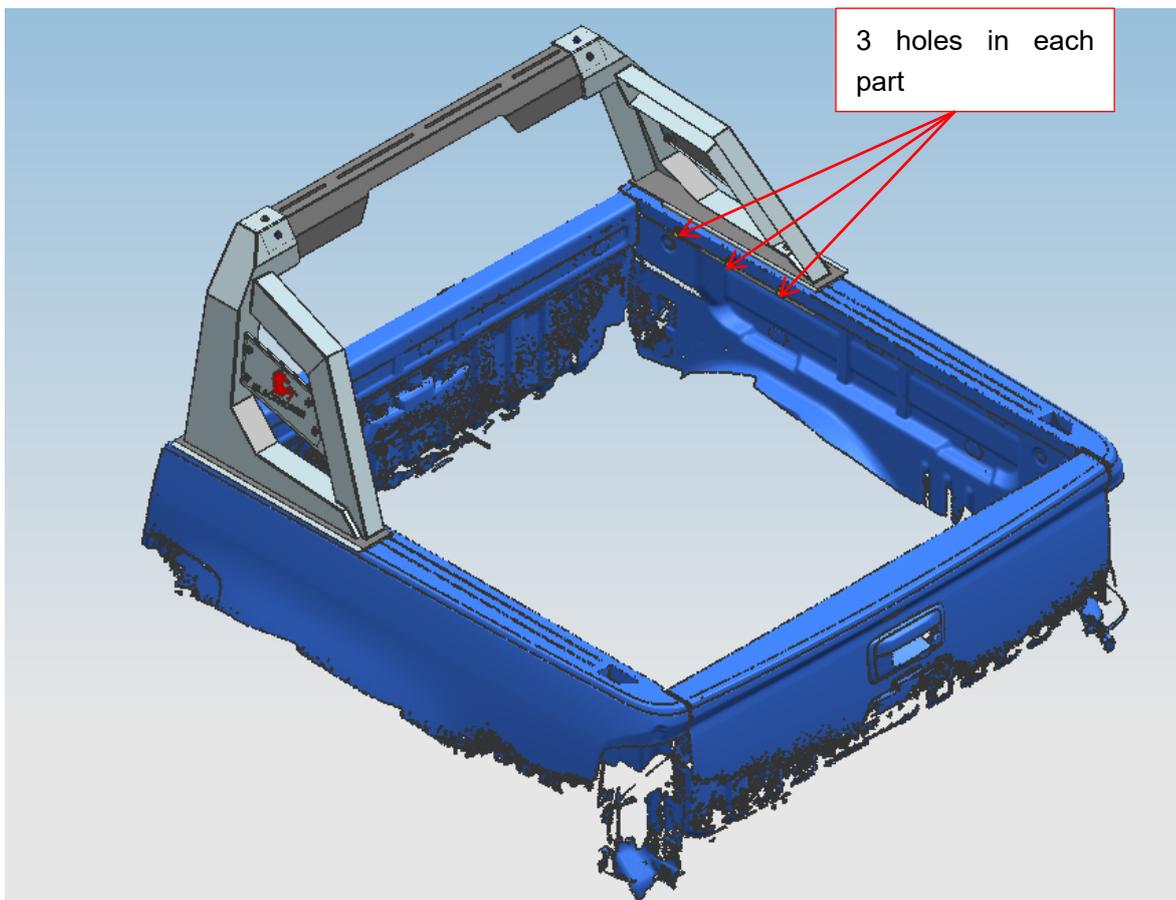
Place the roll bar on the truck first then fasten with standard ④⑩⑪.

For COLORADO:

Mark the hole with pen (3 places in each part, total are 6 places).

Remove the product and drill $\Phi 12$ size of holes.

Then place the roll bar on the truck and fasten with standard ⑤⑦⑧⑨.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.