



# **INSTALLATION INSTRUCTIONS**

**BLACK MODULAR UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS**

**(GM SILVERADO 14+/FORD F150 15+/DODGE RAM 15+) WITH**

**CARGO BRACKET(MR STYLE)**

**PART # RB-BA1B**









## Before Installation



















- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.




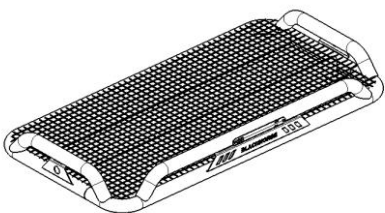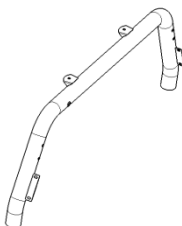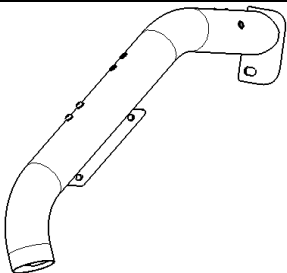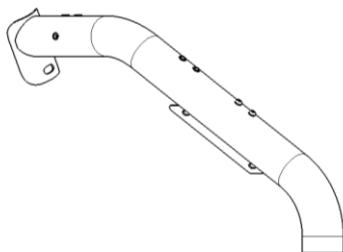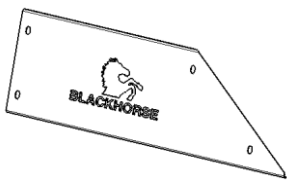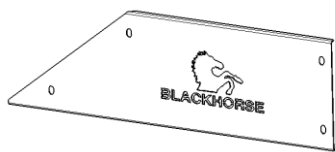
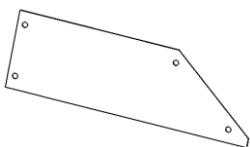
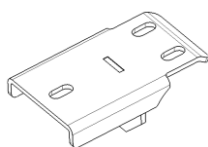


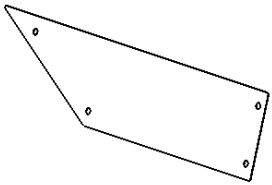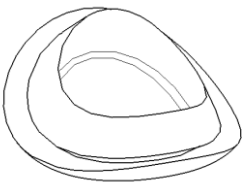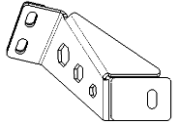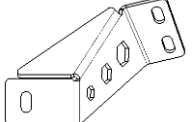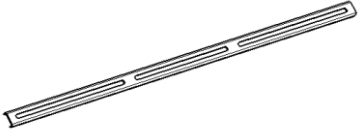

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Luggage frame (with LED light)	②	1	 Main tube 1
③	1	 Side tube-L	④	1	 Side tube-R
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Connect bracket 1

⑨	2		⑩	2	
		Decoration plate backboard			Rubber plug
⑪	1		⑫	1	
		Connect bracket 2-L			Connect bracket 2-R
⑬	1		⑭	2	
		Connecting plate			Block
⑮	1		⑯	1	
		L-bracket			R-bracket
⑰	4		⑱	8	
		Gum cover			Flat washer D6
⑲	8		⑳	8	
		Button head allen bolts M6_20			Hex nut M6
㉑	2		㉒	8	
		Button head allen bolts M8*30			Flat washer D8
㉓	14		㉔	6	
		Hex bolt M8*25			Hex nut M8
㉕	2		㉖	14	
		Spring washer D8			Flat washer D10

27	6	 Hex nut M10_35	28	6	 Hex nut M10
29	8	 Spring washer D10	30	2	 Hex nut M10_25
31	2	 Button head allen bolts M12_40	32	4	 Flat head allen bolts M12_40
33	2	 Flat washer D12	34	1	 Allen wrench S=8
35	1	 Allen wrench S=4	36	1	 Allen wrench S=5

## Installation Steps

**Step1:** Assemble tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts (10) (31)

(33) to connect (2) (3).

Installation are same at both sides.

Use standard parts (26) (29)

(30) to connect (2) (3).


Use standard part (32) to connect

(15) (17) on tube.

**Step2:** Assemble Luggage frame and tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ②① ②② ②④ ②⑤ to connect ①③ ①④ on the tubes. 2 places.

Use standard parts ②② ②③ ②④ to connect ① on the tubes. 4 places.

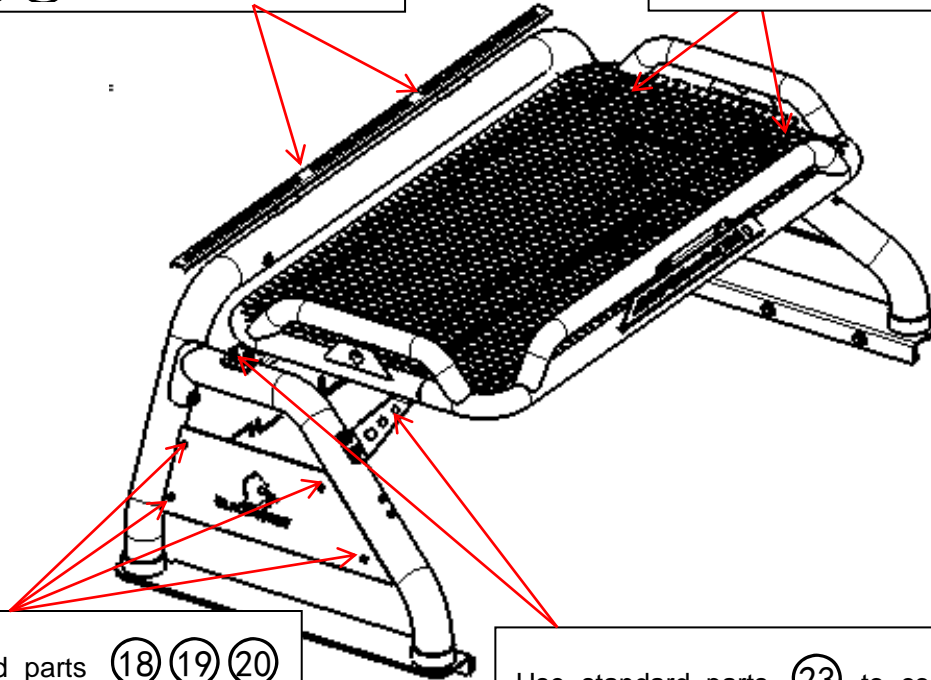


Use standard parts ①⑧ ①⑨ ②⑦ to connect ⑥ ⑦ ⑨ on the tubes. 8 places.

Use standard parts ②③ to connect ⑧ ⑪ ⑫ on the tubes. 8 places.

**Step3:** Put roll bar on the truck in an appropriate place. And use pen to mark the holes. 3 places in each part, 6 places total. Remove the roll bar then drill the size of  $\Phi 12$  holes. Put the roll bar back and use standard ②⑥ ②⑦ ②⑧ ②⑨ to fasten.

3 holes in each part

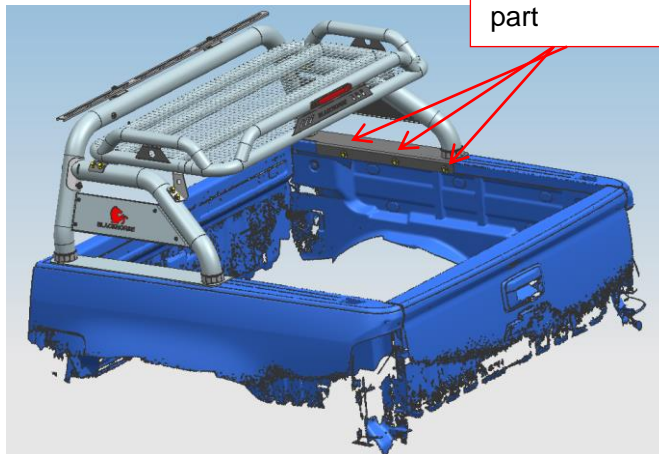

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.