



# **INSTALLATION INSTRUCTIONS**

**BLACK UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM  
SILVERADO 2015-FORD F150 2015) FLAT BASE WITH LED BRAKE  
LIGHT**

**PART # RB001BK**


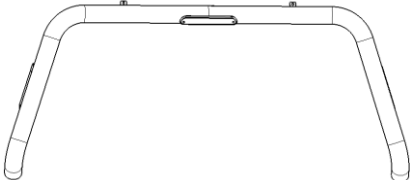
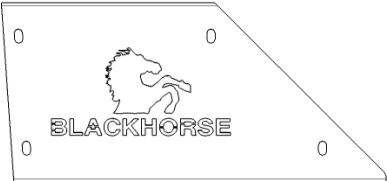
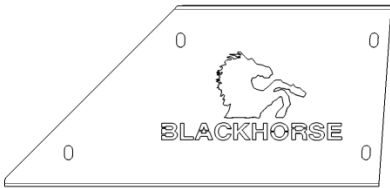
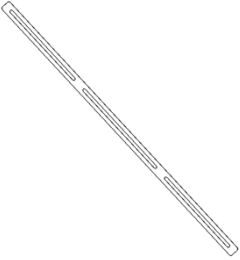
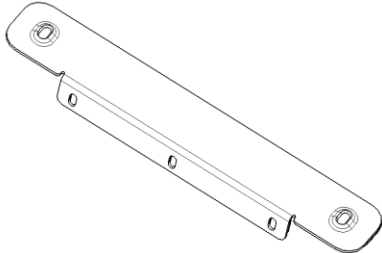

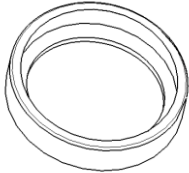
## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.




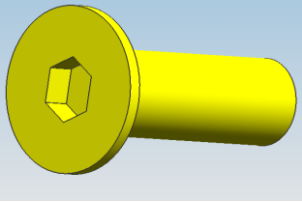

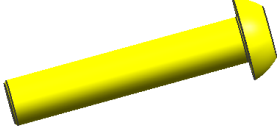


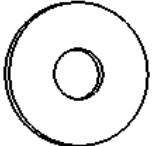



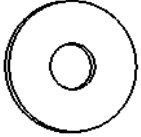



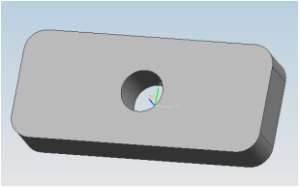
## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Pipe 1	②	1	 Pipe 2
③	1	 Decoration plate-L	④	1	 Decoration plate-R
⑤	2	 Connecting plate (FOR LED LIGHT INSTALLATION)	⑥	2	 Support plate
⑦	1	 Allen wrench S=8	⑧	4	 Gum cover

BLACK UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015) FLAT BASE  
WITH LED BRAKE LIGHT


⑨	1	 Allen wrench S=4	⑩	16	 Flat washer D6
⑪	8	 Spring washer D6	⑫	4	 Button head allen bolts M12-40
⑬	8	 Hex nut M6	⑭	2	 Button head allen bolts M8-40
⑮	8	 Button head allen bolts M6-20	⑯	6	 Spring washer D12
⑰	12	 Flat washer D12	⑱	6	 Hex nut M12
⑲	6	 Hex nut M12*40	⑳	2	 Hex nut M8
㉑	4	 Flat washer D8	㉒	2	 Spring washer D8
㉓	1	 Allen wrench S=5	㉔	1	 Allen wrench S=2.5
㉕	2	 Block			

## Installation Steps


### Installation Fig.

Step 1: Verify all parts are present.


Step 2: Use wrench 9 to install 1/2 main pipes and connecting plate 5 together with parts 10/11/13/14 as shown.

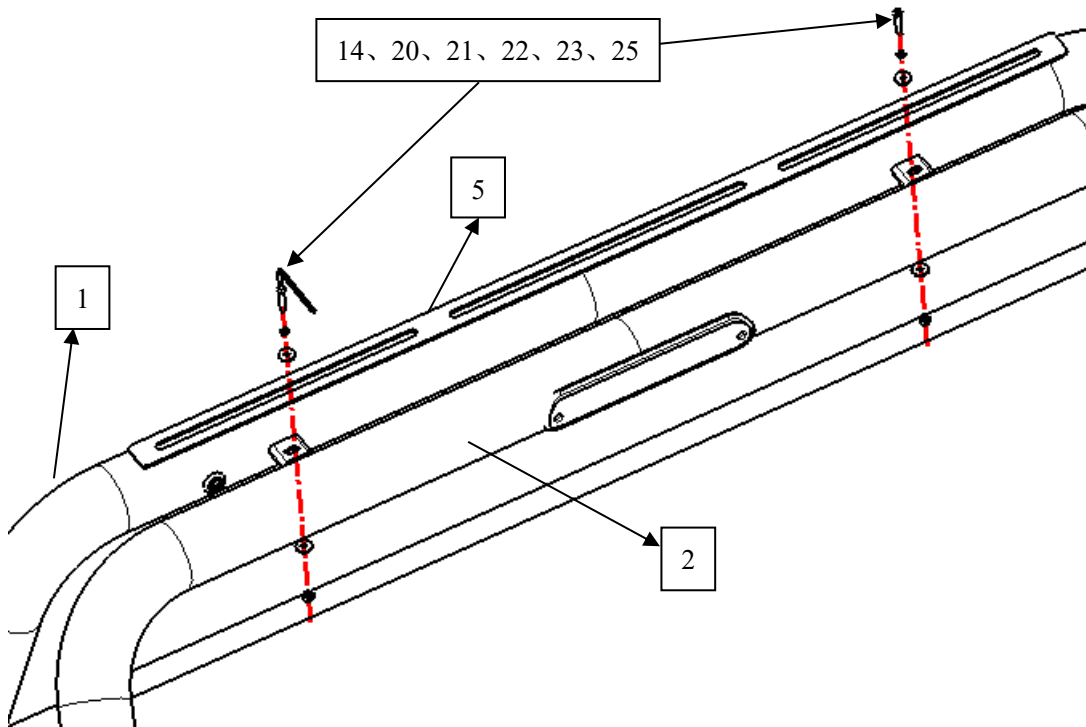


Step3: Using wrench 9, install 3/4 decoration plate together with parts 10/11/13/15 as shown.

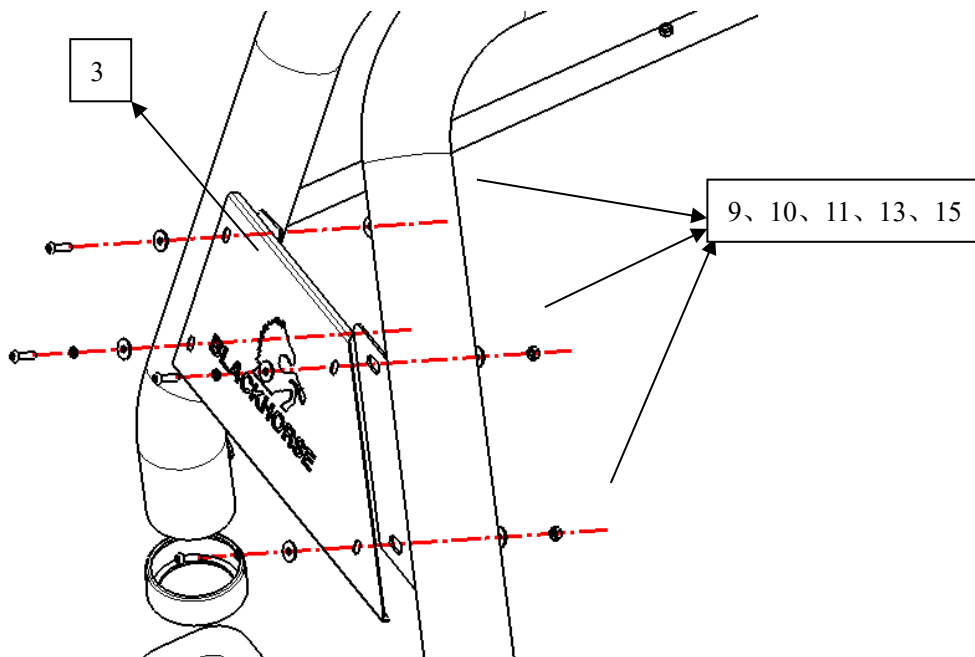


Step4: Using wrench 7, install support plate 6 and gum cover 8 with part 12.

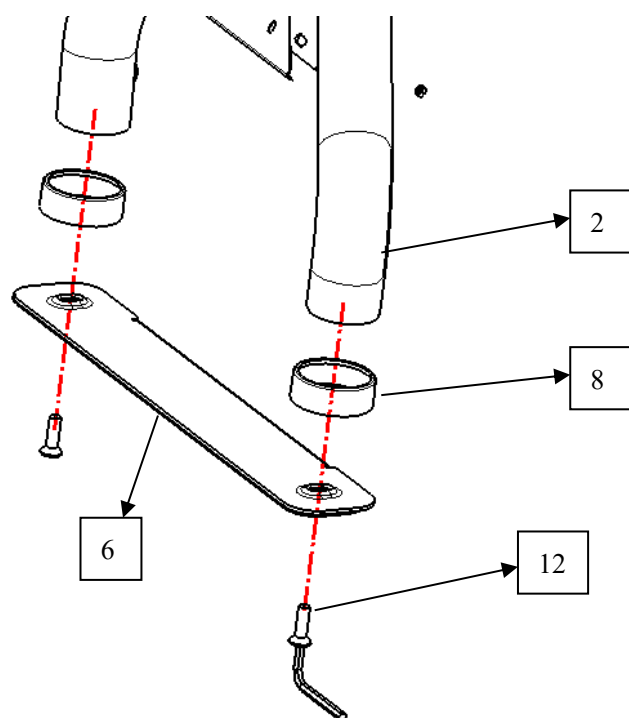

Step 5: Fix the roll bar on the trunk with parts 16/17/18/19 (need to drill the trunk if there's no installation holes). Test and make sure that the roll bar is steadily fixed, and then tighten all the hardware.

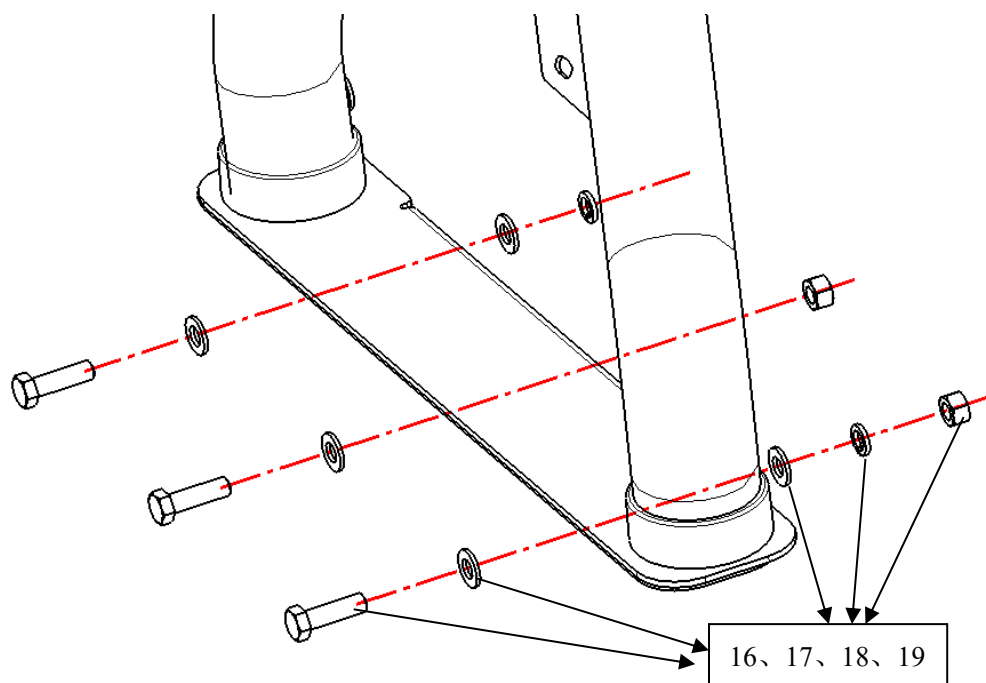

Step 6: Installation is finished, pick up all tools.

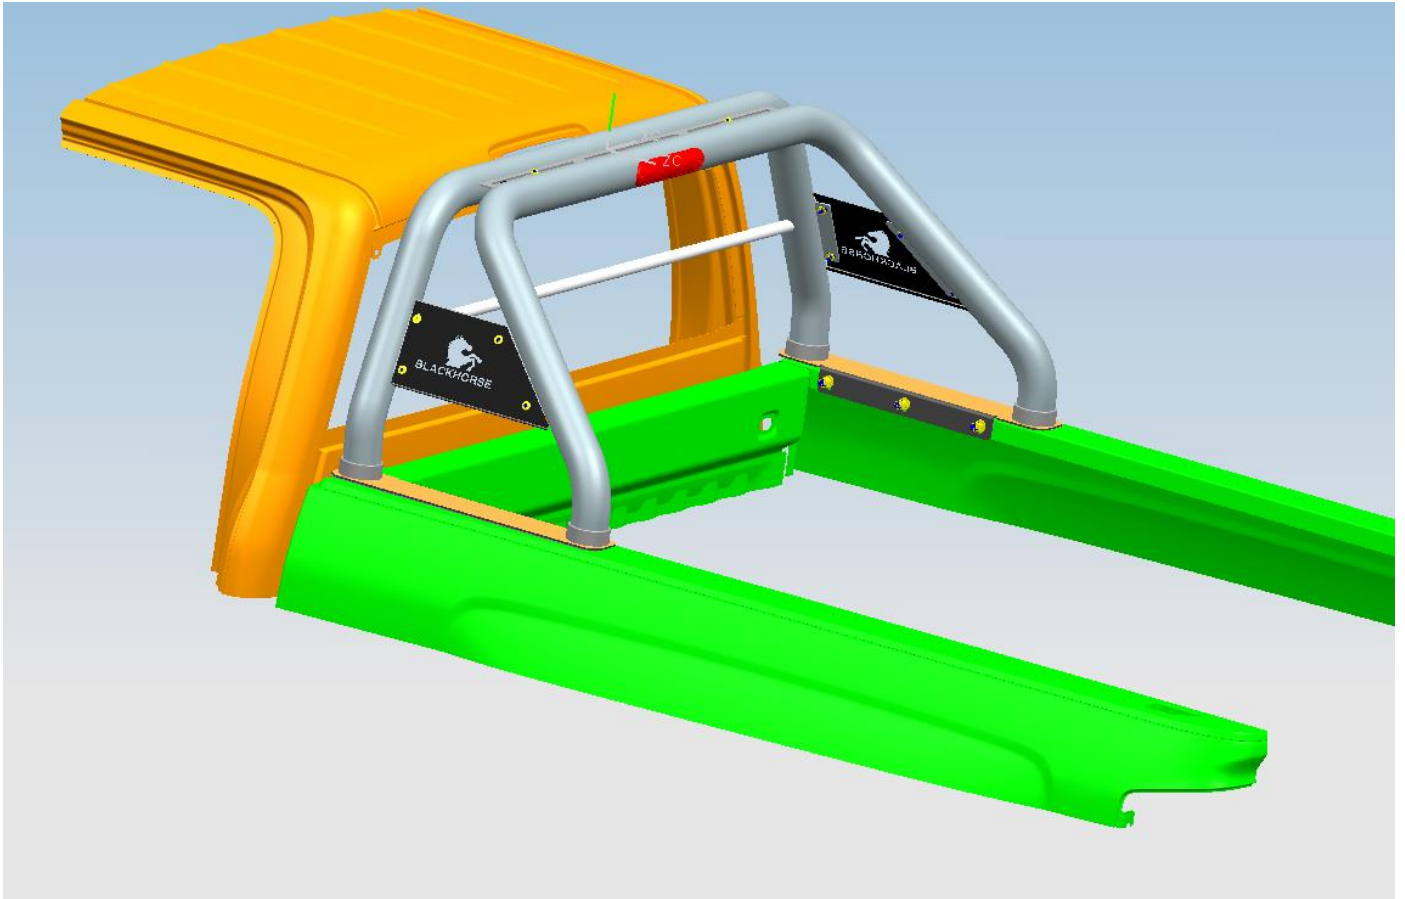

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.