BLACK CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE)



INSTALLATION INSTRUCTIONS BLACK CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE) PART # RB005BK

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	SLACK MORSE	2	1	ST VCK STANS
		L bracket			R bracket
3	4		4	4	
		Tape 4 (5mm*250)			Tape 5 (3mm*250)
5	1		6	4	
		Tape 6 (5mm*1600)			Flat head allen bolt M12*40

BLACK CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE)									
	7	1	Allen wrench S=8	8	6	Spring washer D10			
	9	6	Hex nut M10	10	12	Flat washer D10			
	(1)	6	Hex Bolt M10_35						


Installation Steps

FIG.1

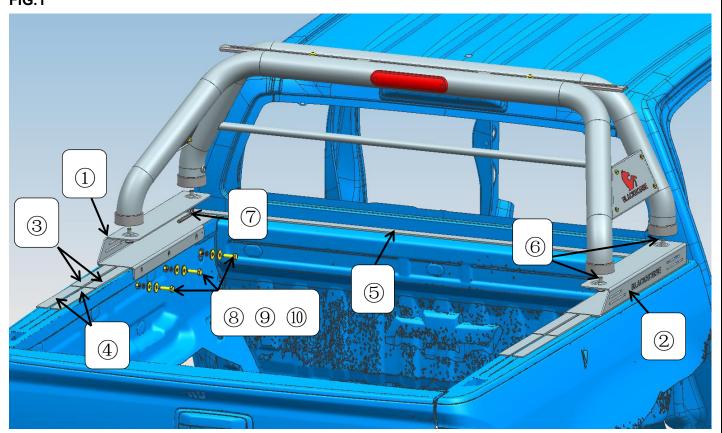

BLACK CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE)

Installed as below show:

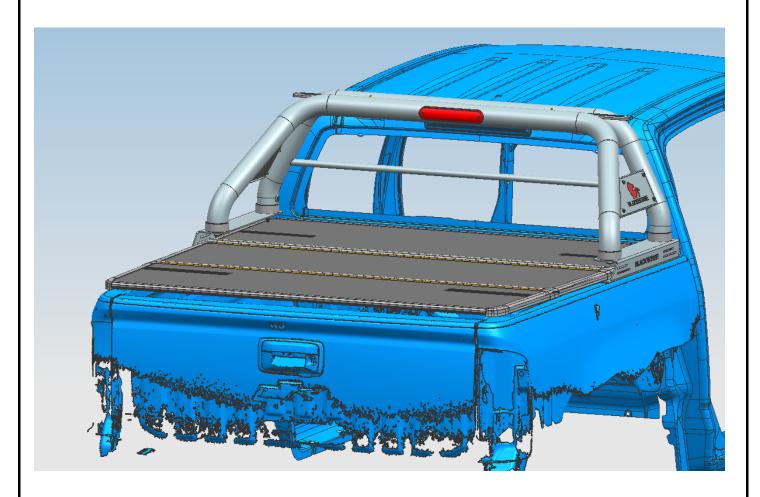

- Step 1: Check all the contents are available in accordance with the above list.
- Step 2: Prepared the SA roll bar, bracket ① and bracket ②, then use Allen wrench S=8⑦ and

Flat head allen bolts M12*40 6 to connect roll bar and brackets without locking them.

- Step 3: Use accessories (8) (9) (1) to fasten roll bar and brackets on the truck at appropriate positions. Then fasten with Flat head allen bolts M12*40 (6).
- Step 4: Stick seal ③ ④ ⑤ as FIG.1 shows for avoiding gaps between truck and hard tri-fold cover.
- Step 5: Installation is finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.