



INSTALLATION INSTRUCTIONS

**STAINLESS CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/
GMC CANYON (WITH TONNEAU COVER BASE)**

PART # RB005BK

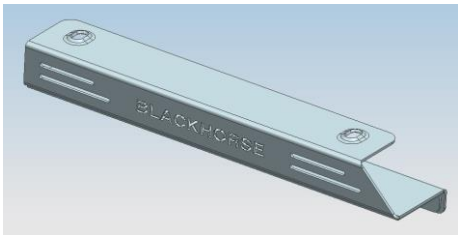
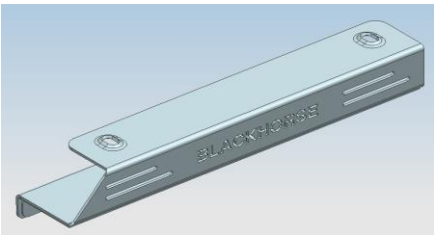
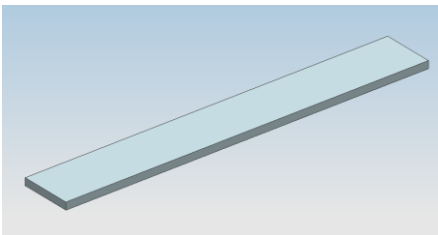
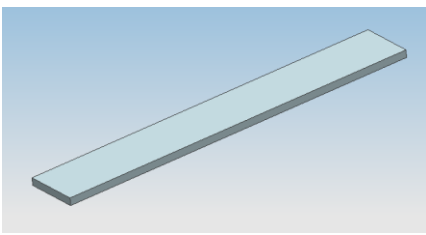
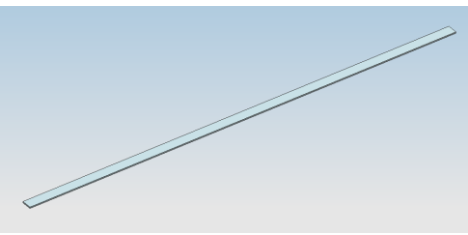
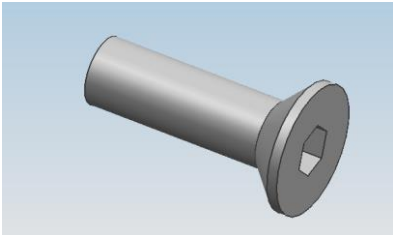
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

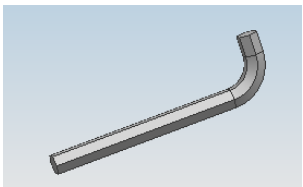
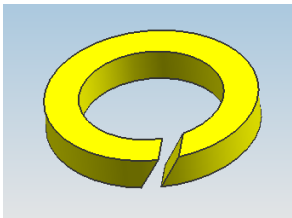
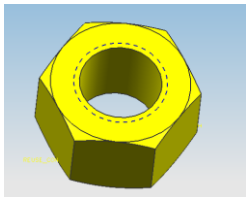
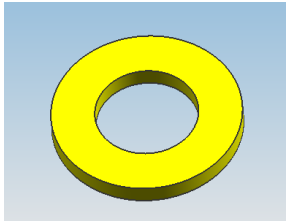
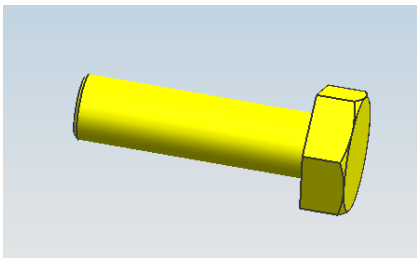
Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

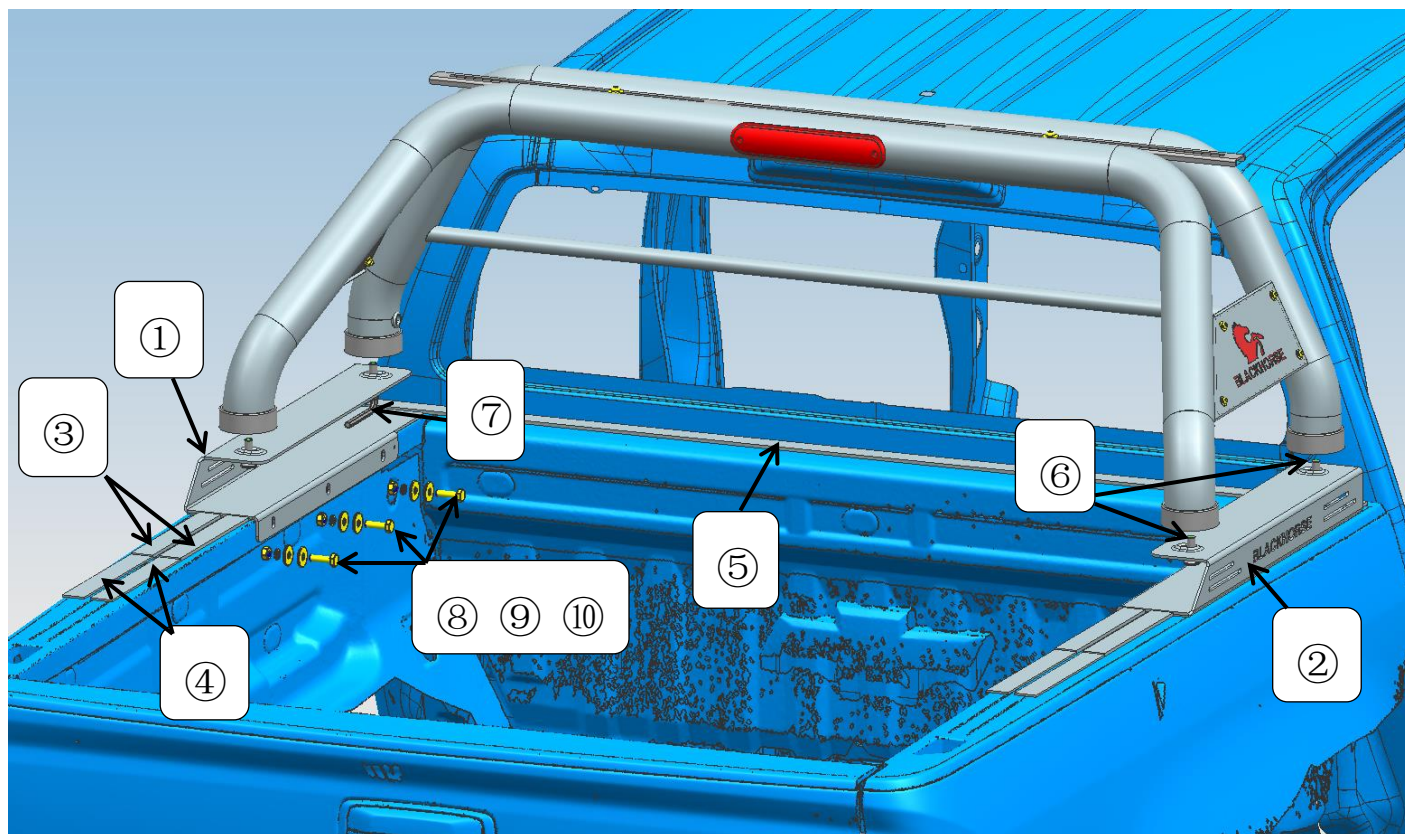
NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 L bracket	②	1	 R bracket
③	4	 Tape 4 (5mm*250)	④	4	 Tape 5 (3mm*250)
⑤	1	 Tape 6 (5mm*1600)	⑥	4	 Flat head allen bolt M12*40

CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE)

⑦	1		⑧	6	
⑨	6		⑩	12	
⑪	6				

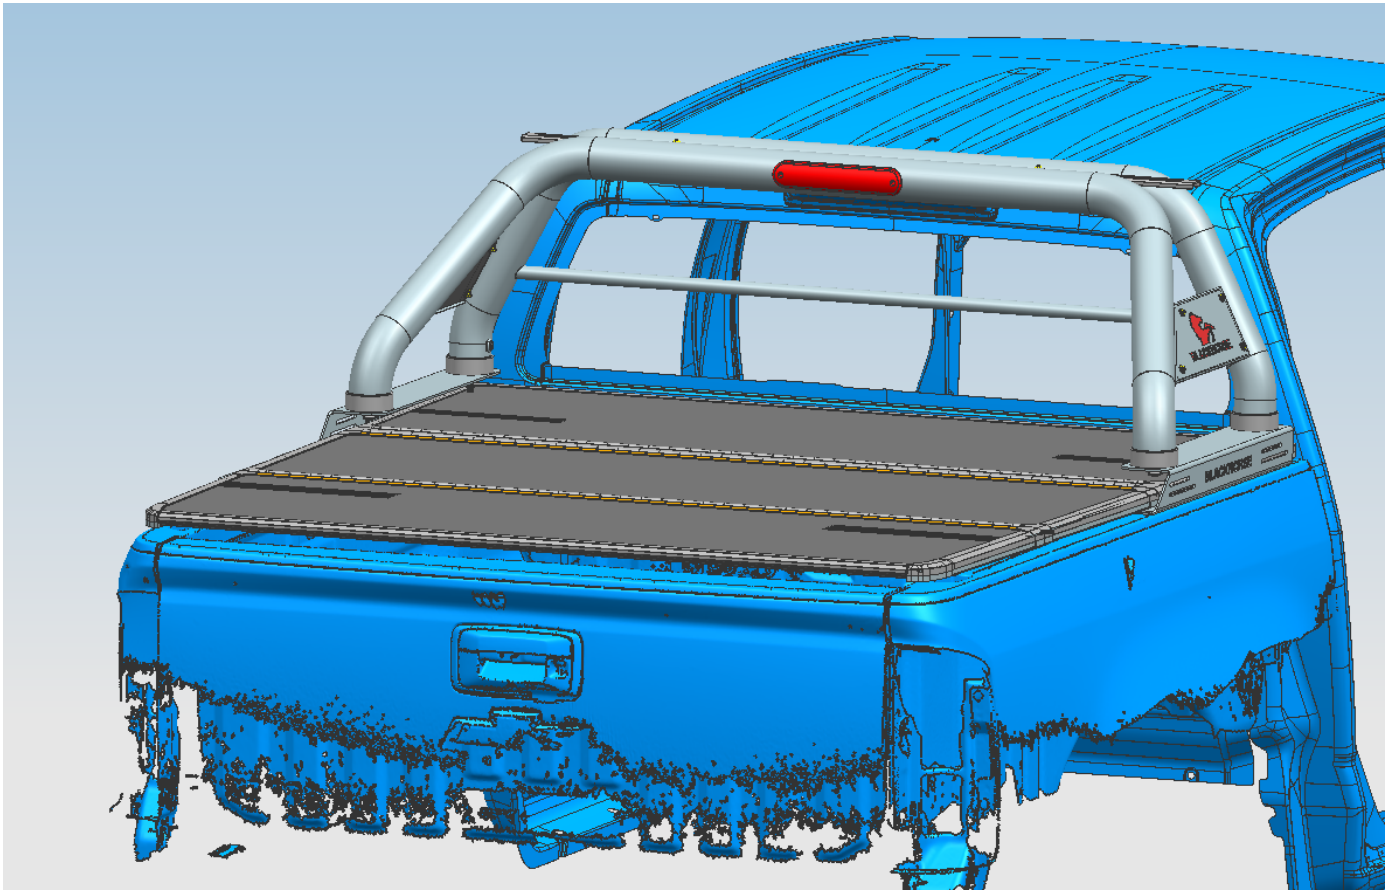
Installation Steps

FIG.1



CLASSIC ROLL BAR FOR 15-21 CHEVY COLORADO/GMC CANYON (WITH TONNEAU COVER BASE)

Installed as below show:



Step 1: Check all the contents are available in accordance with the above list.

Step 2: Prepared the SA roll bar, bracket ① and bracket ②, then use Allen wrench S=8 ⑦ and Flat head allen bolts M12*40 ⑥ to connect roll bar and brackets without locking them.

Step 3: Use accessories ⑧ ⑨ ⑩ ⑪ to fasten roll bar and brackets on the truck at appropriate positions. Then fasten with Flat head allen bolts M12*40 ⑥.

Step 4: Stick seal ③ ④ ⑤ as FIG.1 shows for avoiding gaps between truck and hard tri-fold cover.

Step 5: Installation is finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.