

BLACK HORSE ROLL BAR FOR 1/2 TON TRUCKS 2015-2021 Nissan Frontier AT BASE WITH LED BRAKE LIGHT - Compatible with Tonneau covers

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


| NO. | QTY | PICTURE | NO. | QTY | PICTURE |
|-----|-----|---|-----|-----|--------------------|
| 1 | 1 | Pipe 1 | 2 | 1 | Pipe 2 |
| 3 | 1 | Decoration plate-L | 4 | 1 | Decoration plate-R |
| (5) | 2 | Connecting plate (FOR LED LIGHT INSTALLATION) | 6 | 2 | Support plate |

| | | INSTALLATION | INSTR | UCTIO | ONS |
|-----|----|-------------------------------|-------|-------|--------------------------------|
| 7 | 1 | Allen wrench S=8 | 8 | 4 | Gum cover |
| 9 | 1 | Allen wrench S=4 | 10 | 20 | Flat washer D6 |
| 11) | 10 | Spring washer D6 | 12 | 4 | Button head allen bolts M12-40 |
| 13 | 10 | Hex nut M6 | 14 | 2 | Button head allen bolts M6-30 |
| 15 | 8 | Button head allen bolts M6-20 | 16 | 6 | Spring washer D12 |
| 17 | 12 | Flat Washer D12 | 18) | 6 | Hex nut M12 |
| 19 | 6 | Hex nut M12*40 | | | TION HOLIMIZ |


Installation Fig.

Step 1: Verify all parts are present.


Step 2: Using wrench 9, install 1/2 main pipes and connecting plate 5 together with parts 10/11/13/14 as shown.

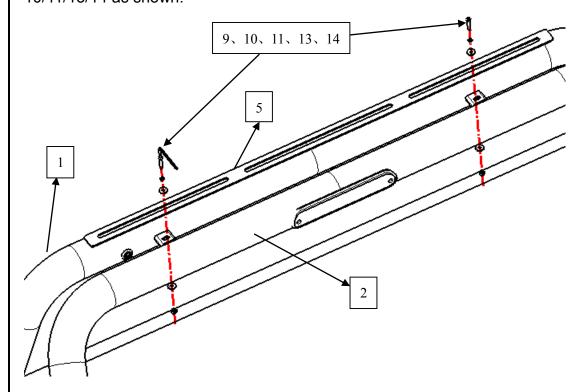


Step3: Using wrench 9, install 3/4 decoration plate together with parts 10/11/13/15 as shown.

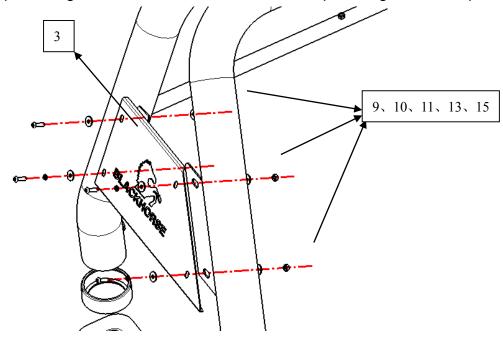


Step4: Using wrench 7, install support plate 6 and gum cover 8 with part 12.

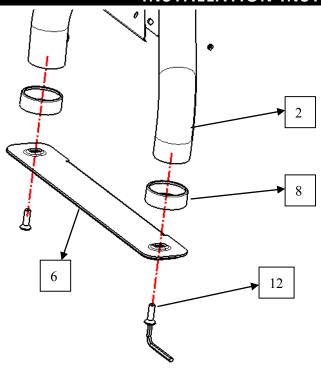

Step 4: Fix the roll bar on the trunk with parts 16/17/18/19 (need to drill the trunk if there's no installation holes). Test and make sure that the roll bar is steadily fixed, and then tighten all the hardware.

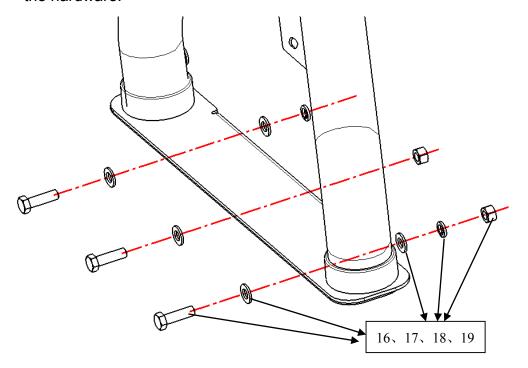

Step 6: Installation is finished, pick up all tools.

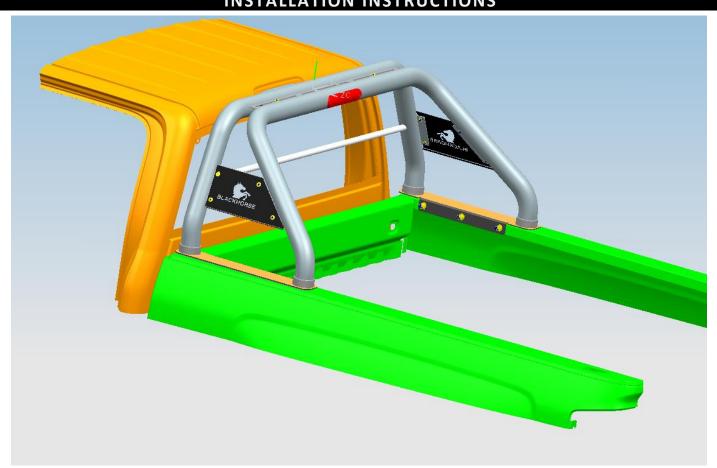

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.