



INSTALLATION INSTRUCTIONS
MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR
WITH BRAKE LIGHT UNIVERSAL FOR 1/2 TON TRUCKS (GM
SILVERADO 2015-FORD F150 2015)(COMPATIBLE
WITH TONNEAU COVER BASE)
PART # RB01MT








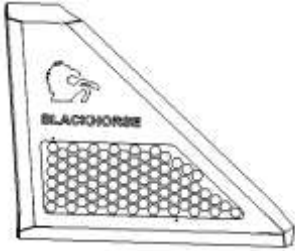
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.






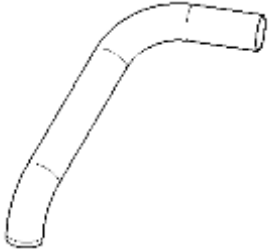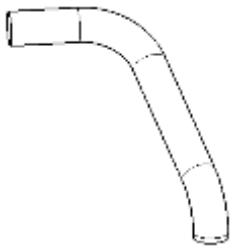


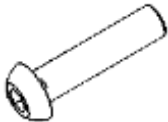
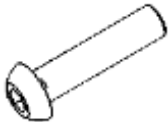

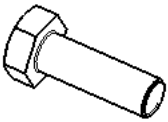

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

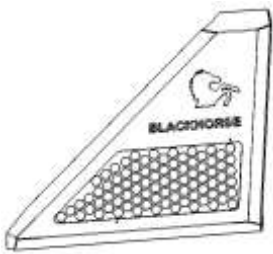Parts list











NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front middle tube	②	1	 Rear middle tube
③	1	 Front side tube (L)	④	1	 Front side tube (R)
⑤	1	 Rear side tube (L)	⑥	1	 Rear side tube (R)
⑦	1	 Middle decoration plate	⑧	1	 Decoration plate (L)

MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH BRAKE LIGHT UNIVERSAL FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015)(COMPATIBLE WITH TONNEAU COVER BASE)

⑨	1		⑩	1	
		Decoration plate(R)			Allen wrench S=4
⑪	1		⑫	1	
		Allen wrench S=5			Allen wrench S=6
⑬	8		⑭	2	
		Spring washer D6			Spring washer D8
⑮	10		⑯	4	
		Flat washer D6			Flat washer D8
⑰	2		⑱	2	
		Button head allen bolts M6_20			Button head allen bolts M8_30
⑲	2		⑳	8	
		Hex Nut M8			Hex bolt M6_20
㉑	4				
		Hex bolt (M8_25)			


MOUNTING BASE:

MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH BRAKE LIGHT UNIVERSAL FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015)(COMPATIBLE WITH TONNEAU COVER BASE)

②②	2	 <p>Mounting base (L/R)</p>	②③	2	 <p>Front end cover (L/R)</p>
②④	2	 <p>Rear end cover (L/R)</p>	②⑤	4	 <p>Gum cover</p>
②⑥	6	 <p>Spring washer D10</p>	②⑦	12	 <p>Flat washer D10</p>
②⑧	6	 <p>M10 HEX NUT</p>	②⑨	6	 <p>Button head allen bolts M10_35</p>
③⑩	4	 <p>Button head allen bolts M10_45</p>	③①	4	 <p>Bolt & Washer Assembly M6_20</p>

Installation Steps


Installation Diagram.

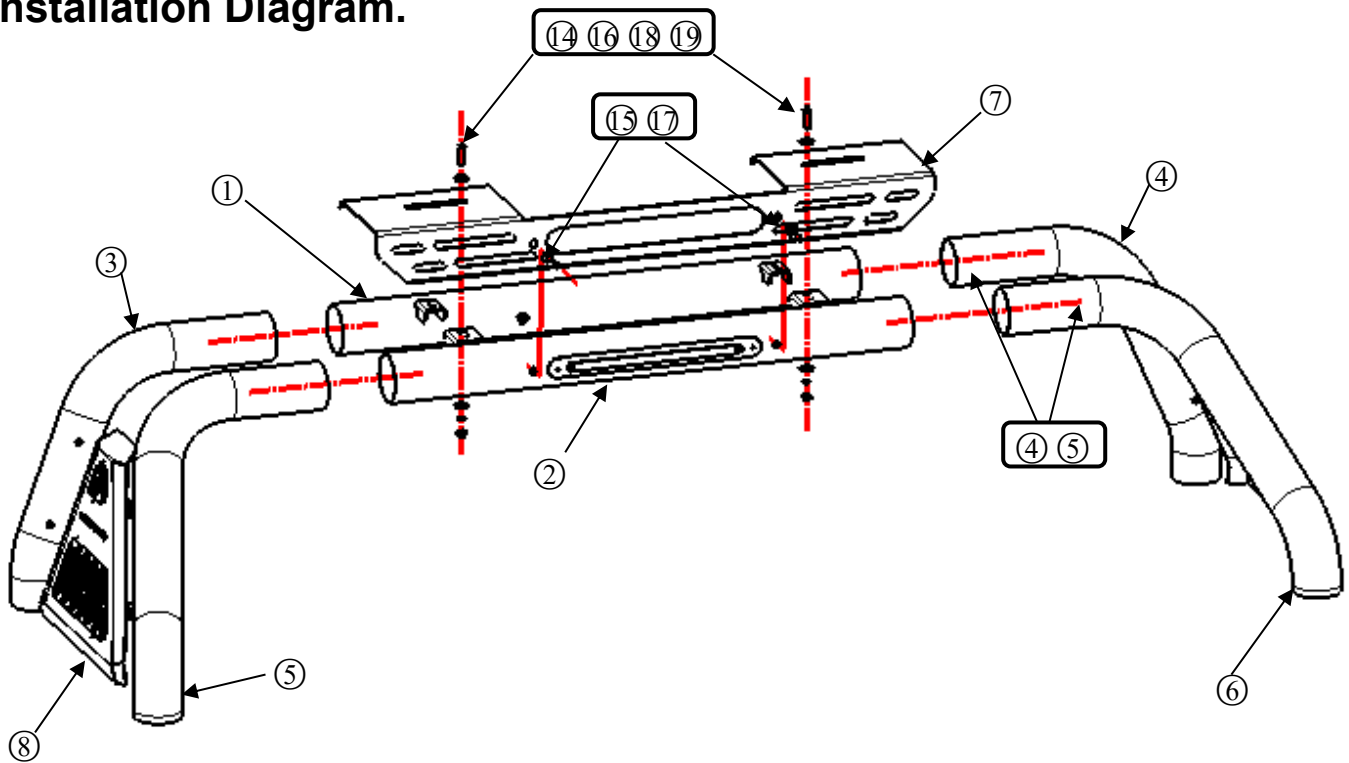


Step 1: Verify all parts are present.

Step 2: Put these parts in the corresponding positions according to the above installation diagram, assemble the tubes parts each other and ensure the roll bar can stand up. Install front middle tube ①, rear middle tube ② and middle decoration plate ⑦ with standard parts ⑮ ⑰ and ⑭ ⑯ ⑱ .(Do not lock tighten standard parts to provide sufficient adjustment space for subsequent installation)



Step 3: Assemble left decoration plate ⑧ and right decoration plate ⑨ with standard parts ⑬ ⑮ ⑯, the standard parts can be pre-tightened (During installation if you find the place is not enough, can adjust the gap size of the middle tube position in Step 2).

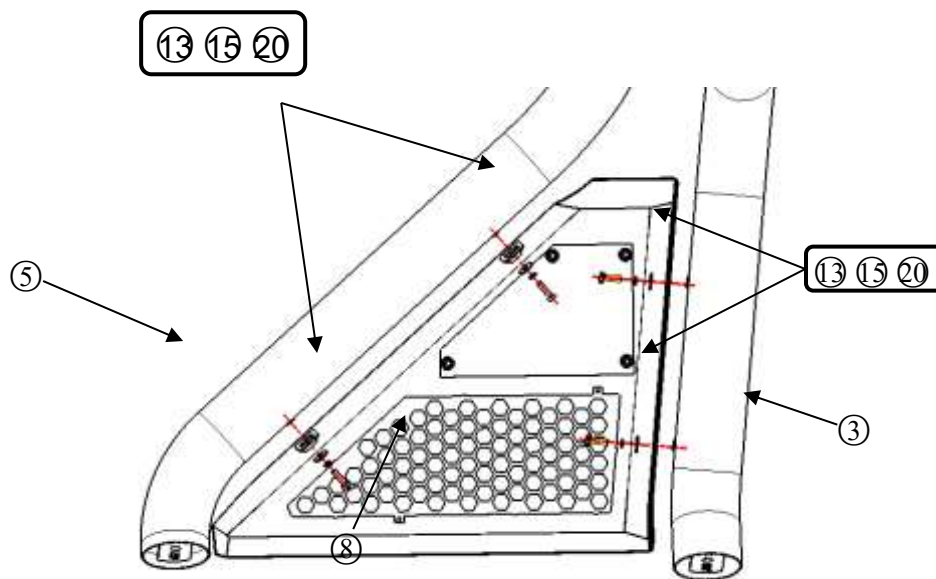

Step 4: After the preceding components are preinstalled, connect the side tube and middle tube with standard part ⑳. (To adjust tubes to appropriate position, lock tighten all accessories except standard part ㉑) PS: These adjustable holes can control the width of roll bar.

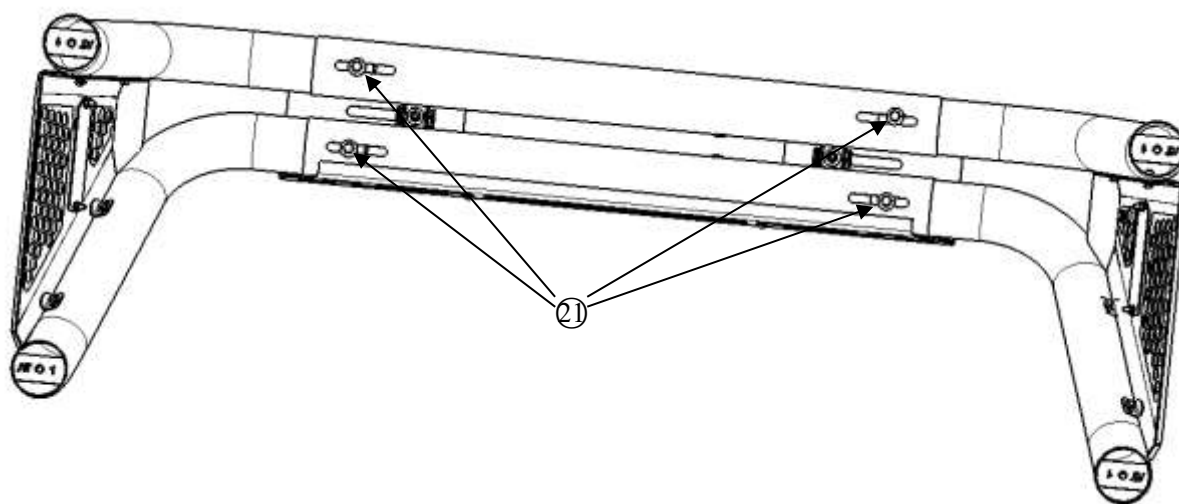



Step 5: Put mounting base(L/R) on both sides of the truck rail, to adjust the mounting base on suitable position, then mark down the installation holes for drilling(Ps: To make sure the drilling holes can go through with M10 standard parts). Install the mounting base on truck rail with standard parts 26 27 28 29 , as the following picture shown.

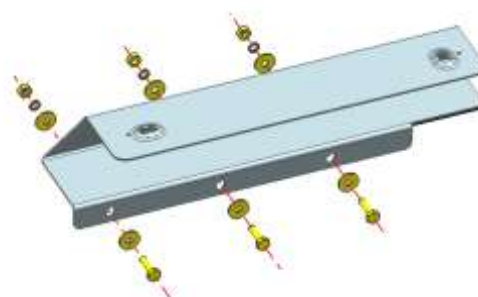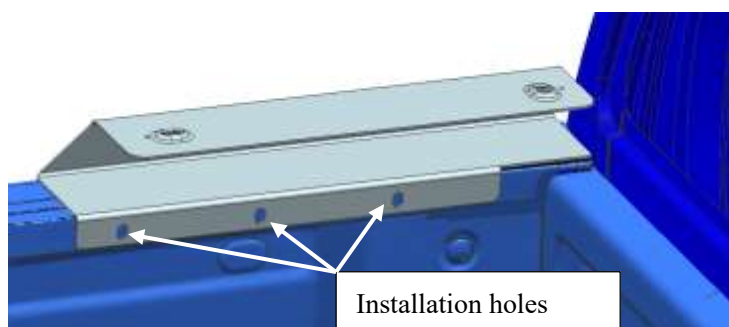

Step 6: Install the roll bar, mounting base and roll bar gum covers with standard part 30



Step 7: Install the front and rear end cover with standard part ③①, lock tighten all standard parts.

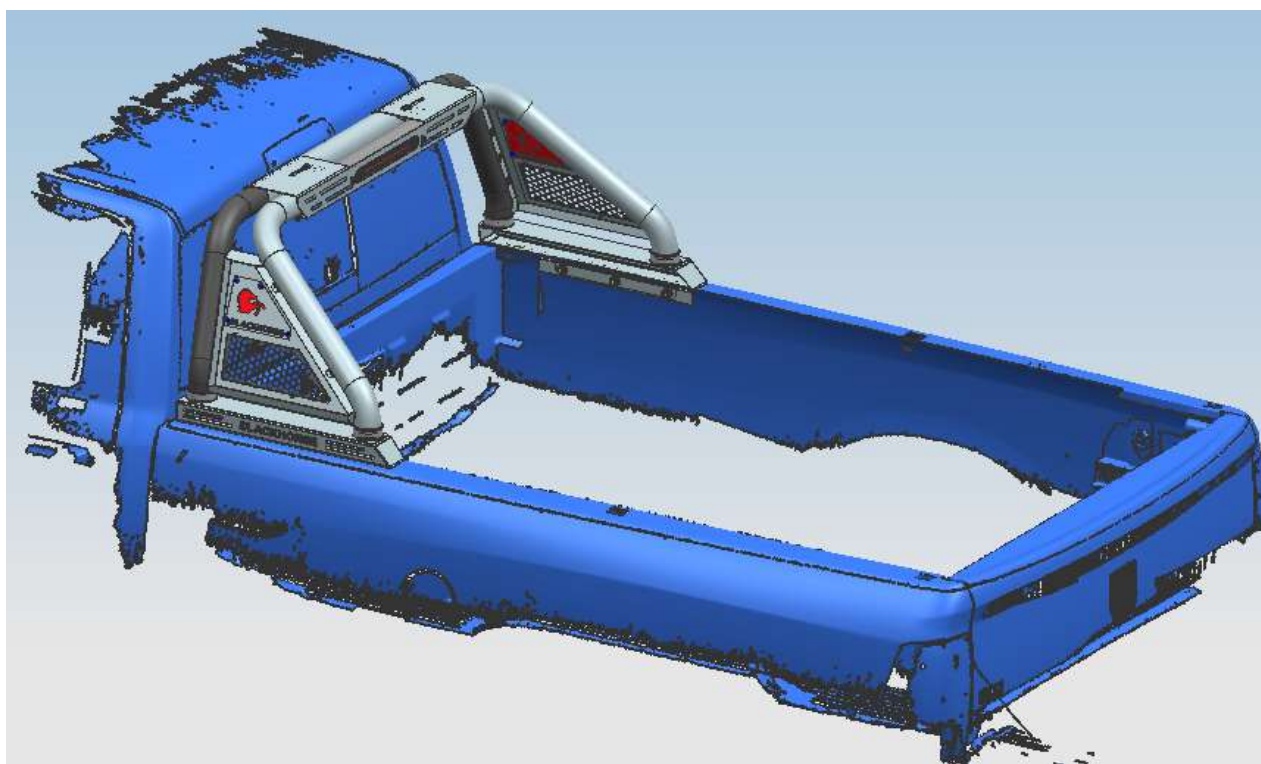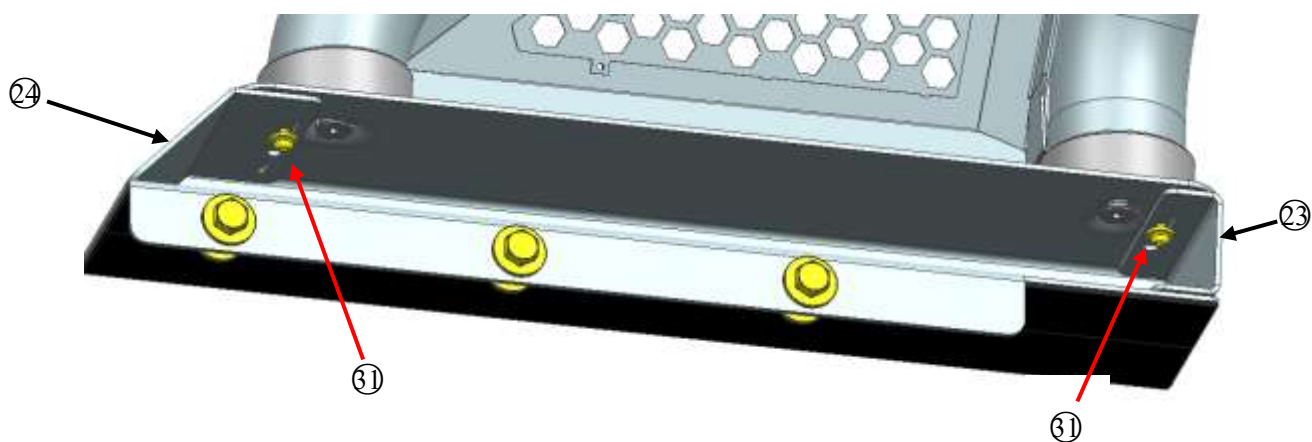

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.