

# INSTALLATION INSTRUCTIONS MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR NISSAN FRONTIER 05-20 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK PART # RB07MT

#### **Before Installation**

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

# Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

# Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	[ A . A	2	1	
		Front middle tube			Rear side tube (R)
3	1		4	1	
		Front side tube (L)			Front side tube (R)
5	1		6	1	
		Rear side tube (L)			Rear side tube (R)
7	1	Middle decoration plate	8	1	Decoration plate(L)
					Description plate(E)
9	1	Decoration plate(R)	10	1	Allen wrench S=4
		2000ration plato(11)			m m
11	1		12	1	
		Allen wrench S=5			Allen wrench S=6
13	8		14	2	
		Lock washer D6			Lock washer D8


	ı		1	TONN	EAU COVER BASE) TEXTURED BLACK			
15	10	Flat washer D6 (6x18x1.6mm)	16	4	Flat washer D8 (8x24x2mm)			
17)	2	Hex bolts M6_20	18	2	Hex bolts M8_30			
19	2	Hex nut M8	20	8	Hex bolt M6_20			
21)	4	Assembly bolt (M8_25)						
FRONTIER MOUTING BASE								
22	2	Mounting base (L/R)	23	2	Front end cover (L/R)			
24	2	Rear end cover (L/R)	25	4	Roll bar gum cover			
26	2	Black adhesive tape 5	27	6	10mm Plate nuts			
28	1	Allen wrench S=4	29	1	Allen wrench S=6			
30	6	Lock washer D10	31)	6	Flat washer D10 (10x30x2.5mm)			
32	6	Hex bots M10_25	33	4	Hex bolt M10_45			
34	4	Assembly bolt M6_20						

Page 3 of 8


# 

**Step 1:** Verify all parts are present.


Step 3: Assemble left decoration plate (a) and right decoration plate (b) with standard parts (c) (b) (c), the standard parts can be pre-tightened (During installation if you find the place is not enough, can adjust the gap size of the middle tube position in Step 2.

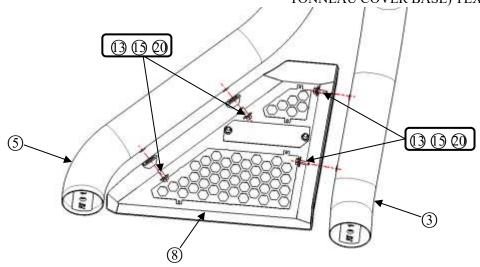


**Step 4:** After the preceding components are preinstalled, connect the side tube and middle tube with standard part ②. (To adjust tubes to appropriate position, lock tighten all accessories except standard part ②) PS: These adjustable holes can control the width of roll bar.

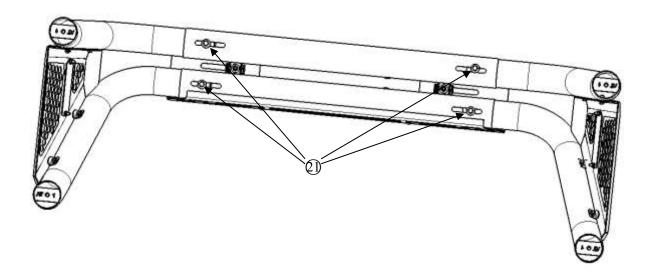


**Step 5:** Slip each 3 pieces plate nut  $\mathfrak{D}$  into both sides of utility side trail as the following picture shown, and put mounting base on the truck rail and adjust base to appropriate position, install them with standard parts  $\mathfrak{D}$   $\mathfrak{D}$  .

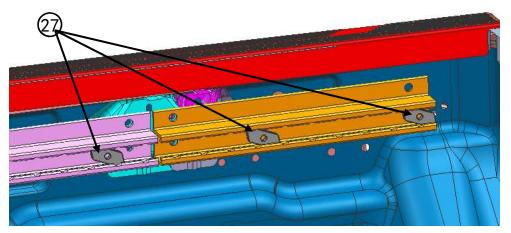


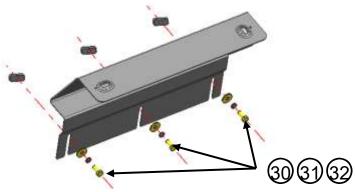


**Step 6:** Put the gum covers on each legs of roll bar, then install roll bar on mounting base with standard part 3. To adjust roll bra to appropriate position and lock tighten all standard parts.

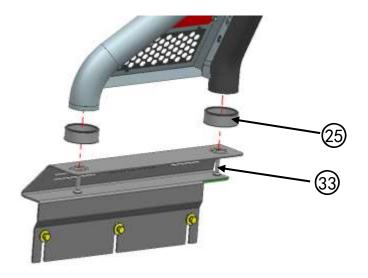

**Step 7:** Install the front and rear end cover with standard part 3.

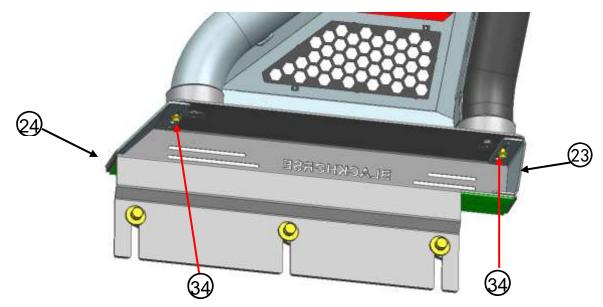

# Installation completed.

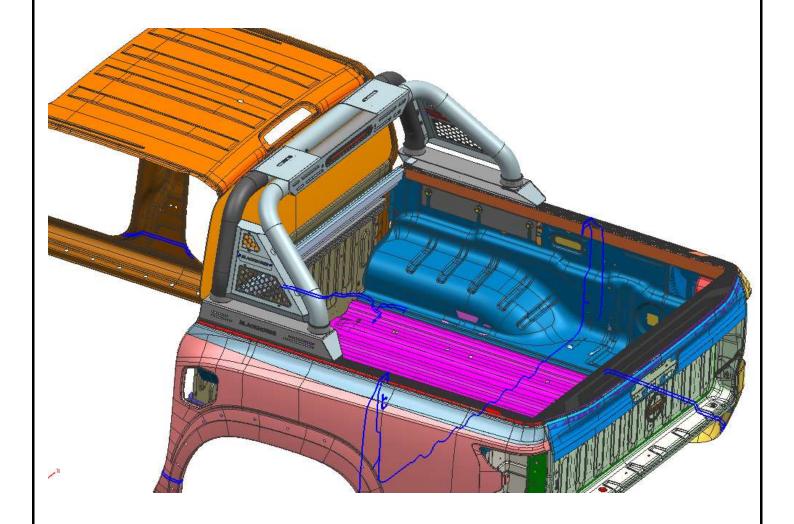

# **NOTE**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR	NISSAN FRONTIER 05-20 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK
Black Horse Off Road 39 St Mary's Place Freeport NY11520 Tel: 1(866	) 926 2867 www.blackhorseoffroad.com
Page 8 of 8	