



INSTALLATION INSTRUCTIONS

CLASSIC ROLL BAR WITH FLAT BASE&LED LIGHT FOR 19-20

FORD RANGER

PART # RB08BK









Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.














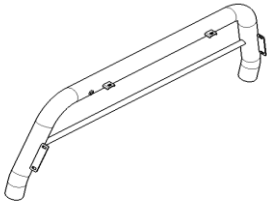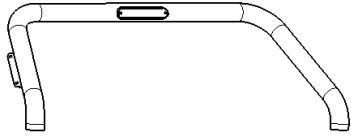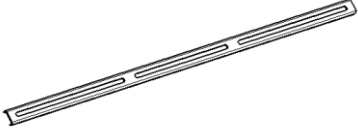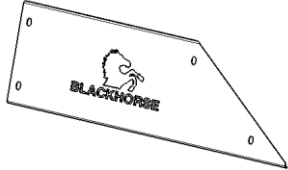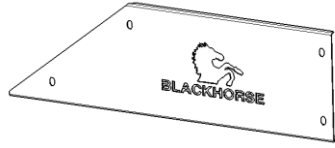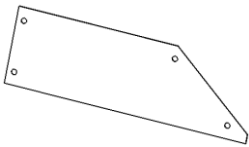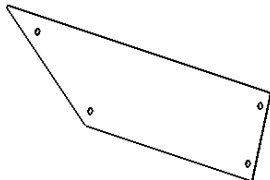





Care and Cleaning

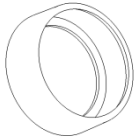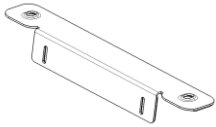- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Pipe 1	②	1	 Pipe 2
③	1	 Connecting plate (FOR LED LIGHT INSTALLATION)	④	2	 Block
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Decoration plate backboard


CLASSIC ROLL BAR WITH FLAT BASE&LED LIGHT FOR 19-20 FORD RANGER

⑨	4	 Gum cover	⑩	2	 Support bracket
⑪	2	 Reinforcing plate	⑫	1	 Allen wrench S=4
⑬	1	 Allen wrench S=8	⑭	4	 Flat head allen bolts M12_40
⑮	2	 Spring washer D8	⑯	2	 Button head allen bolts M8_40
⑰	2	 Hex nut M8	⑱	4	 Flat washer D8
⑲	4	 Hex nut M10_35	⑳	1	 Allen wrench S=5
㉑	4	 Spring washer D10	㉒	4	 Flat washer D10
㉓	16	 Flat washer D6	㉔	8	 Spring washer D6
㉕	8	 Button head allen bolts M6_20	㉖	8	 Hex nut M6
㉗	1	 Allen wrench S=2.5			

Installation Steps


Step1: Assemble ① and ② with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ⑮⑯⑰⑱ to connect ①②③④.

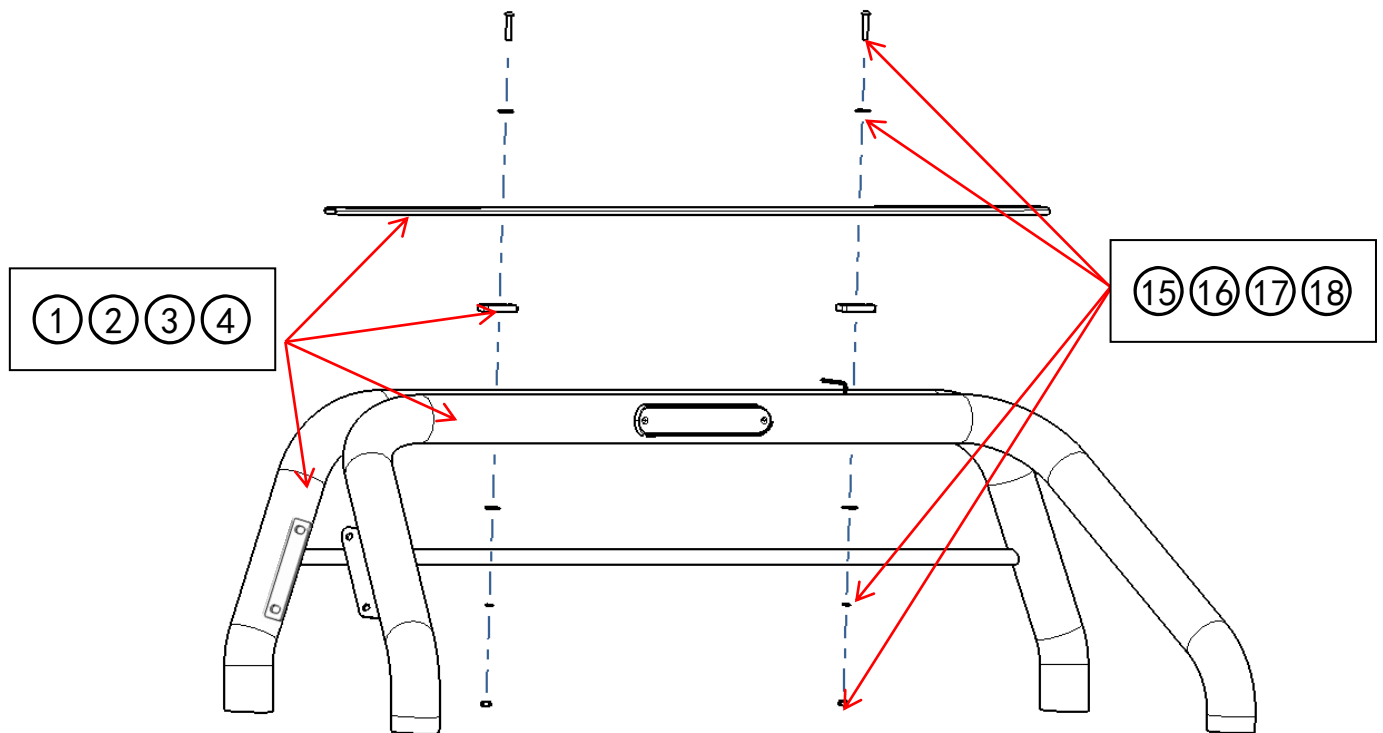

Step2: Assemble decoration plates and brackets with pipes. Lock all the standard parts after adjust the position.

Use standard ⑳㉑㉒㉓ to connect ⑤⑥⑦⑧.

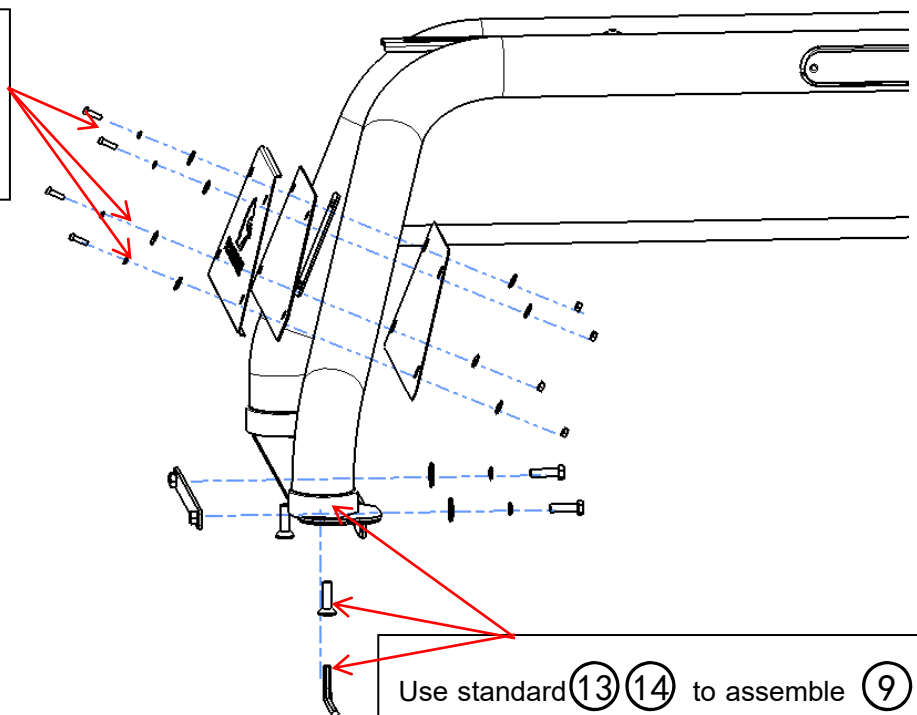


Use standard ⑬⑭ to assemble ⑨
⑩ with pipes.

Step3:

Place the roll bar on the truck in an appropriate location. And mark the hole with pen. 2 places in each part, total are 4 places. Remove the product.

Drill $\Phi 12$ size of holes, then place the roll bar on the truck and fixed with ⑪⑲⑳㉓.

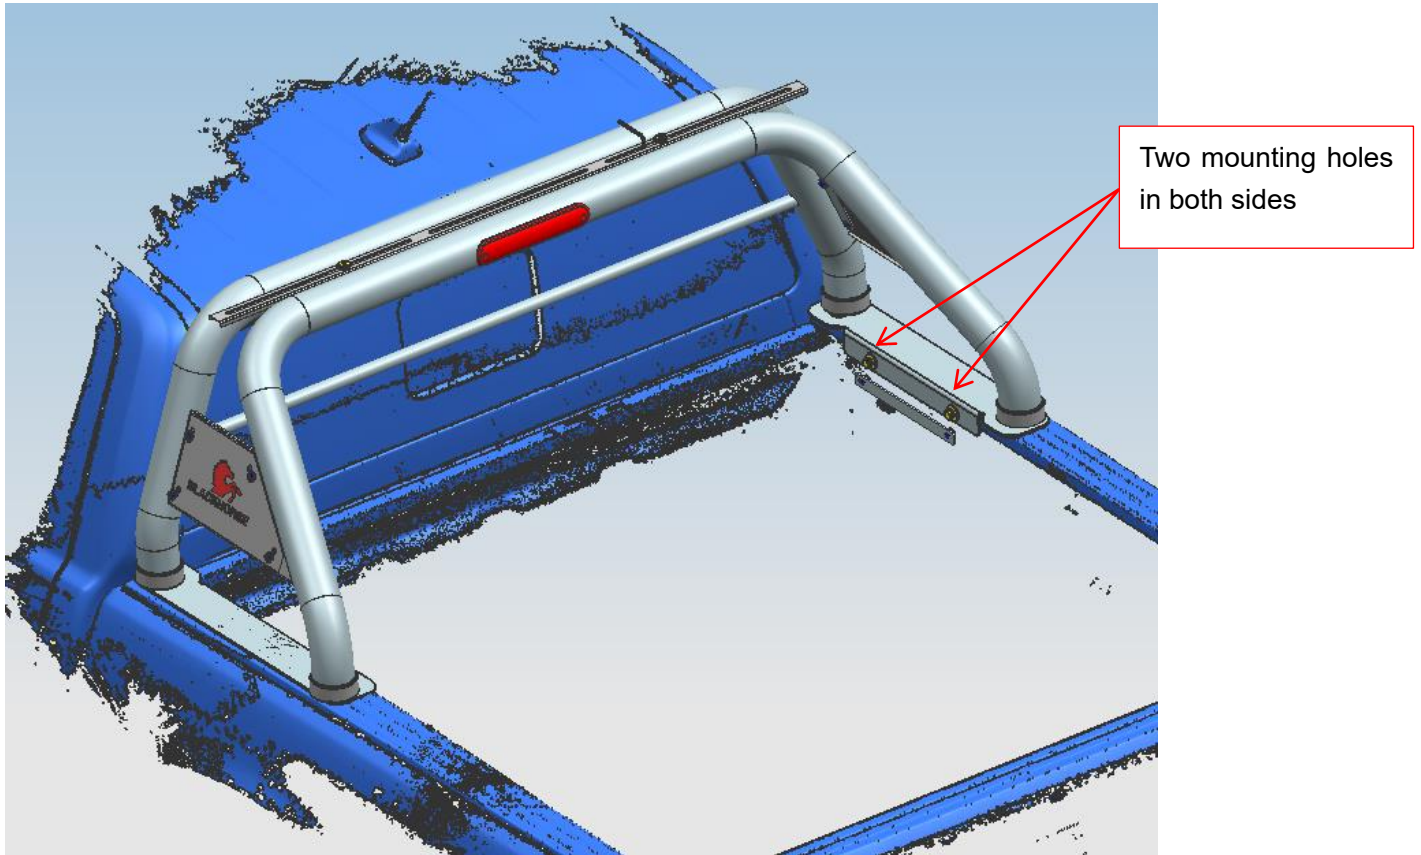

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.