

# INSTALLATION INSTRUCTIONS MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH BRAKE LIGHT FOR JEEP GLADIATOR 20-22 (COMPATIBLE WITH TONNEAU COVER BASE) PART # RB09MT

### **Before Installation**

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
  receive, however the goods are fitted in the same way.

### Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

### Parts list


| NO. | QTY | PICTURE                 | NO. | QTY | PICTURE              |
|-----|-----|-------------------------|-----|-----|----------------------|
| 1   | 1   | Front middle tube       | 2   | 1   | Rear middle tube     |
| 3   | 1   | Front side tube (L)     | 4   | 1   | Front side tube (R)  |
| (5) | 1   | Rear side tube (L)      | 6   | 1   | Rear side tube (R)   |
| 7   | 1   | Middle decoration plate | 8   | 1   | Decoration plate (L) |
| 9   | 1   | Decoration plate (R)    | 10  | 1   | Allen wrench S=4     |

Black Horse Off Road 39 St Mary's Place Freeport NY11520 Tel: 1(866) 926 2867 www.blackhorseoffroad.com

|      |       |  | 1  | (COM | ATIBLE WITH TONNEAU COVER BASE        |
|------|-------|--|----|------|---------------------------------------|
| (11) | 1     |  | 12 | 1    |                                       |
|      |       | Allen wrench S=5                       |    |      | Allen wrench S=6                      |
| 13   | 8     |  | 14 | 2    |                                       |
|      |       | Lock washer D6                         |    |      | Lock washer D8                        |
| 15   | 10    |  | 16 | 4    |                                       |
|      |       | Flat washer D6 (6x18x1.6mm)            |    |      | Flat washer D8 (8x24x2mm)             |
| 17   | 2     |  | 18 | 2    |                                       |
|      |       | Hex bolts M6_20                        |    |      | Hex bolts M8_30                       |
| 19   | 2     |  | 20 | 8    |                                       |
|      |       | Hex nut M8                             |    |      | Hex bolt M6_20                        |
| 21   | 4     |  |    |      |                                       |
|      |       | Assembly bolt(M8_25)                   |    |      |                                       |
| MOUN | NTING | BASE:                                  | _  |      |                                       |
| 22   | 2     | Mounting base (L/R)                    | 23 | 2    | Front end cover (L/R)                 |
|      |       |  |    |      |                                       |
| 24   | 2     | Rear end cover (L/R)                   | 25 | 4    |                                       |
|      |       | , ,                                    |    |      | Roll bar gum cover                    |
| 26   | 1     | Black adhesive tape 6<br>(1600x35x5mm) | 27 | 2    | Black adhesive tape 4<br>(250x35x5mm) |
| 28   | 2     | Black adhesive tape 5 (250x35x3mm)     | 29 | 6    | T Bolt M10_35                         |

| 30 | 6 | 10mm Plastic Retainer         | 31) | 6 | Lock washer D10     |
|----|---|-------------------------------|-----|---|---------------------|
| 32 | 6 | Flat washer D10 (10x30x2.5mm) | 33  | 6 | Hex nut M10         |
| 34 | 4 | Hex bolts M10_30              | 35) | 4 | Assembly bolt M6_20 |

### **Installation Steps**

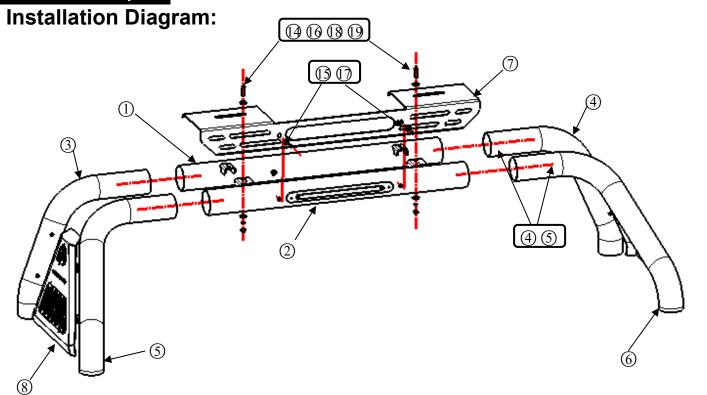


Step 1: Verify all parts are present.


installation)

Step 3: Assemble left decoration plate (8) and right decoration plate (9) with standard parts (13)


(15 Q), the standard parts can be pre-tightened (During installation if you find the place is not enough, can adjust the gap size of the middle tube position in Step 2.

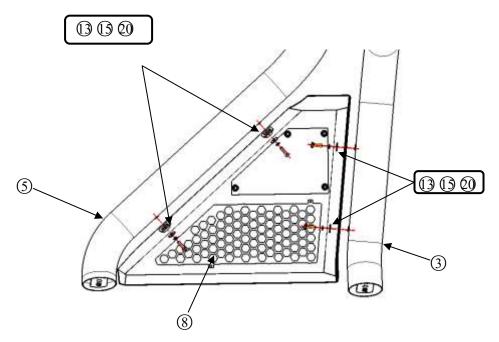


Step 4: After the preceding components are preinstalled, connect the side tube and middle tube with standard part ②. (To adjust tubes to appropriate position, lock tighten all accessories except standard part ②) PS: These adjustable holes can control the width of roll bar.

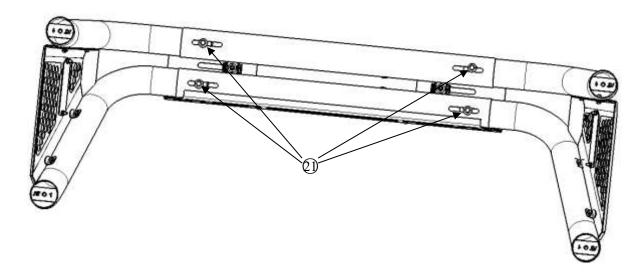


Step 5: Put 3 pcs 29 T bolt M10 and 30 10mm Plastic Retainer into the truck rail chute, and then put mounting base on suitable position. Install the mounting base on truck rail with standard parts 30 33, as the following picture shown.

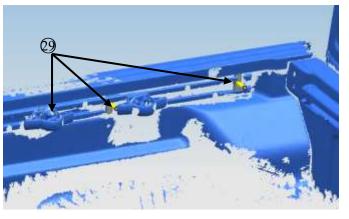


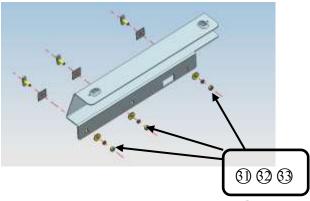

Step 6: Install the roll bar, mounting base and roll bar gum covers with standard part 3.

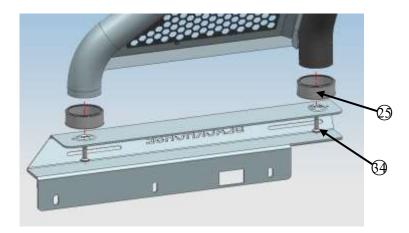

Step 7: Install the front and rear end cover with standard part (3), lock tighten all standard parts. Complete installation.

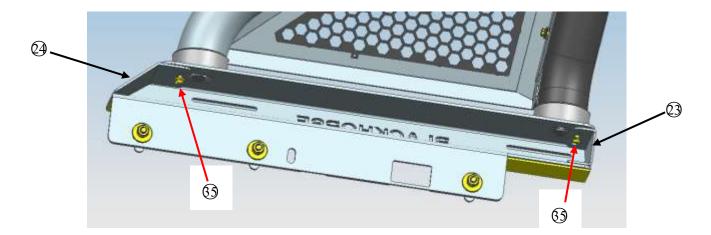

Black Horse Off Road 39 St Mary's Place Freeport NY11520 Tel: 1(866) 926 2867 www.blackhorseoffroad.com



## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.