




TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS


**MODULAR RUGGED GRILLE GUARD FOR
2017-2021 FORD F250/350/450/550 SUPER DUTY
PART# RU-FOF217-B**

PARTS LIST:

1	Main Body	1	Allen Wrench S=2.5
1	Driver/Left Brush Guard	1	Allen Wrench S=5
1	Passenger/Right Brush Guard	18	8mm x 24mm OD x 2mm Flat Washer
2	LED lamp Bracket	10	8mm x 25mm Button Head Allen Screws
1	Driver/Left Frame Mounting Bracket	8	8mm Nylon Lock Nuts
1	Passenger/Right Frame Mounting Bracket	16	12mm x 32mm OD x 3mm Flat Washers
2	Spacer Plates(2017-19 models only)	8	12mm Hex Nuts
1	Driver/Left Lower Mounting Bracket	8	12mm Lock Washers
1	Passenger/Right Lower Mounting Bracket	8	12mm x 35mm Hex Bolts
2	12mm Plastic Retainers		

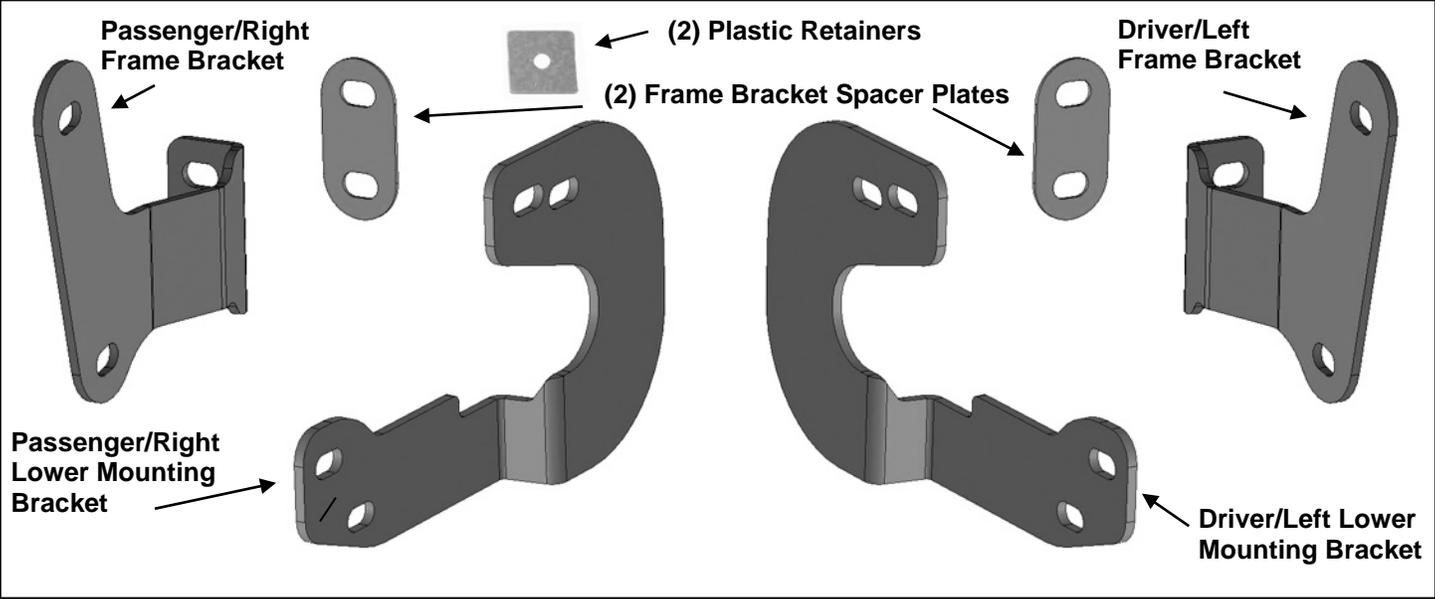


(2)LED lamp Bracket

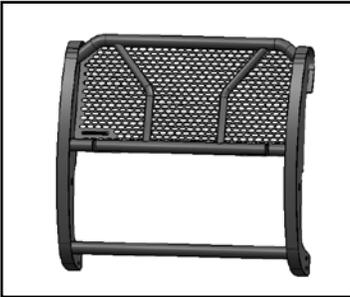

Main Body
For example only




Passenger/Right
Brush Guard
For example only

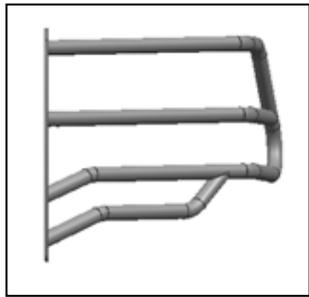


Driver/Left
Brush Guard
For example only

Please Noted:

1. Before you install the Grille Guard on the vehicle, please install the Driver/Left Brush Guard and Passenger/Right Brush Guard on the main body first.
2. Before you install the LED Lamp on the main body please install the LED Lamp Bracket first.
3. If you are not going to install a LED Lamp, the LED Lamp Bracket installation is unnecessary. For main body installation follow the instruction as bellow.

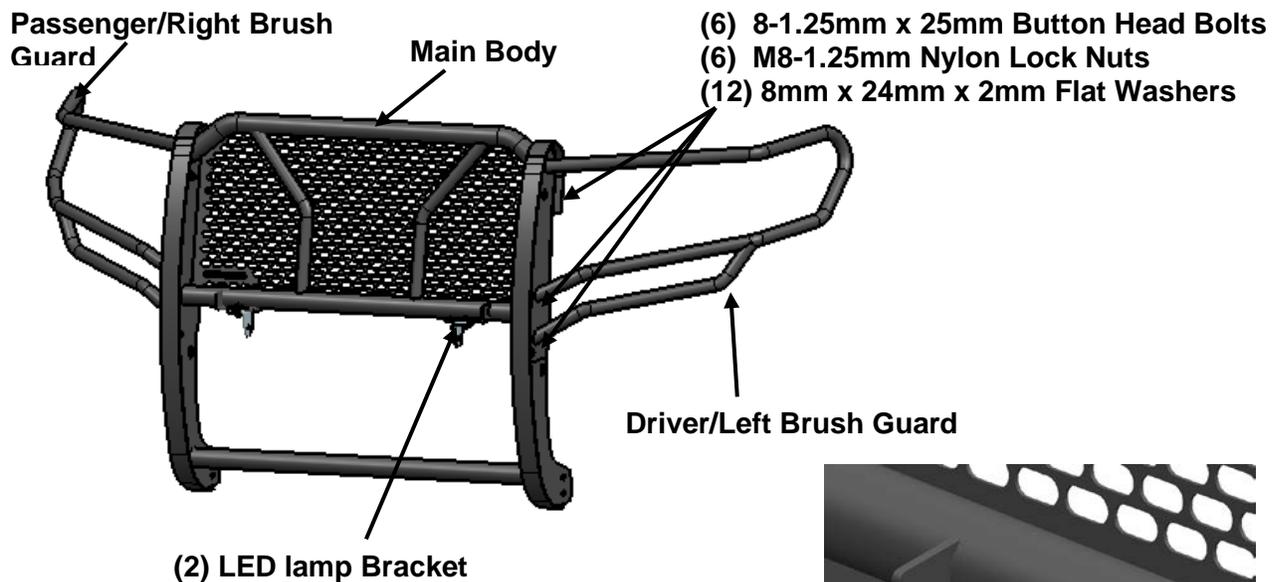

- (2) 8-1.25mm x 25mm Button Head Bolts
(2) M8-1.25mm Nylon Lock Nuts
(4) 8mm x 24mm x 2mm Flat Washers

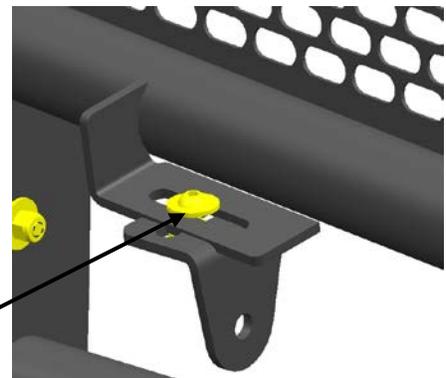



PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED TO AVOID POSSIBLE INJURY OR DAMAGE TO THE VEHICLE. CUTTING IS REQUIRED.

1. Starting at the front-driver side of the front bumper, remove the plastic cover, (if equipped), covering the bumper bolts on both sides of the tow hook, **(Figure 1)**. Remove the (2) outer bumper bolts, **(Figures 2 & 3)**. **IMPORTANT:** Do not remove the inner bumper bolts or the bumper may fall. Only remove the outer bumper bolts. **NOTE:** Cover cannot be reinstalled.
2. Select the driver side Frame Bracket. Determine procedure for your model year.
2017-19 models only:
 - a. Select (1) Spacer Plate, **(Figure 4)**. Place the Spacer over the holes for the bumper bolts, between the bumper and the Bracket.
 - b. Reuse the factory bumper bolts to attach the Frame Bracket to the Spacer and bumper, **(Figure 5)**.**2020 models only:**
 - a. Reuse the factory bumper bolts to attach the Frame Bracket to the bumper, note no Spacers are required, **(Figure 5)**.
3. Repeat **Steps 1 & 2** for passenger side Frame Bracket and Spacer installation.

4. Next, remove the plastic air dam from the bottom of the bumper and place it on a clean, stable work surface, **(Figure 6)**. Note the location and type of all factory hardware for reinstallation.
 5. From under the driver side of the bumper, locate the (2) outer hex nuts attaching the frame extension to the outside of the frame, **(Figure 7)**. Remove (1) of the (2) factory hex nuts, **(Figures 8 & 9)**. Thread (1) Plastic Retainer onto the threaded end of the double bolt plate inside the frame. Remove the second factory nut from the bolt plate. **NOTE:** The Plastic Retainer is designed to help hold the factory double bolt plate in place in the frame and to help with bracket installation. Do not allow the double bolt plate to fall into the frame channel.
 6. Select the driver side Lower Mounting Bracket. Reuse the (2) factory hex nuts to attach the Bracket to the double bolt plate, **(Figure 10)**. Do not tighten hardware at this time.
 7. Repeat **Steps 5 & 6** for passenger side Lower Mounting Bracket installation.
 8. With assistance, position the Grille Guard up to the outside of the Mounting Brackets. Attach the Grille Guard to the Frame Brackets with the included (4) 12mm x 35mm Hex Bolts, (8) 12mm Flat Washers, (4) 12mm Lock Washers and (4) 12mm Hex Nuts, **(Figure 11)**. Do not fully tighten hardware.
 9. Attach the Grille Guard to the Lower Mounting Brackets with the included (4) 12mm x 35mm Hex Bolts, (8) 12mm Flat Washers, (4) 12mm Lock Washers and (4) 12mm Hex Nuts, **(Figure 11)**. Do not tighten hardware at this time.
 10. Level and adjust the Grille Guard and fully tighten the Bracket to vehicle hardware only at this time. Temporarily remove the Grille Guard.
 11. Hold the plastic air dam up in position against the Lower Brackets and mark the location of the Brackets onto the top of the air dam, **(Figure 12)**. Measure the location of the Lower Brackets and transfer these measurements onto the back of the air dam, **(Figures 13 & 14)**. Place the air dam back up to the (2) Lower Mounting Brackets to verify location before cutting. Check all measurements on the vehicle. Once absolutely satisfied, use a hacksaw blade or utility knife to carefully cut (2) openings in air dam. Check fit, trim as necessary and reuse the factory hardware to reinstall air dam over Lower Brackets. **IMPORTANT:** On the “tall” air dam only, do not cut through the top or bottom edge of the air dam, **(Figure 13)**. **NOTE:** It may be necessary to loosen or temporarily remove the Lower Mounting Brackets only to reinstall the air dam.
 12. Reinstall the Lower Brackets through the air dam if removed.
 13. Reinstall the Grille Guard as described in **Steps 8 & 9**. Level and adjust Grille Guard and fully tighten all hardware. Reinstall the license plate and bracket.
 14. On models with grille mounted camera, use included 2.5mm Wrench to remove center screen from Grille Guard, **(Figure 15)**.
 15. Do periodic inspections to the installation to make sure that all hardware is secure and tight.
- To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.
- For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Grille Guard.
- For gloss black finishes:** Mild soap may be used to clean the Grille Guard.

Driver/left Side Installation Pictured

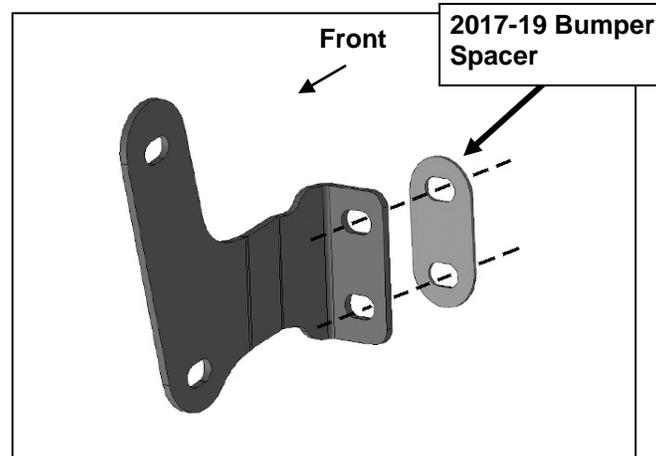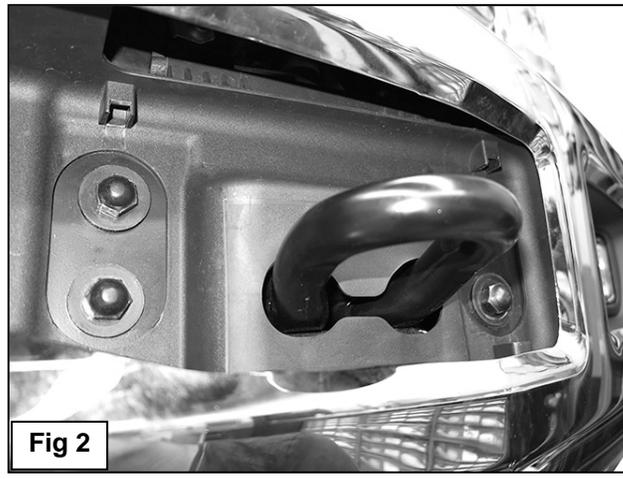

(Fig 4) On 2017-19 models only, attach driver/left Frame Bracket to Spacer and bumper. Do not install Bracket without Spacer on 2017-19 model years

Driver/left Side Installation Pictured



(Fig 5) Reuse factory bumper bolts to attach driver/left Frame Bracket to Spacer and bumper




(Fig 6) Remove plastic air dam from bumper




(Fig 7) Driver/left frame extension pictured

Remove (1) nut, thread (1) 12mm Plastic Retainer onto threaded end before removing remaining hex nut

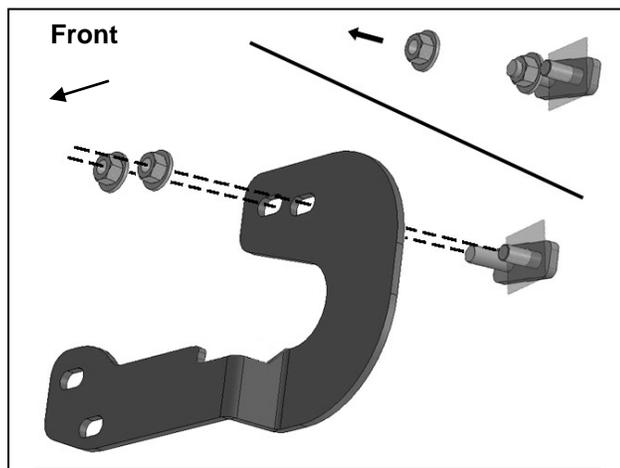


(Fig 8) Driver/left Lower Bracket illustrated. Reuse factory hardware to attach Bracket to side of frame and frame extension

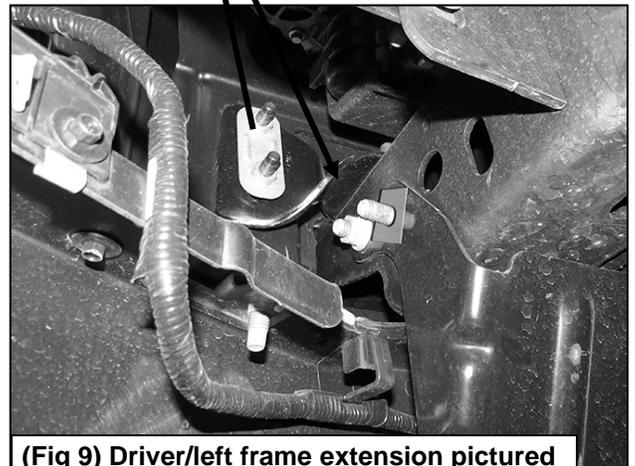



(Fig 9) Driver/left frame extension pictured

Driver/left Side Installation Pictured

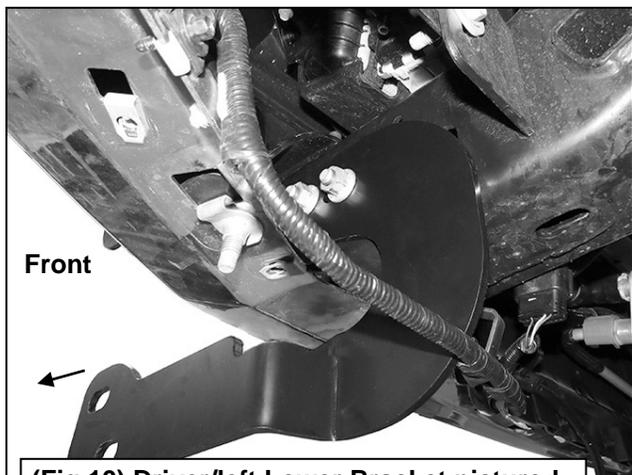

(Fig 10) Driver/left Lower Bracket pictured. Reuse factory hardware to attach Bracket to side of frame and frame extension


- (4) 12mm x 35mm Hex Bolts**
- (8) 12mm Flat Washers**
- (4) 12mm Lock Washers**
- (4) 12mm Hex Nuts**

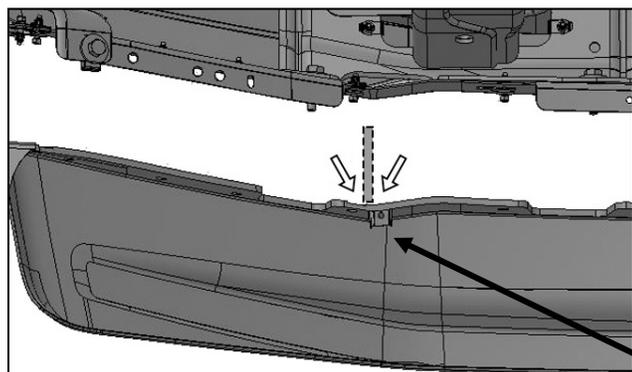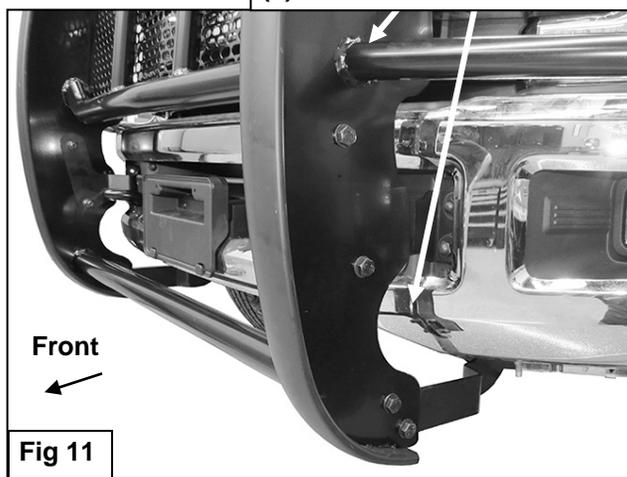

(Fig 12) Driver side-back of air dam illustrated


Hold air dam up against bottom of Brackets (dashed line for reference). Mark location of Bracket onto top of air dam (arrows)

Driver/left Side Installation Pictured

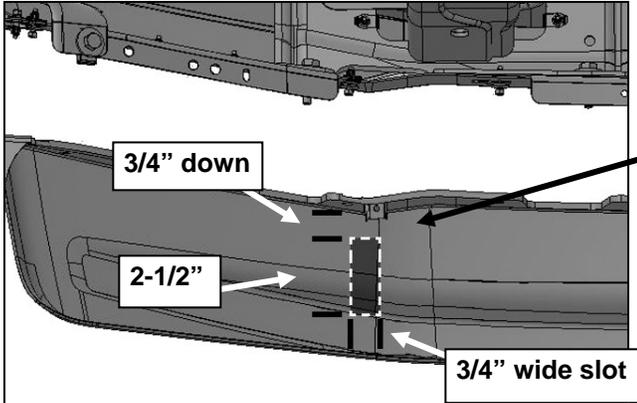


Do not cut through the top or bottom edges of the "tall" air dam. Only remove enough material to clear the Brackets

(Fig 13) Driver side-back of "tall" STD air dam illustrated. All measurements are for reference and example only, check all measurements before cutting air dam.

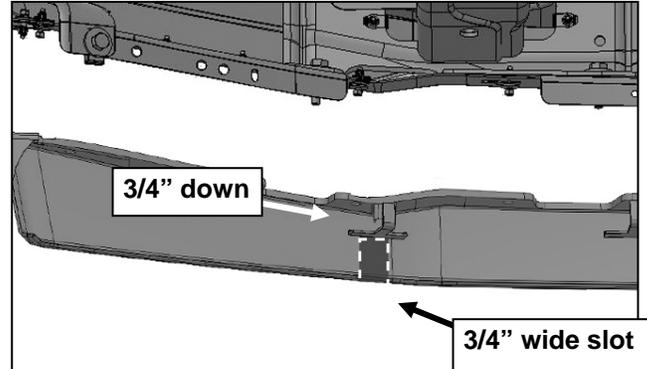

(Fig 14) Driver side-back of "short" air dam illustrated. All measurements are for reference and example only, check all measurements before cutting air dam.

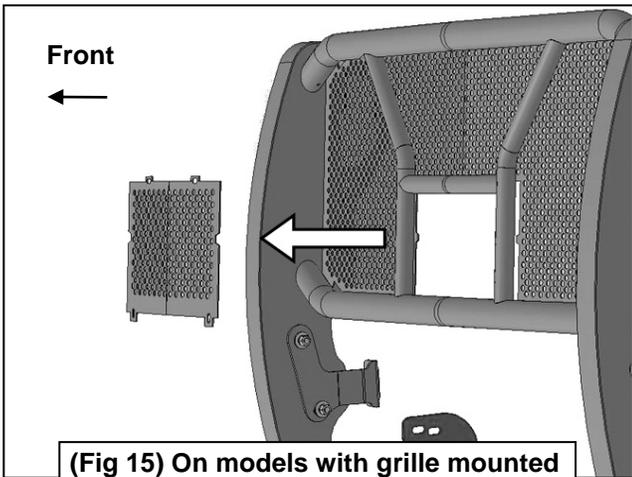

(Fig 15) On models with grille mounted camera, remove center screen

