

INSTALLATION INSTRUCTIONS

SILVER TRANSPORTER RUNNING BAORD FOR 05-20 TACOMA DOUBLE CAB PART # TR-T585S

Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	2	Front Bracket (L/R)	2	2	Middle Bracket (L/R)
3	2	Rear Bracket (L/R)	4	6	T Bolt M6
(5)	12	Lock Washer D6	6	12	Flat Washer D6 (6x22x2mm)
7	12	Hex Nut M6	8	12	Hex Bolt M8_30

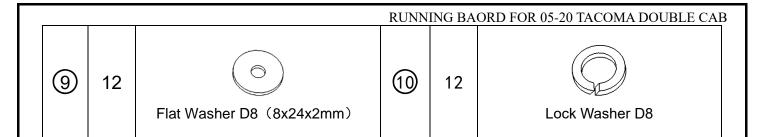


Installation Figure:

Front Bracket Installation figure:

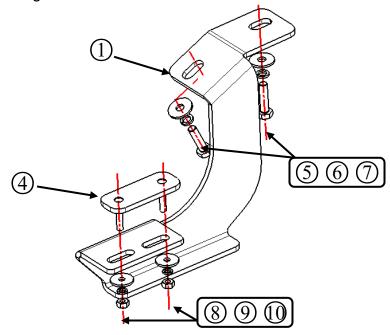


Middle Bracket Installation figure:

Rear Bracket Installation figure:

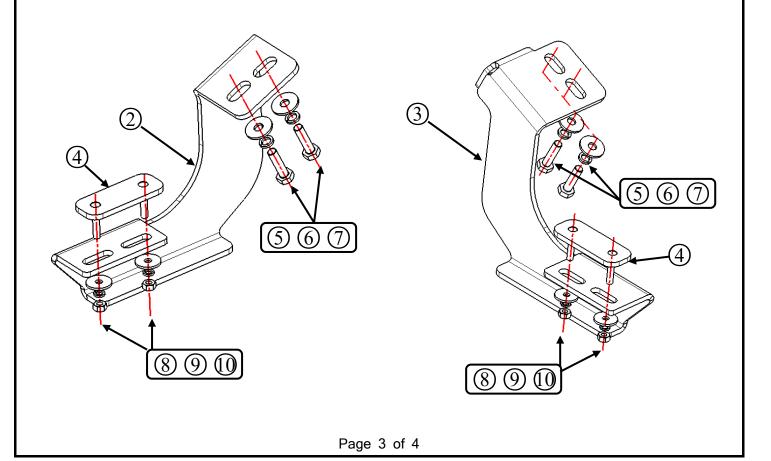


Installation Steps


STEP1: Verify all parts are present.

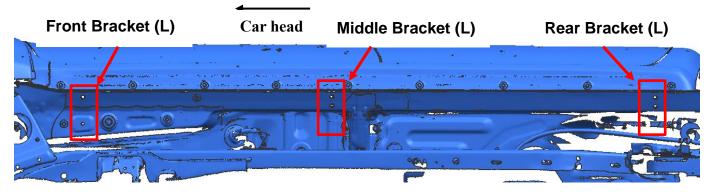

STEP2: Find the corresponding bracket installation positions under the vehicle as below figures shown. (below figures are show the left side of the vehicle)

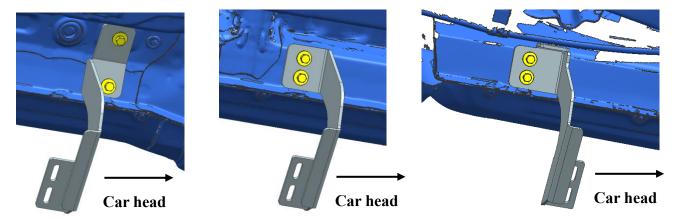

STEP3: Fix the brackets on the corresponding position with existing T bolts on the running board according to the Installation Figure. (Do not need to tighten the standard parts) Place the running board on the brackets to install.

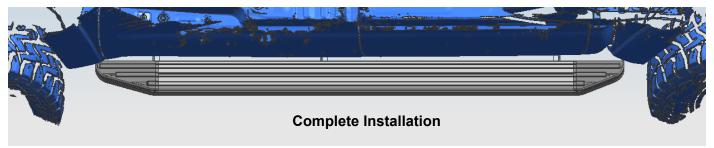

STEP4: Adjust the running board to the appropriate position, then tighten up all the standard parts. The installation position and manner of the left side brackets are the same as that of the right side.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.