

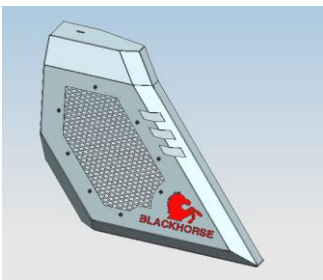
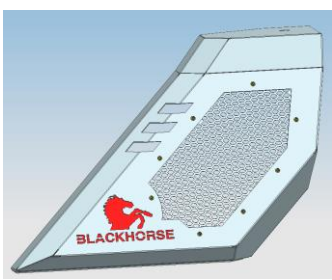
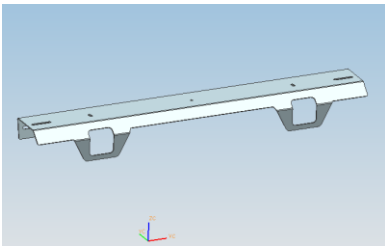
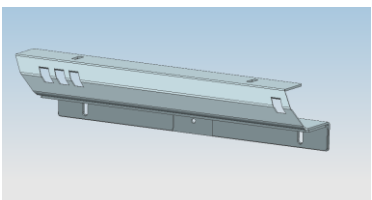
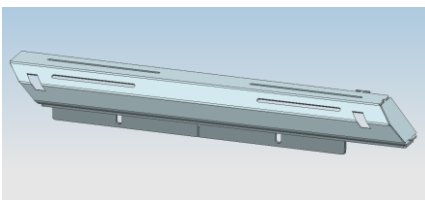
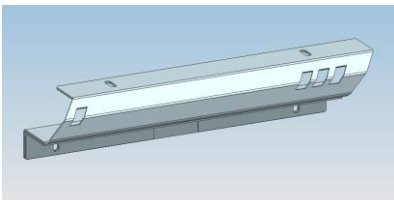
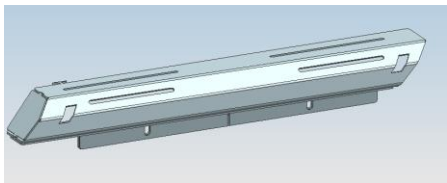
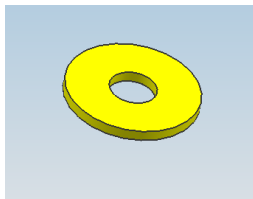
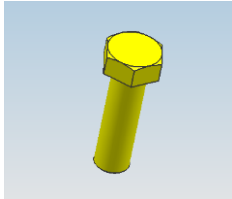
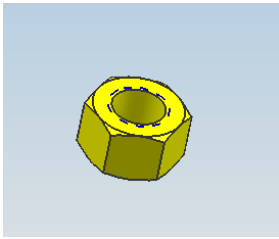
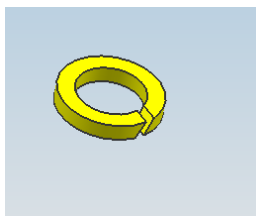


INSTALLATION INSTRUCTIONS










**VIGOR ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015) (WITH
ADJUSTABLE SQUARE LIGHT)**


PART # VIRB02B

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Left installation part	②	1	 Right installation part	③	1	 Connection plate
④	1	 Front bracket (L)	⑤	1	 Rear bracket (L)	⑥	1	 Front bracket (R)
⑦	1	 Rear bracket (R)	⑧	16	 Flat washer D12	⑨	8	 Hex bolt M12x40
⑩	8	 Hex nut M12	⑪	8	 Spring washer D12	⑫	6	 Spring washer D8

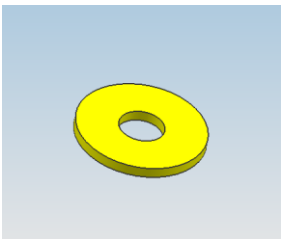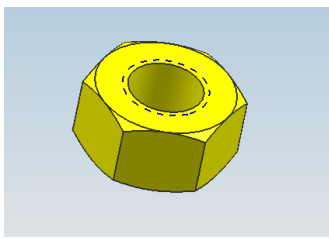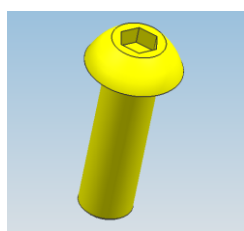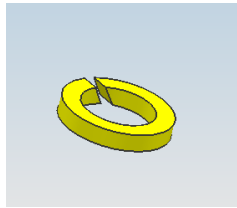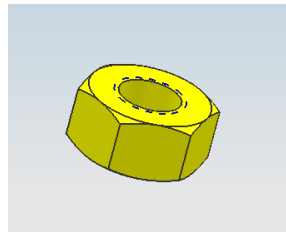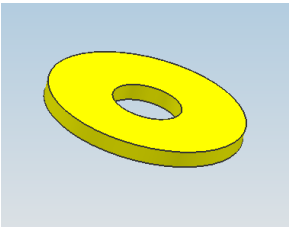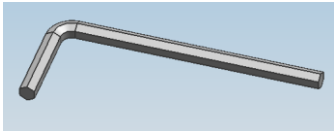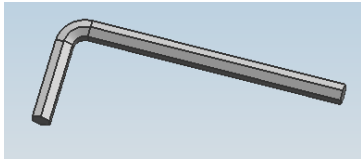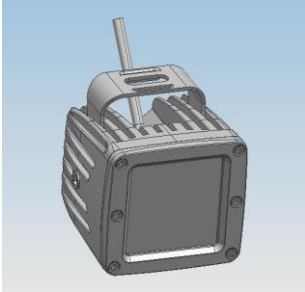VIGOR ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015) (WITH ADJUSTABLE SQUARE LIGHT)


⑬	10		⑭	6		⑮	6	
		Flat washer D8			Hex nut M8			Hex bolt M8_25
⑯	4		⑰	4		⑱	4	
		Hex bolt M10_30			Spring washer D10			Hex nut M10
⑲	8		⑳	1		㉑	1	
		Flat washer D10 (10x30x2.5MM)			Allen wrench S=4			Allen wrench S=5
㉒	1							
		Square LED Light						

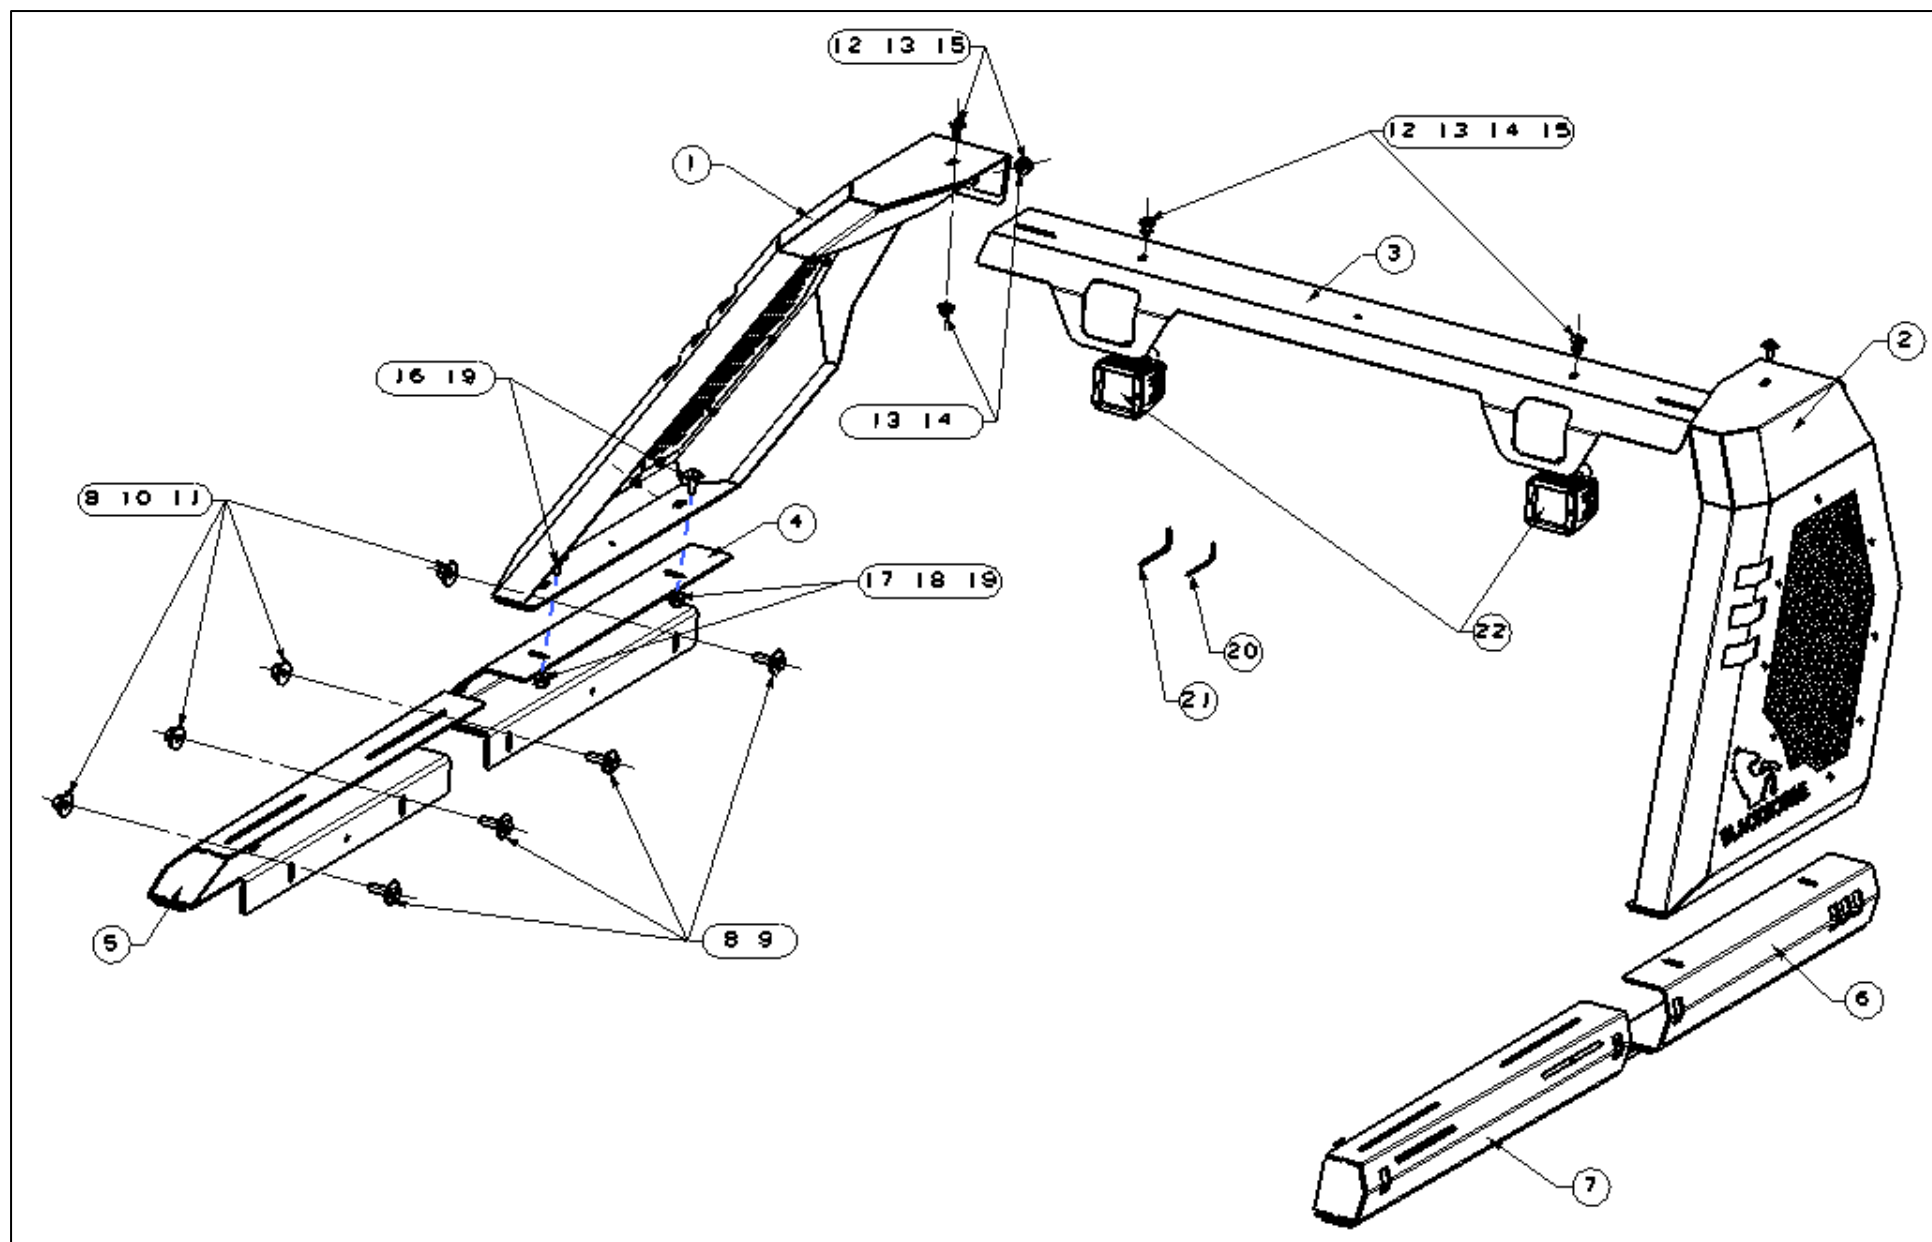Installation Figure:

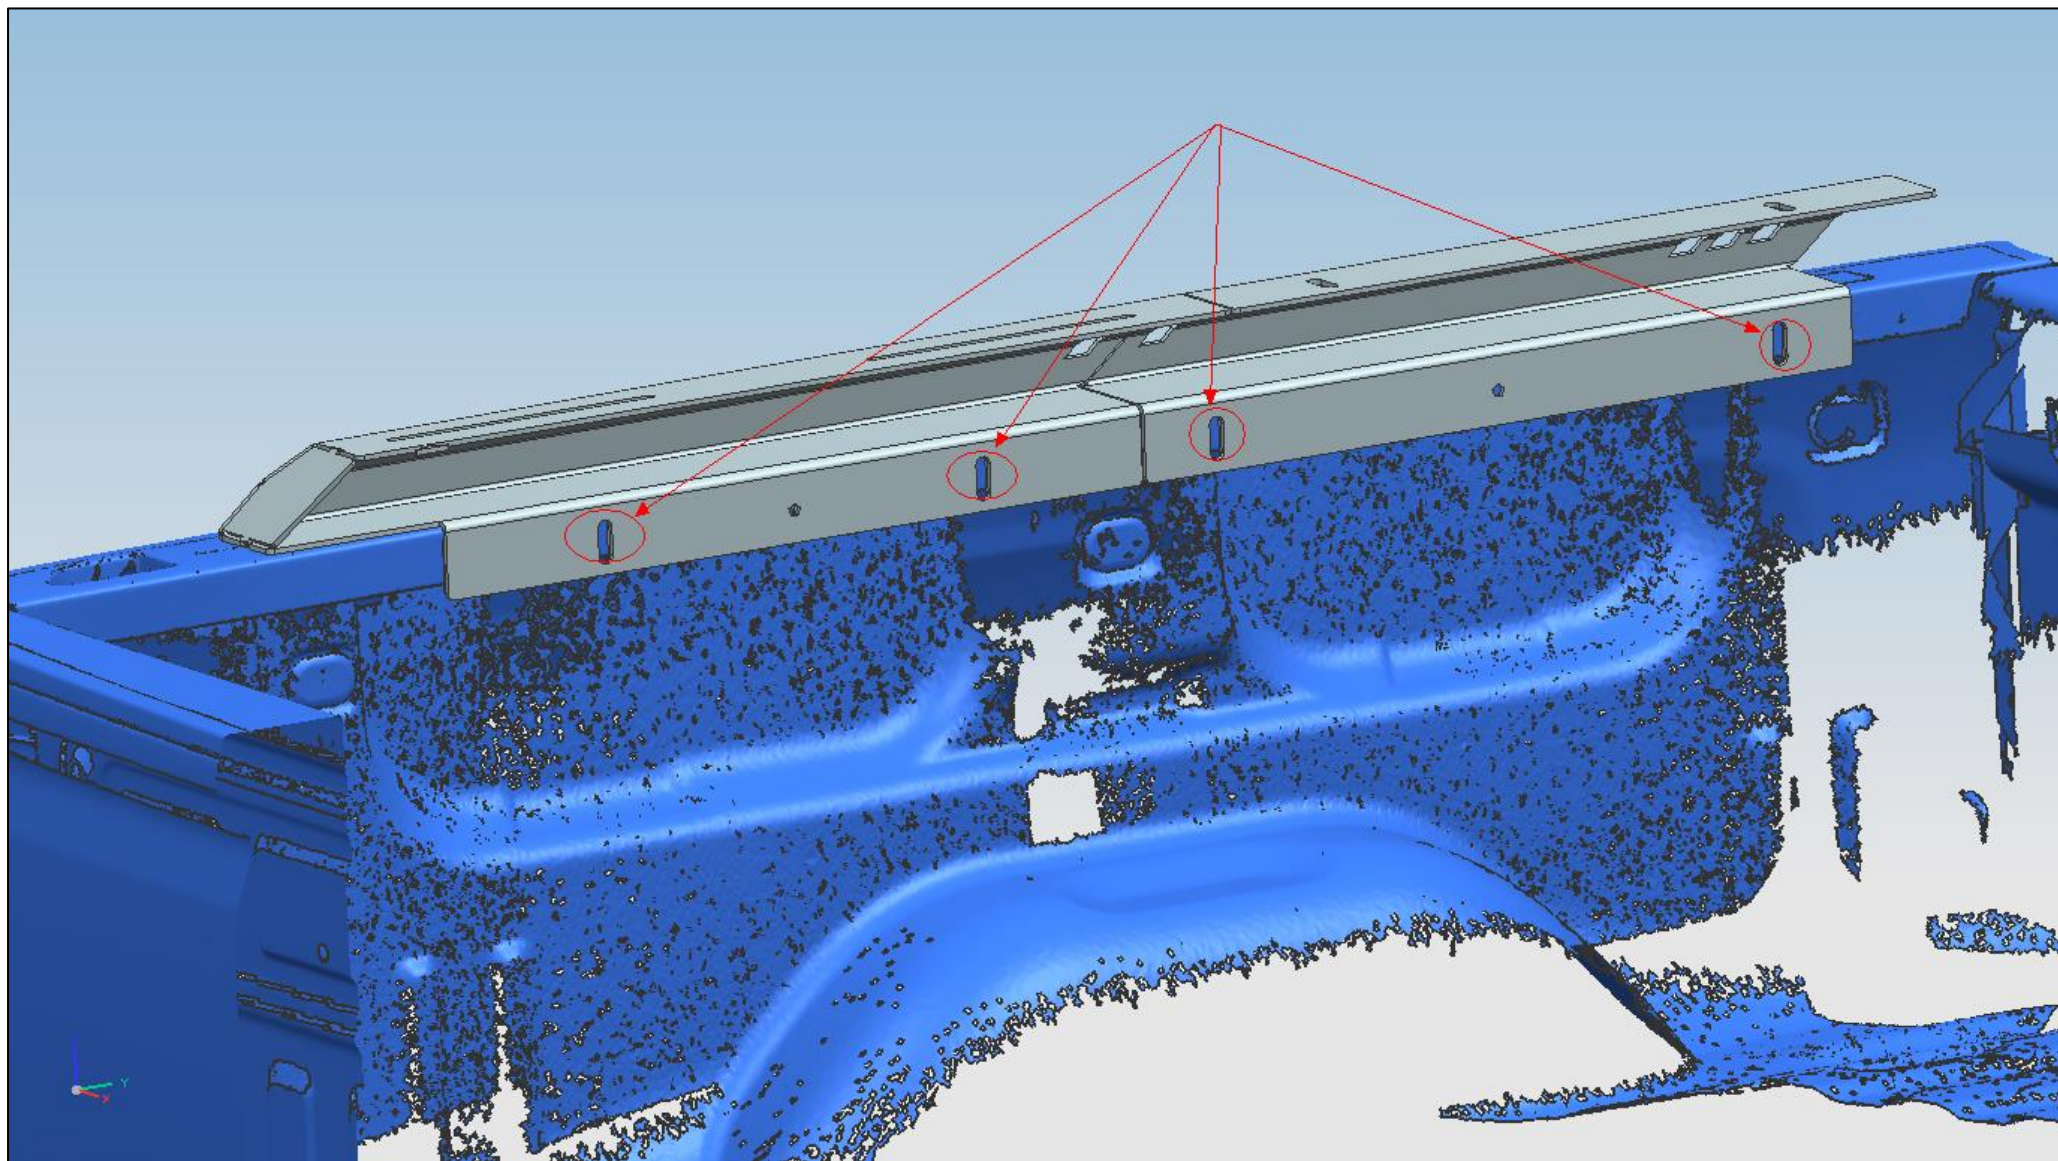
Place the brackets on the truck. Drill the $\phi 12$ size of holes for installing brackets:




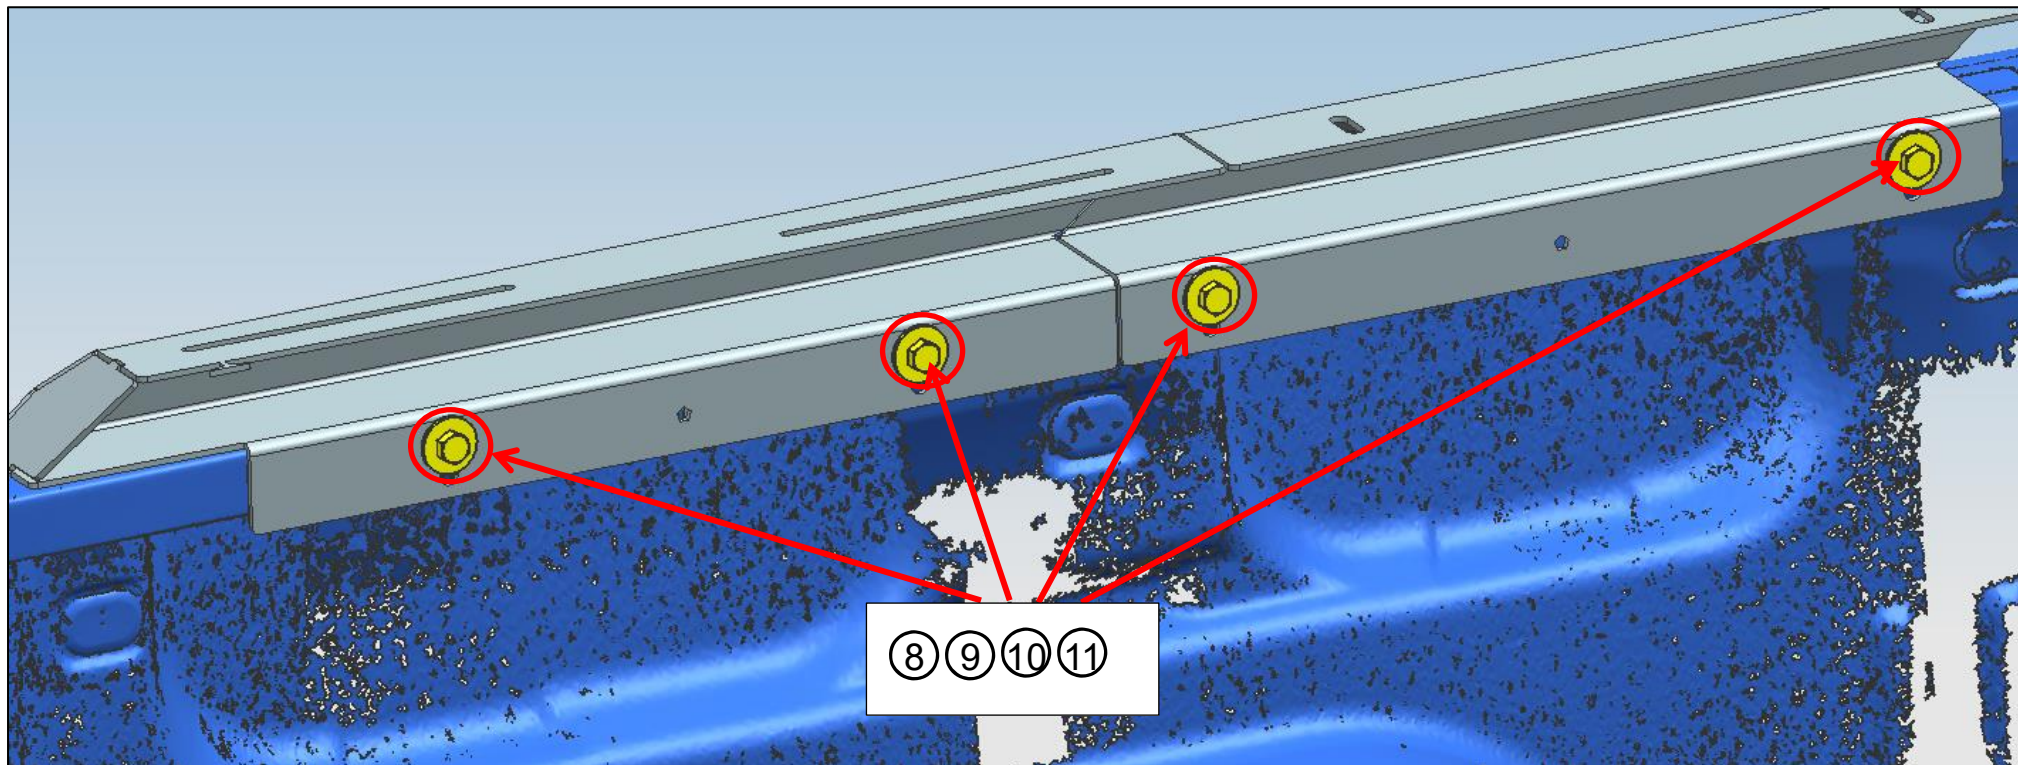Install with ⑧ Flat washer D12, ⑨ Hex bolt M12x40, ⑩ Hex nut M12 and ⑪ Spring washer D12:



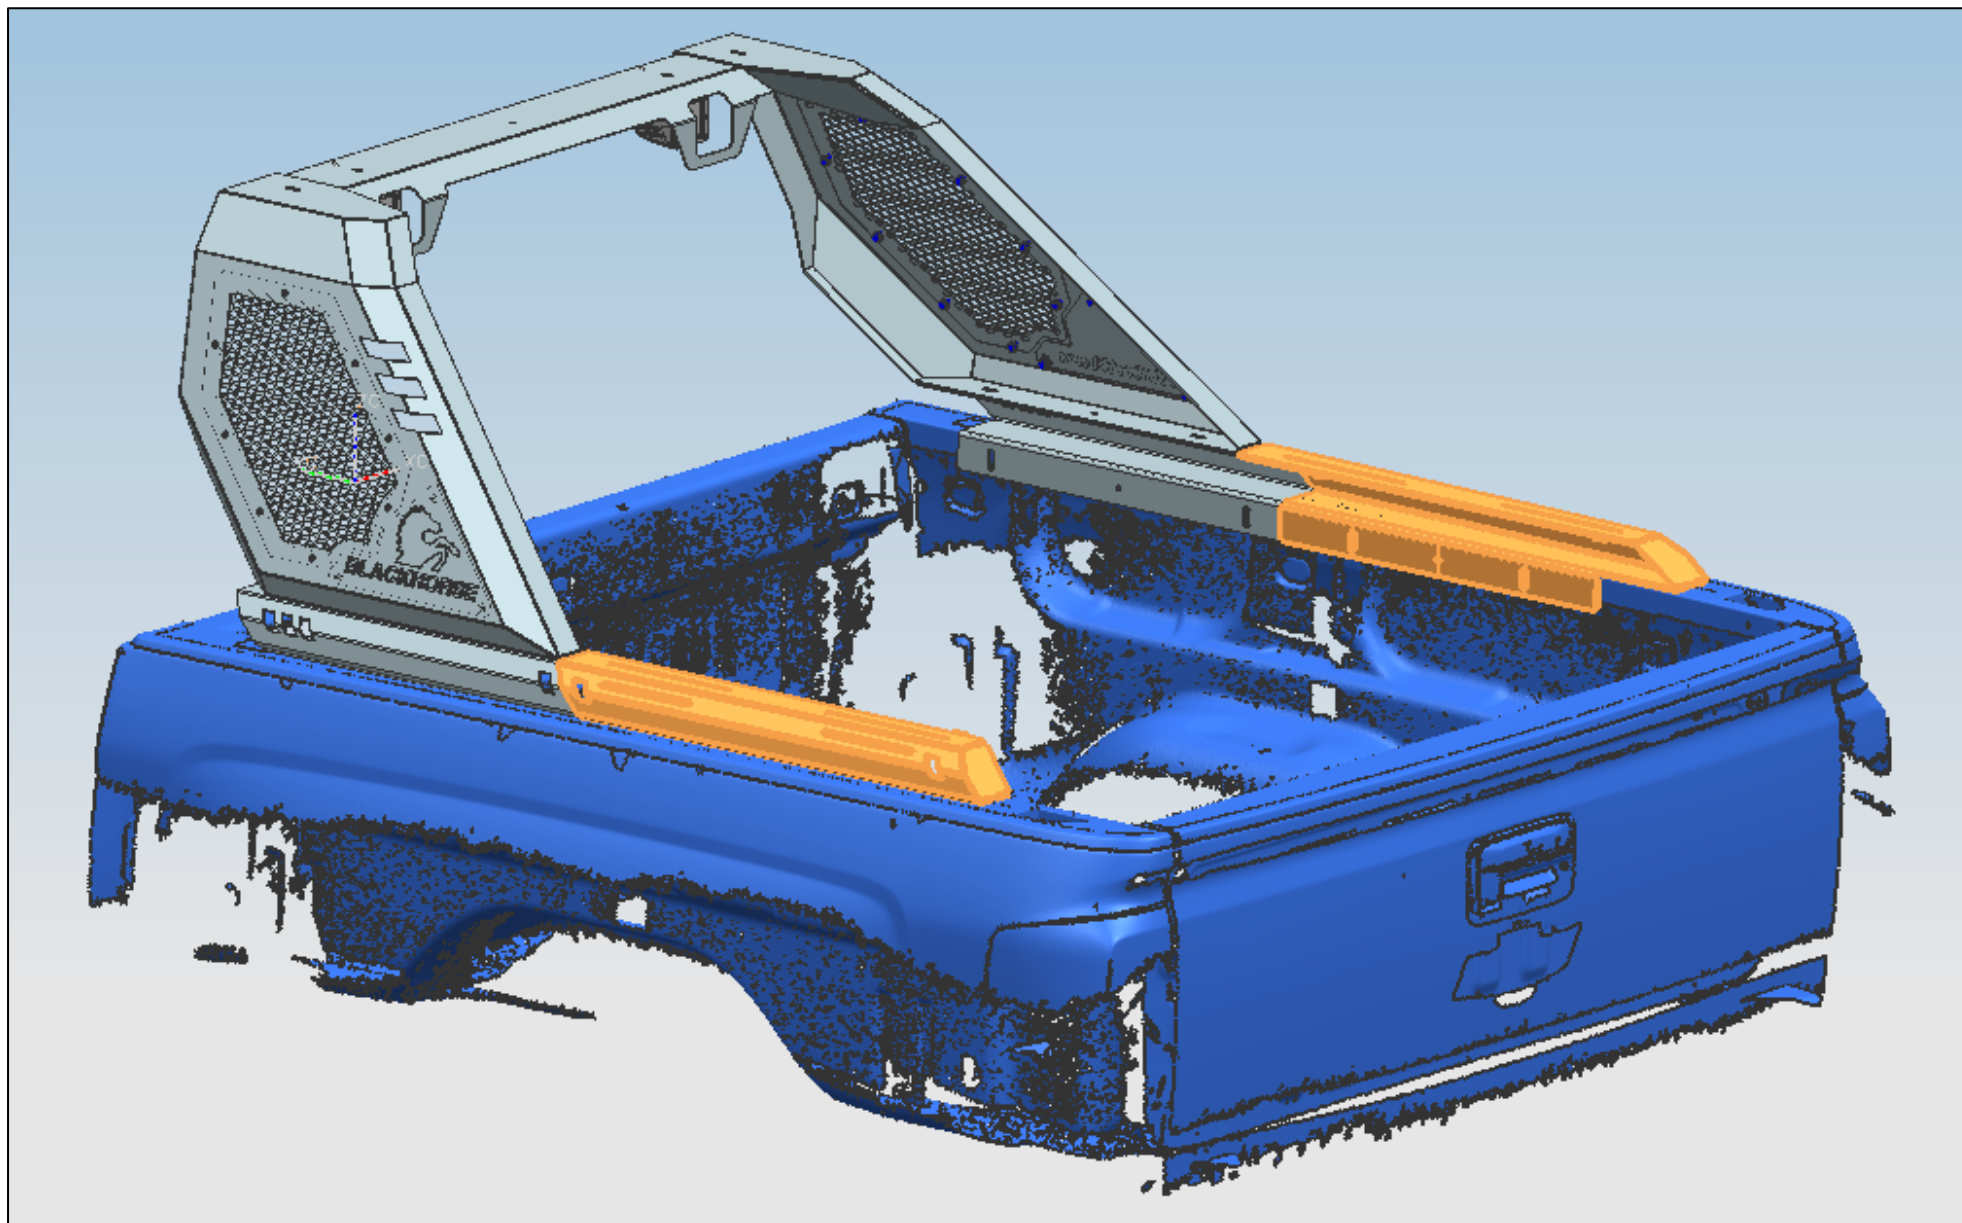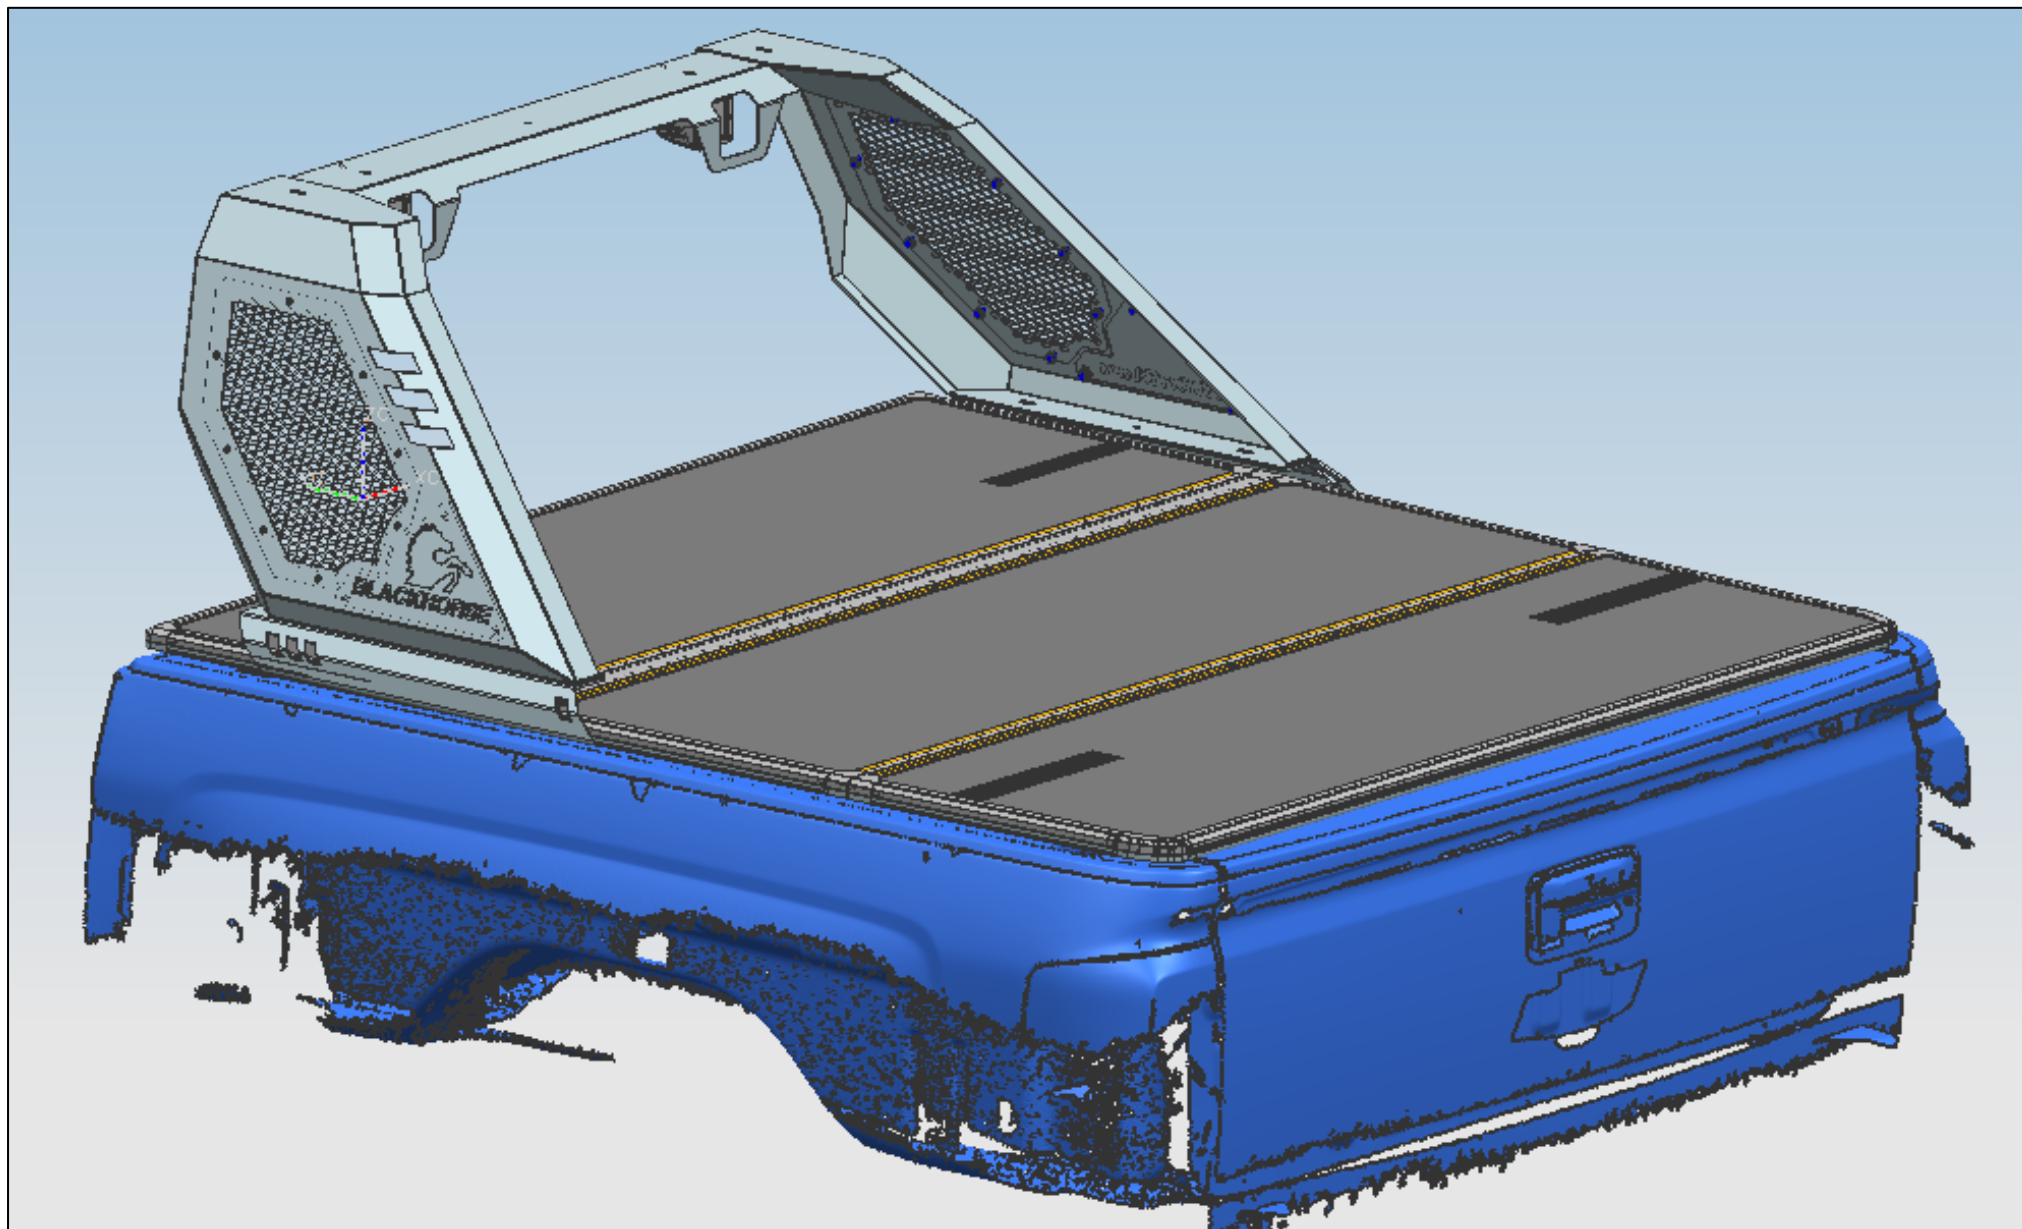
The left and right rear brackets should be removed when installing the tri-fold cover:






INSTALLATION FIGURE:

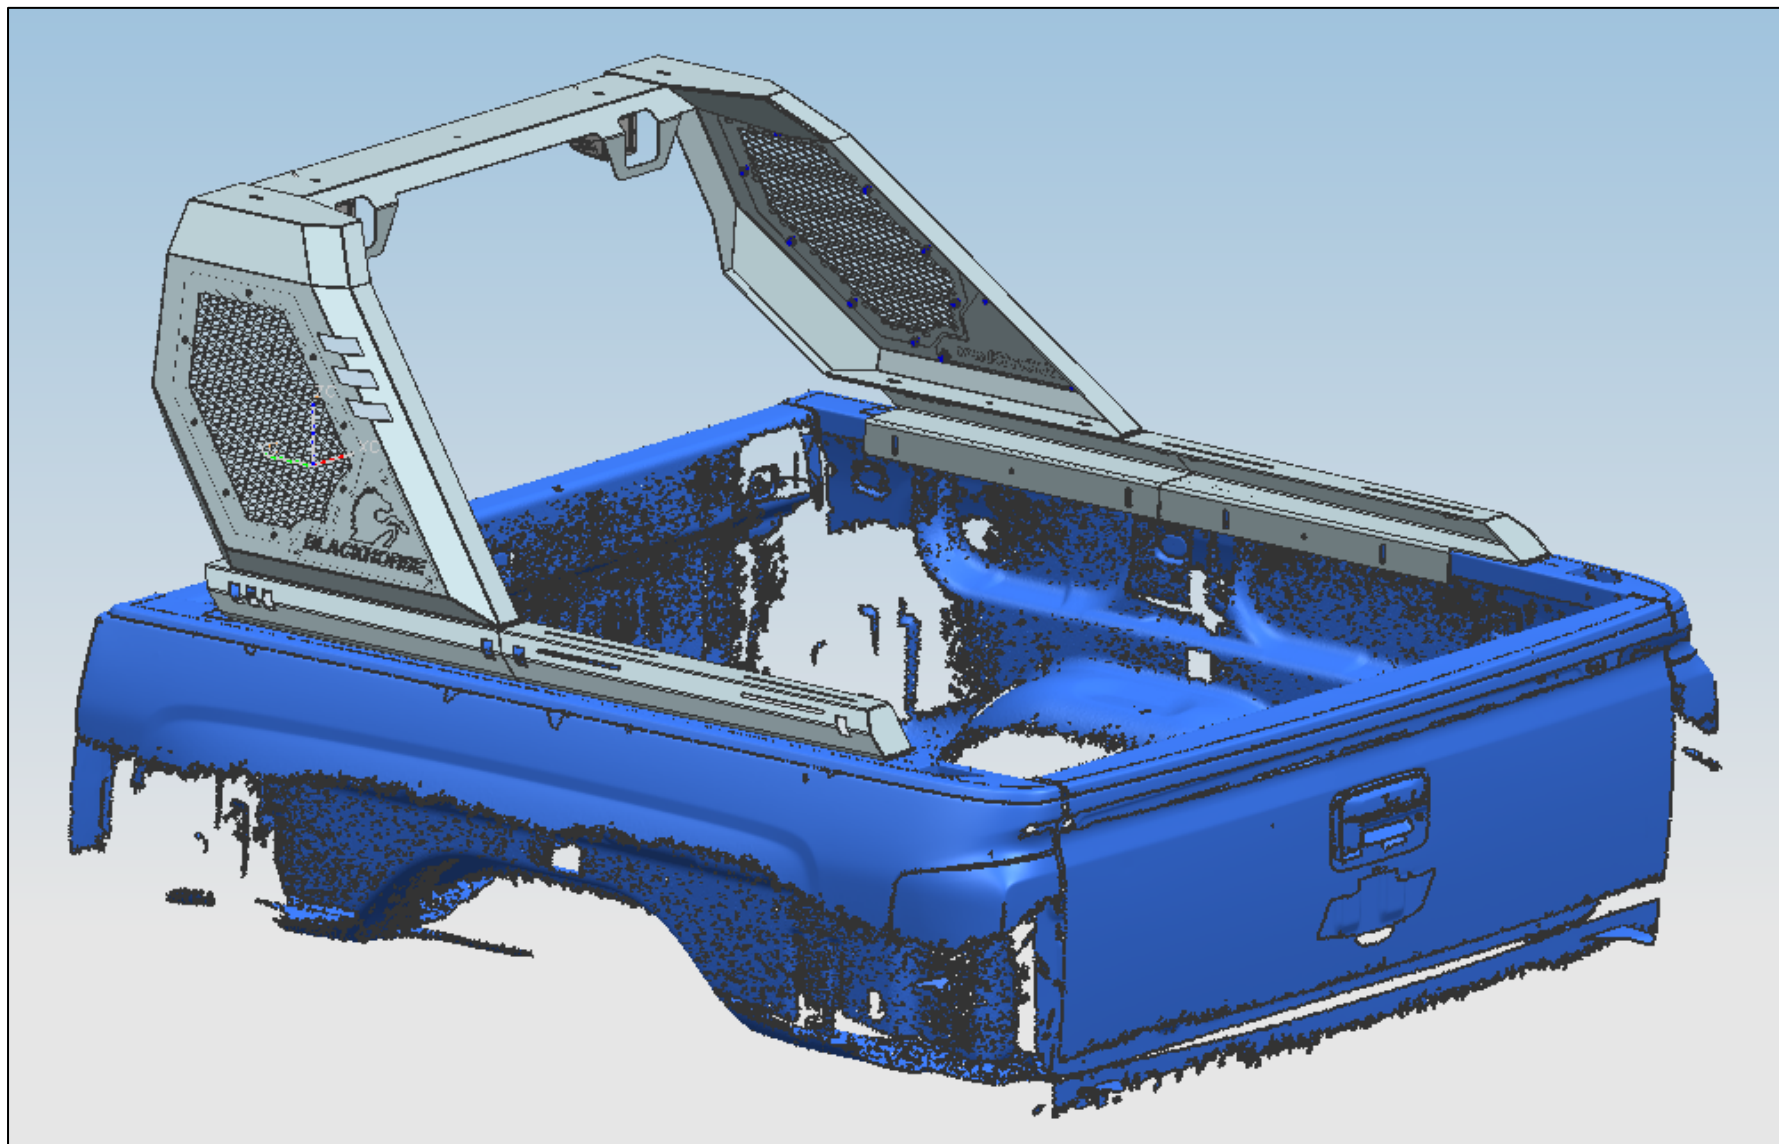
FOR CHERY SILVERADO 13+:



FOR FORD F150 15+:

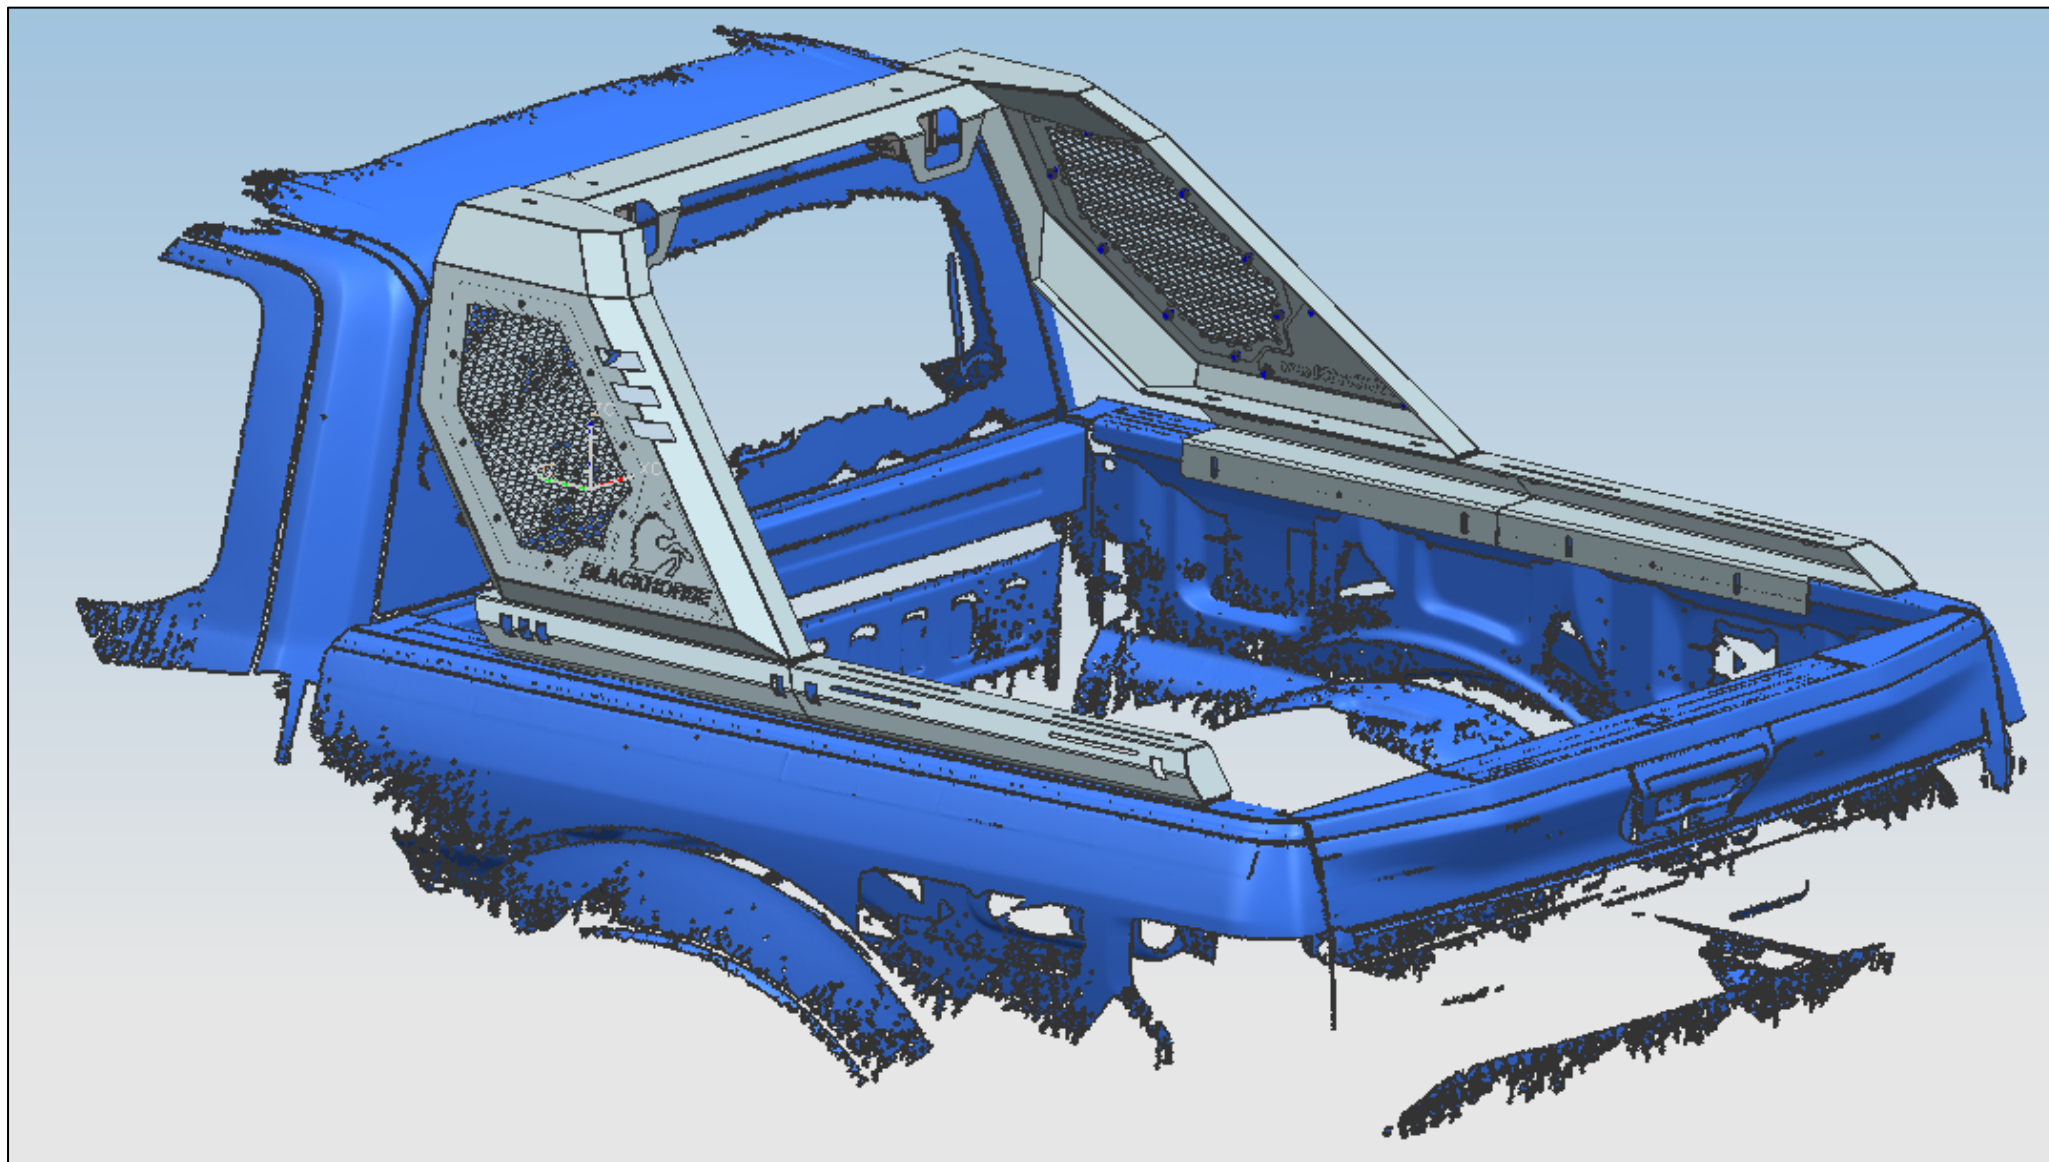

FOR DODGE RAM 13+:

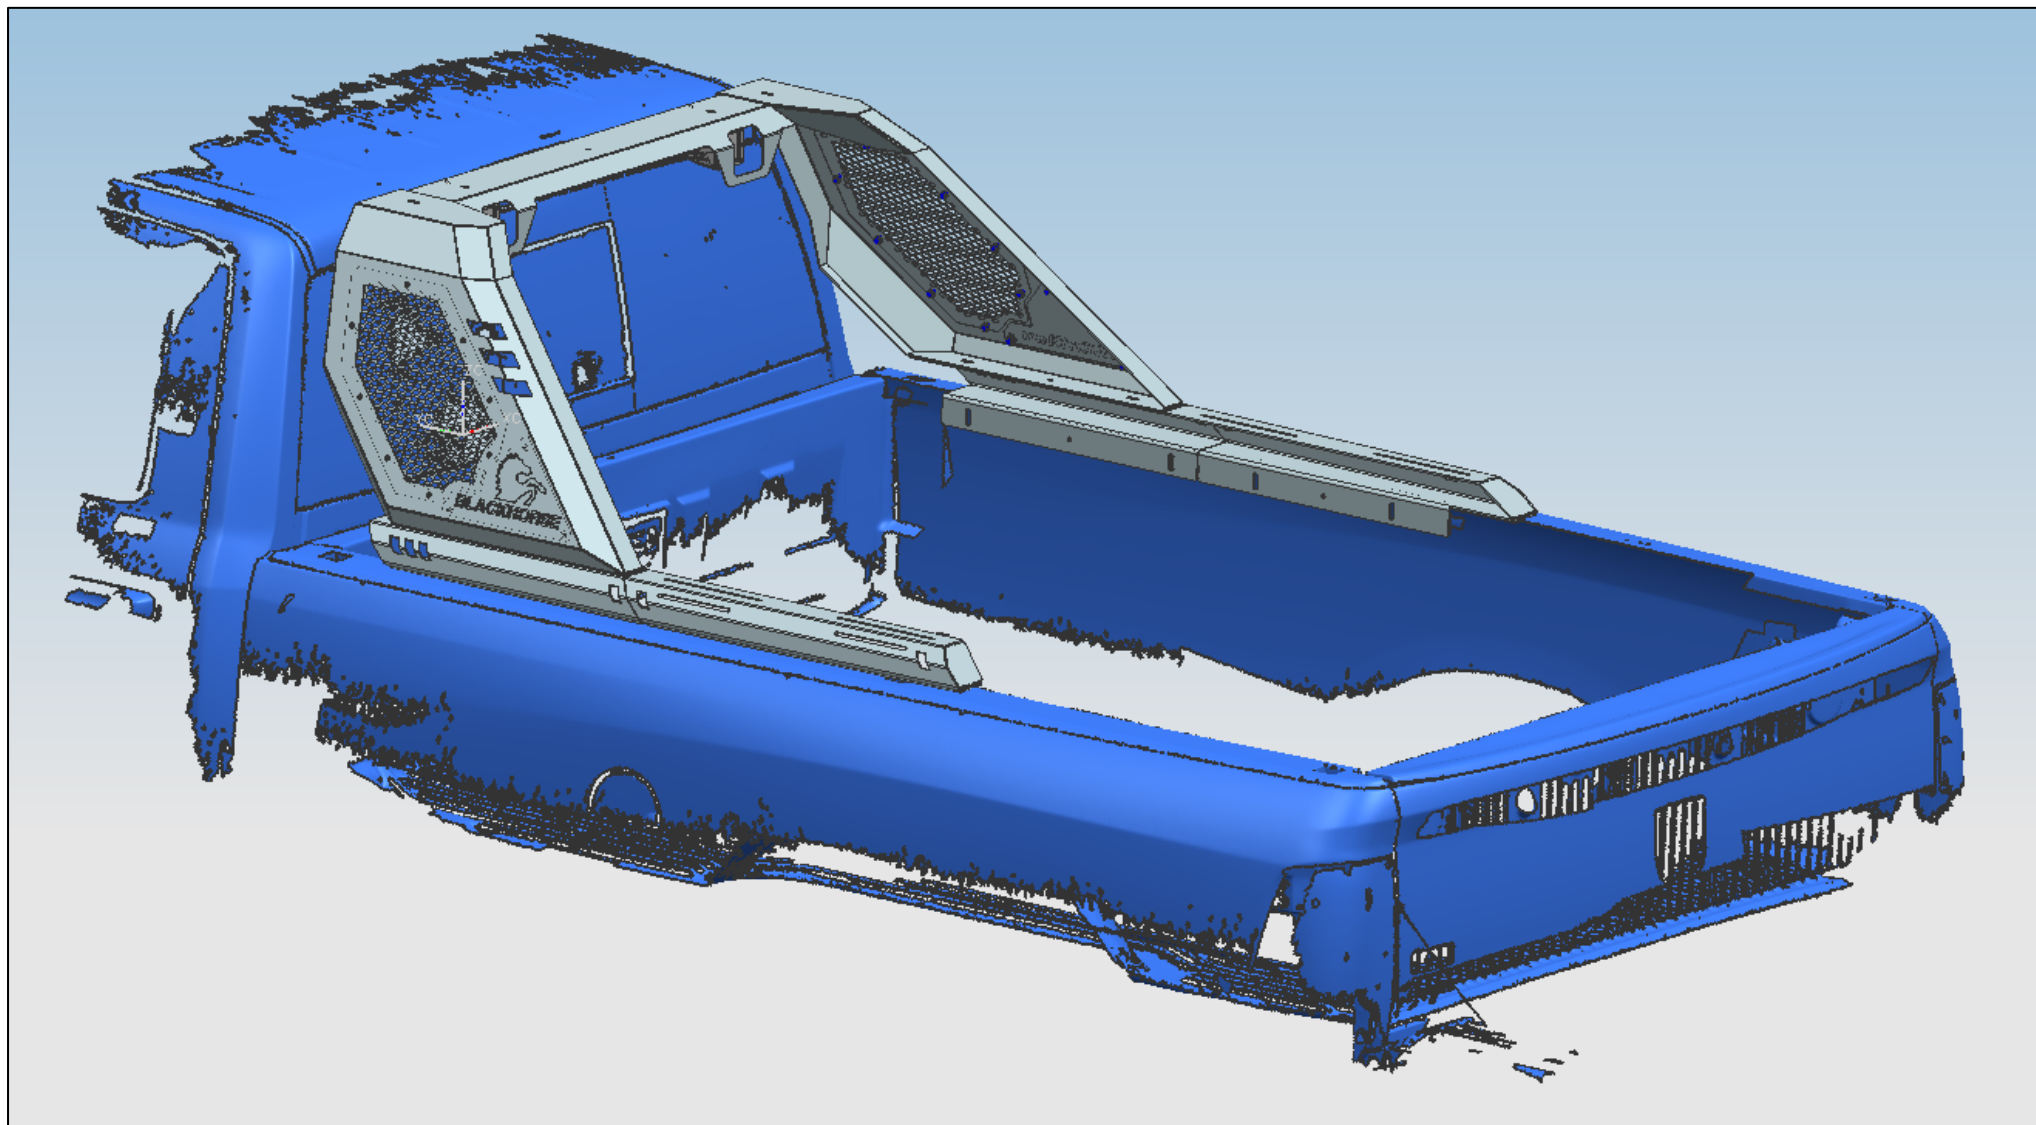

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.