

INSTALLATION INSTRUCTIONS

FOR
2011 2019 Jeep Compass
2007 2016 Jeep Patriot

PART # VO-J167

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts List

NO.	QTY	PICTURE	NO.	QTY	PICTURE			
1	2		2	2				
		Front Bracket (L/R)			Front Mounting Bracket (L/R)			
3	2		4	2				
		Middle Bracket (L/R)			Middle Mounting Bracket (L/R)			
(5)	2	(0) /h	6	2				
		Rear Bracket (L/R)			Rear Mounting Bracket (L/R)			
7	12	Hex Bolt M6_25	8	24	Flat Washer D6 (6x22x2mm)			

9	12	Hex Lock Nut M6	10	6	Hex Bolt M8_35
11)	6		12	6	
		Flat Washer D8 (8x28x3mm)			Spring Washer D8
13	6		14)	12	0
		Hex Bolt M10_30			Flat Washer D10 (10x24x2.2mm)
15	6				
		Hex Lock Nut M10			


Installation Figure:

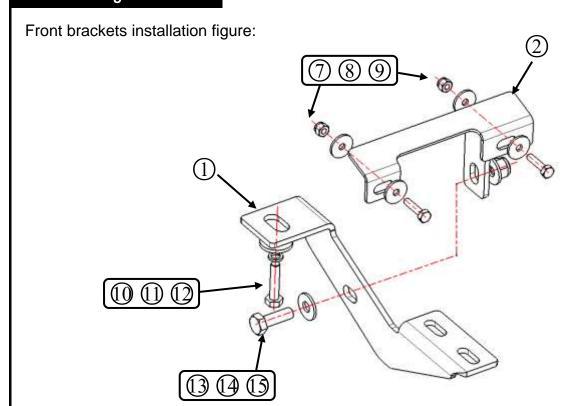

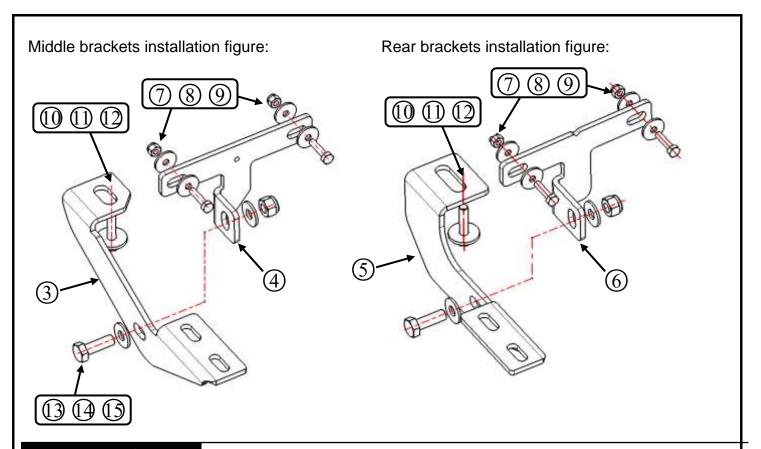

Installation Steps

STEP1: Verify all parts are present.

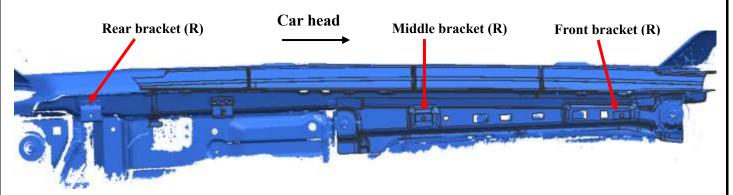

STEP2: Find the corresponding installation position of brackets in the figure (the picture shows the right side of the car).



STEP3: Fix the brackets with standard parts according to the assembly diagram (standard parts do not need to be locked at this time).



STEP4: After the running boards are adjusted to the appropriate position, lock all the standard parts. The installation position and manner of the left side brackets are the same as that of the right side.

NOTE

Any damages a	nd losses	caused by	improper	installation	and	application,	goes	beyond	our	quality
warranty.										